

Rear Door - SuperCab


Removal

NOTICE: The rear door should only be removed and installed to the vehicle at 90° door open position. Detaching and reattaching the rear door at full open (170°) could possibly release an internal spring in the hinge mechanism and therefore disable the hinge function completely.


NOTE: Removal steps in this procedure may contain installation details.

NOTE: LH side shown, RH side similar.

1. Remove the rear body access trim panel.

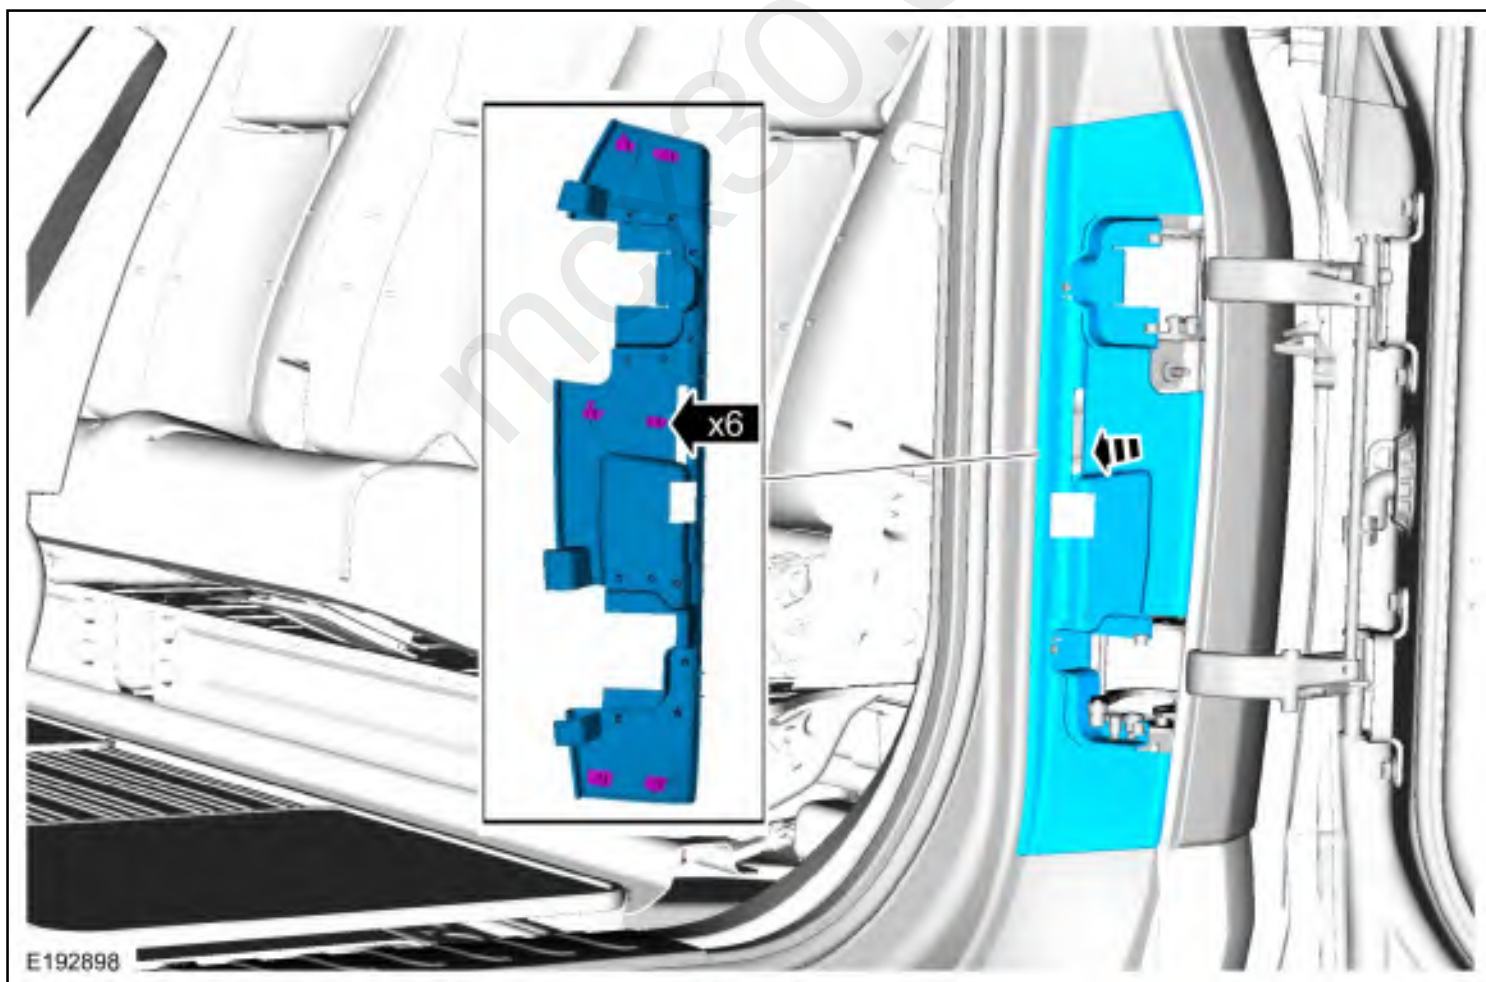

2. Disconnect the rear door electrical connector.

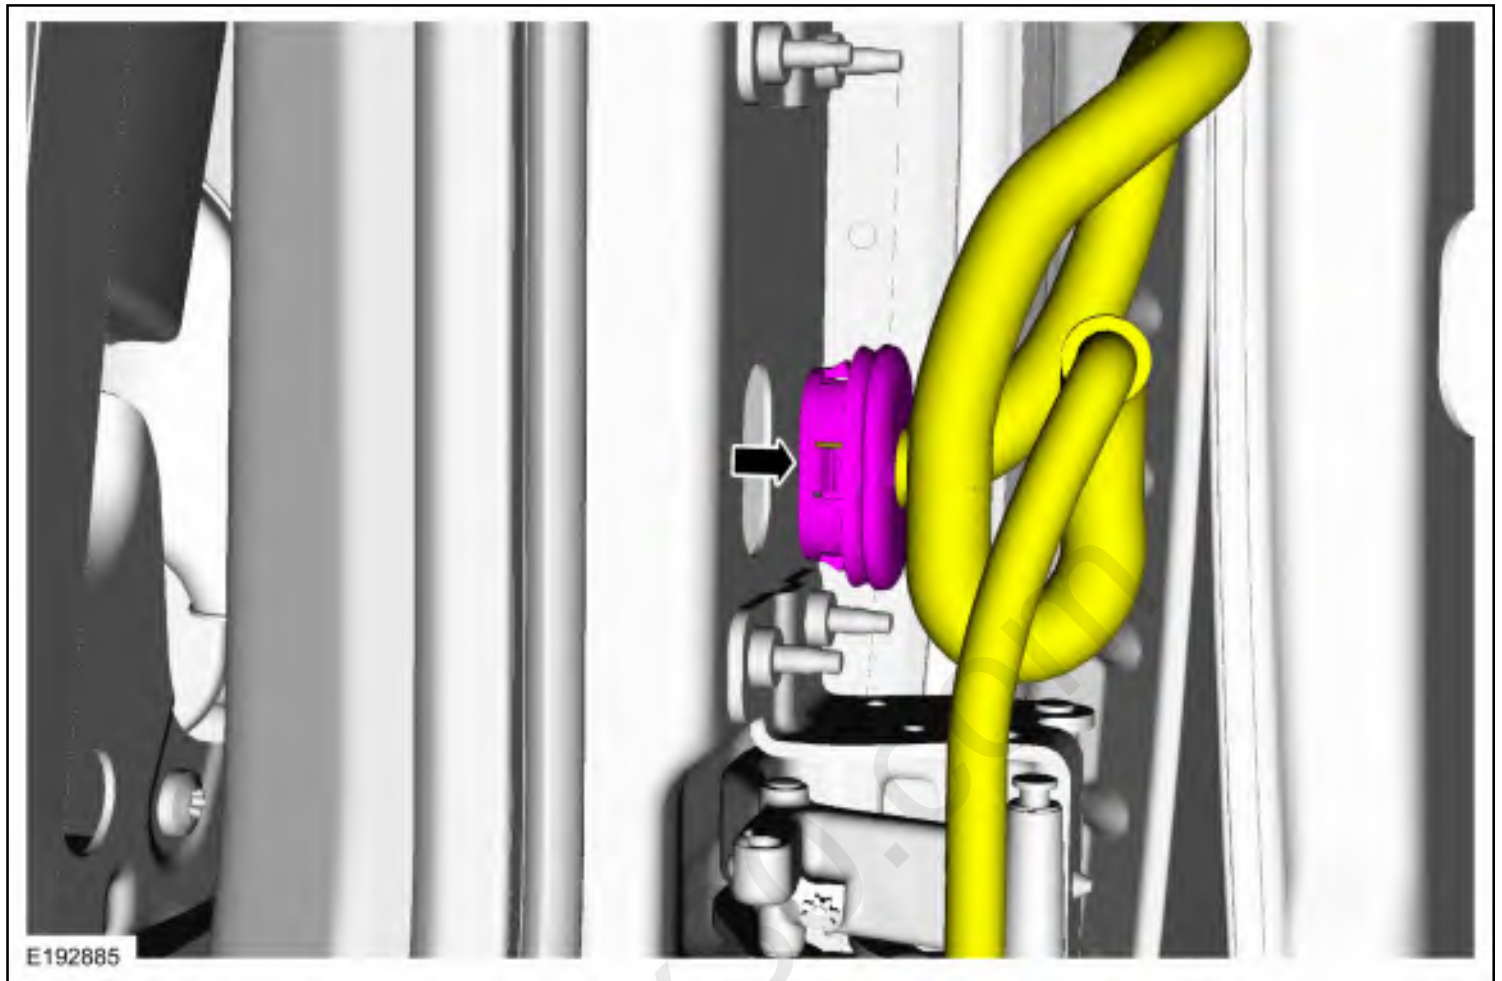


3. **NOTE:** *This step requires the aid of another technician.*

Remove the bolts.

Torque: 20 lb.ft (27.5 Nm)



x4

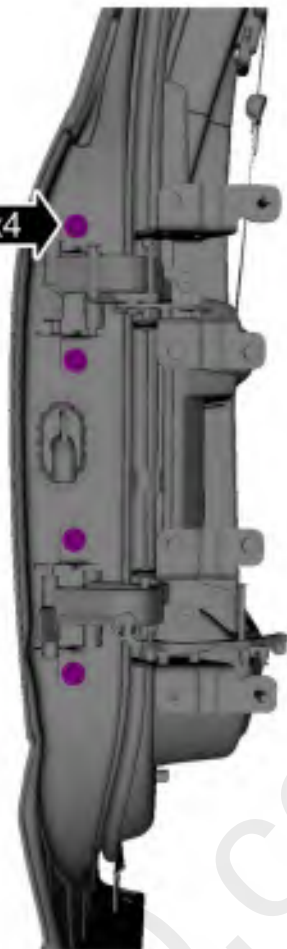

E192886



4. **NOTE:** *This step requires the aid of another technician.*

Remove the door.



Installation

NOTICE: The rear door should only be removed and installed to the vehicle at 90° door open position. Detaching and reattaching the rear door at full open (170°) could possibly release an internal spring in the hinge mechanism and therefore disable the hinge function completely.

1. To install, reverse the removal procedure.
2. Check the door-to-body alignment. Align the door as necessary.
Refer to: [Rear Door Alignment - SuperCab](#) (501-03 Body Closures, General Procedures).