


Fuel Filler Door Assembly


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: [Jacking and Lifting - Overview](#) (100-02 Jacking and Lifting, Description and Operation).
2. Disconnect the battery ground cable.
Refer to: [Battery Disconnect and Connect](#) (414-01 Battery, Mounting and Cables, General Procedures).
3. Remove the fuel filler door.
Refer to: [Fuel Filler Door](#) (501-03 Body Closures, Removal and Installation).
4. Remove the bolt and pull the fuel tank filler pipe from the fuel filler door assembly.
Torque: 133 lb.in (15 Nm)

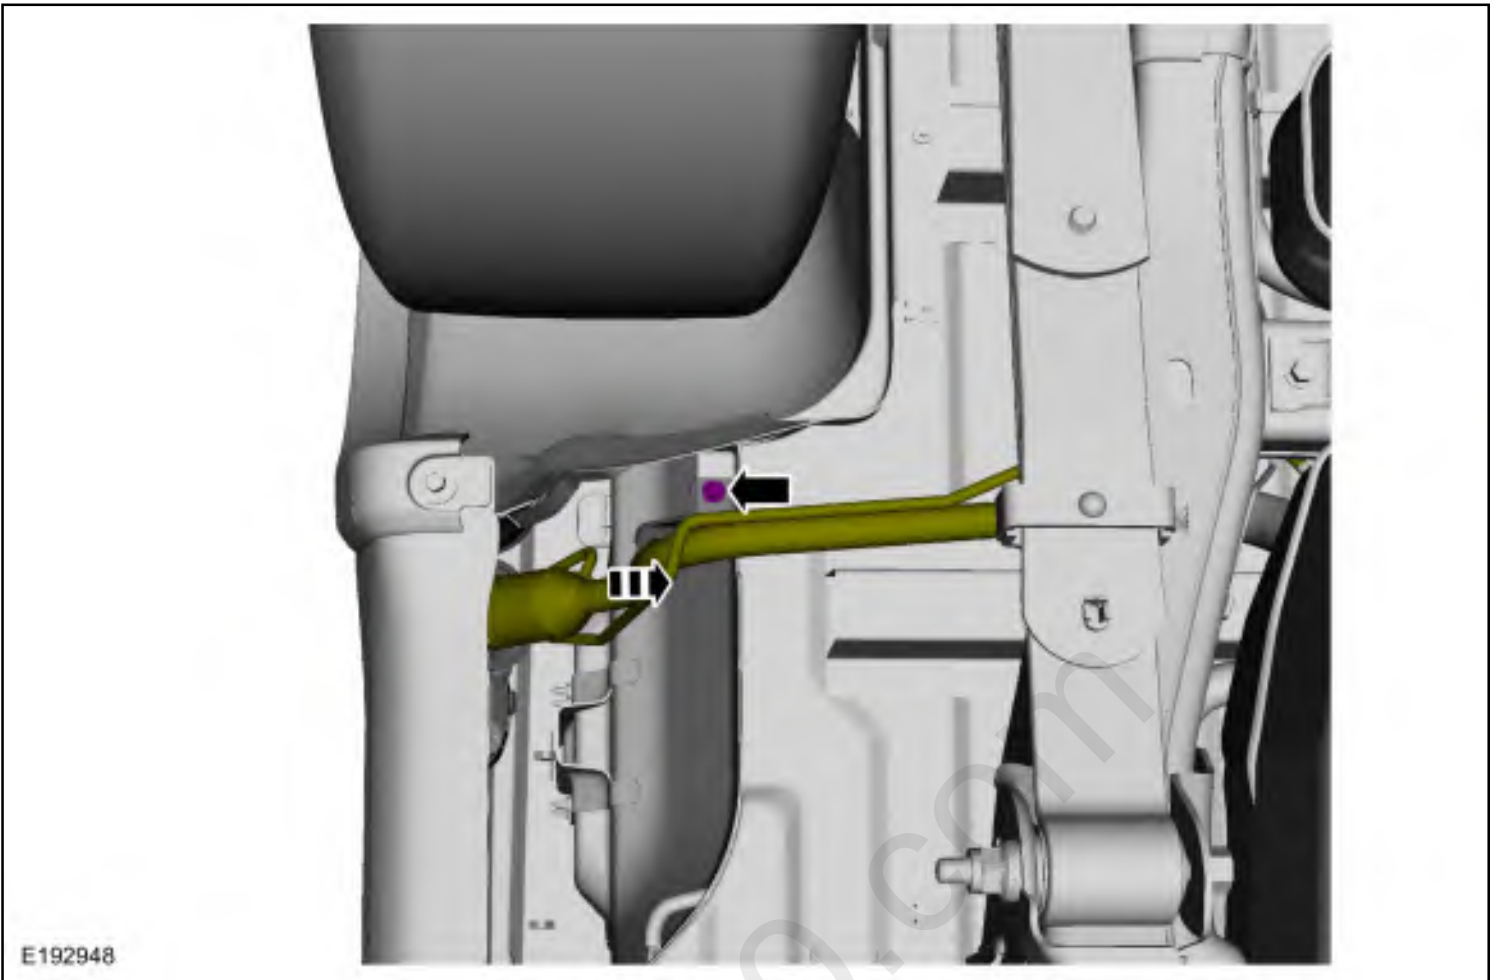

5. Unseat the fuel filler door assembly boot from inside the wheel opening.

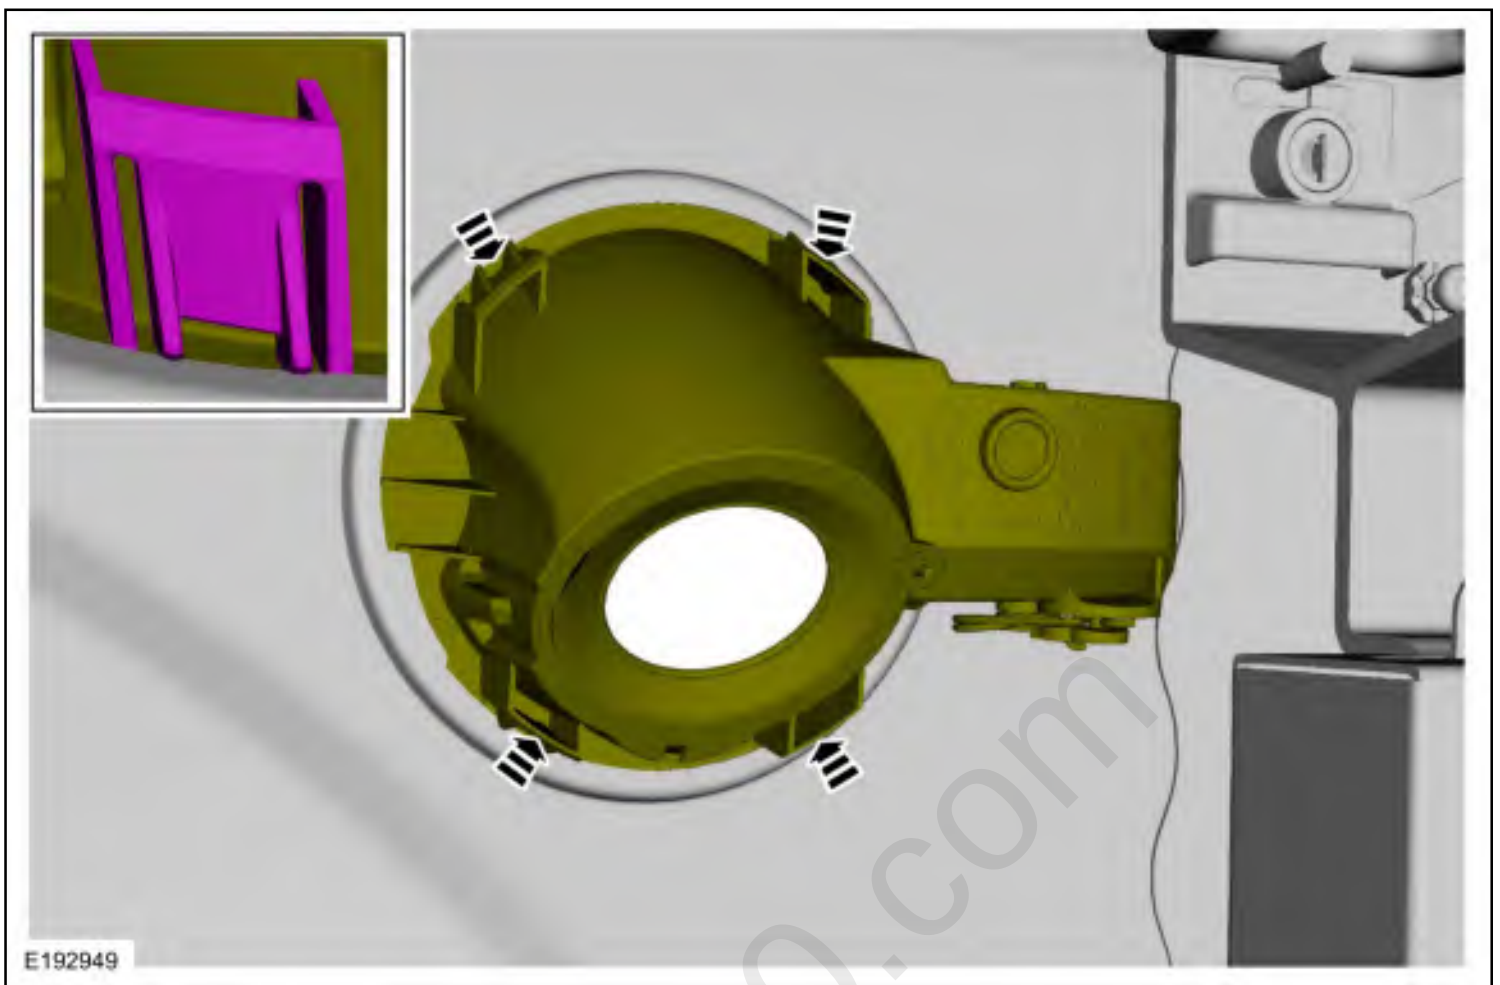


6. **NOTE:** *Clearance is limited. When all four clips release, the housing can be rotated.*

Rotate the housing.



7. Pull the housing away from the vehicle and remove.

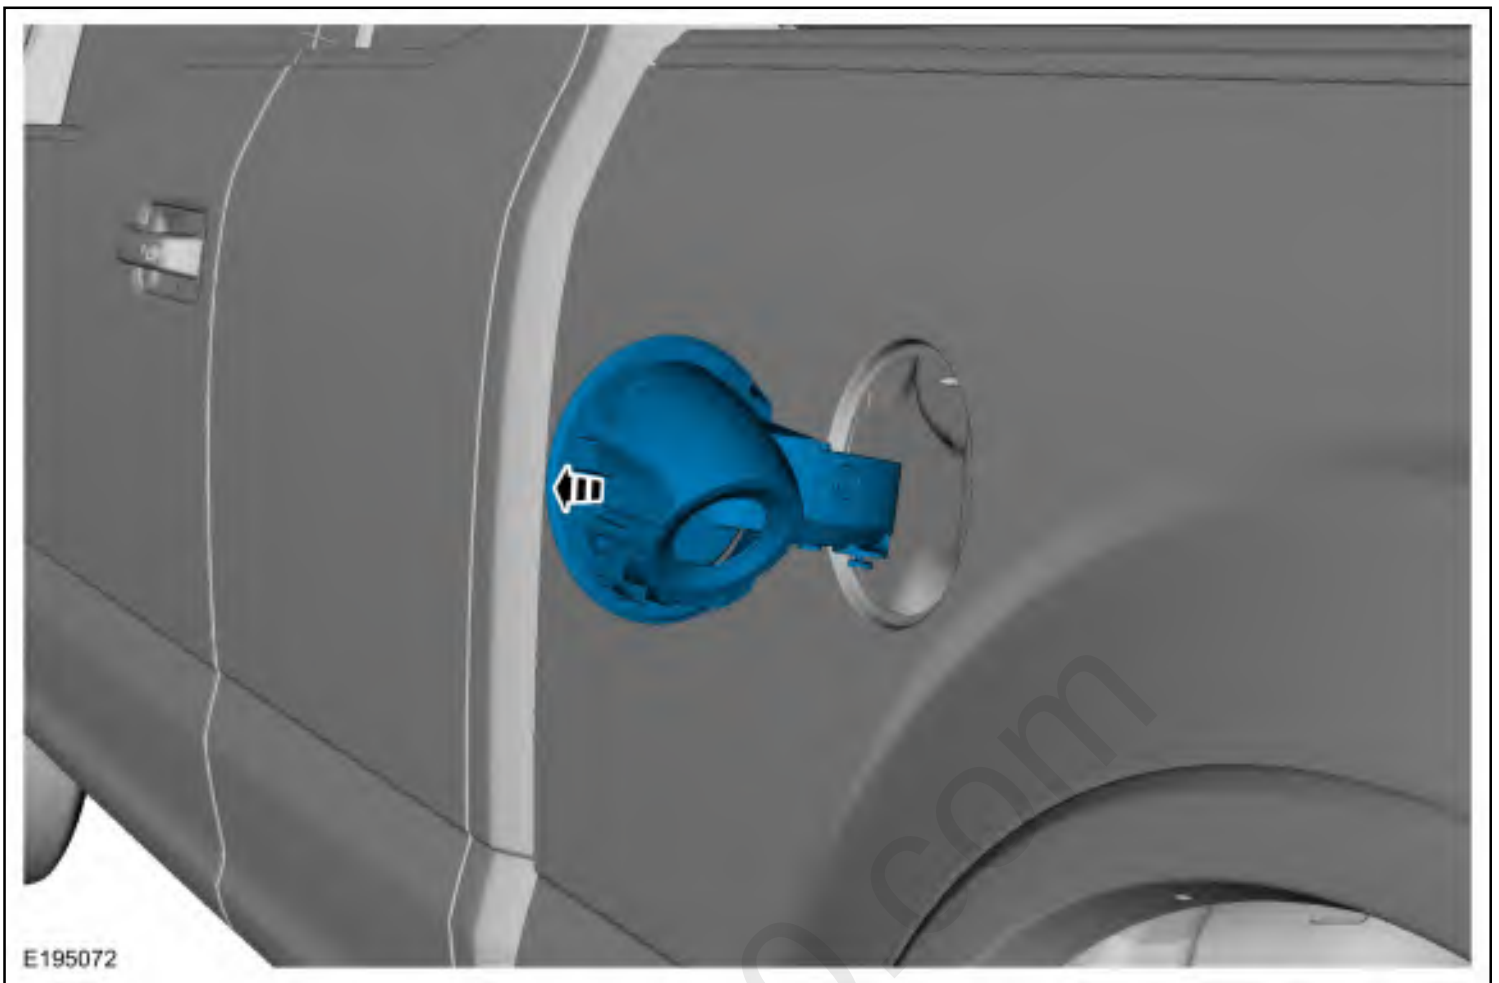

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company
