


Front Door Check Arm

Removal

NOTE: Removal steps in this procedure may contain installation details.


NOTE: LH side shown, RH side similar.

1. Remove the check arm bolt.
Torque: 17 lb.ft (22.5 Nm)

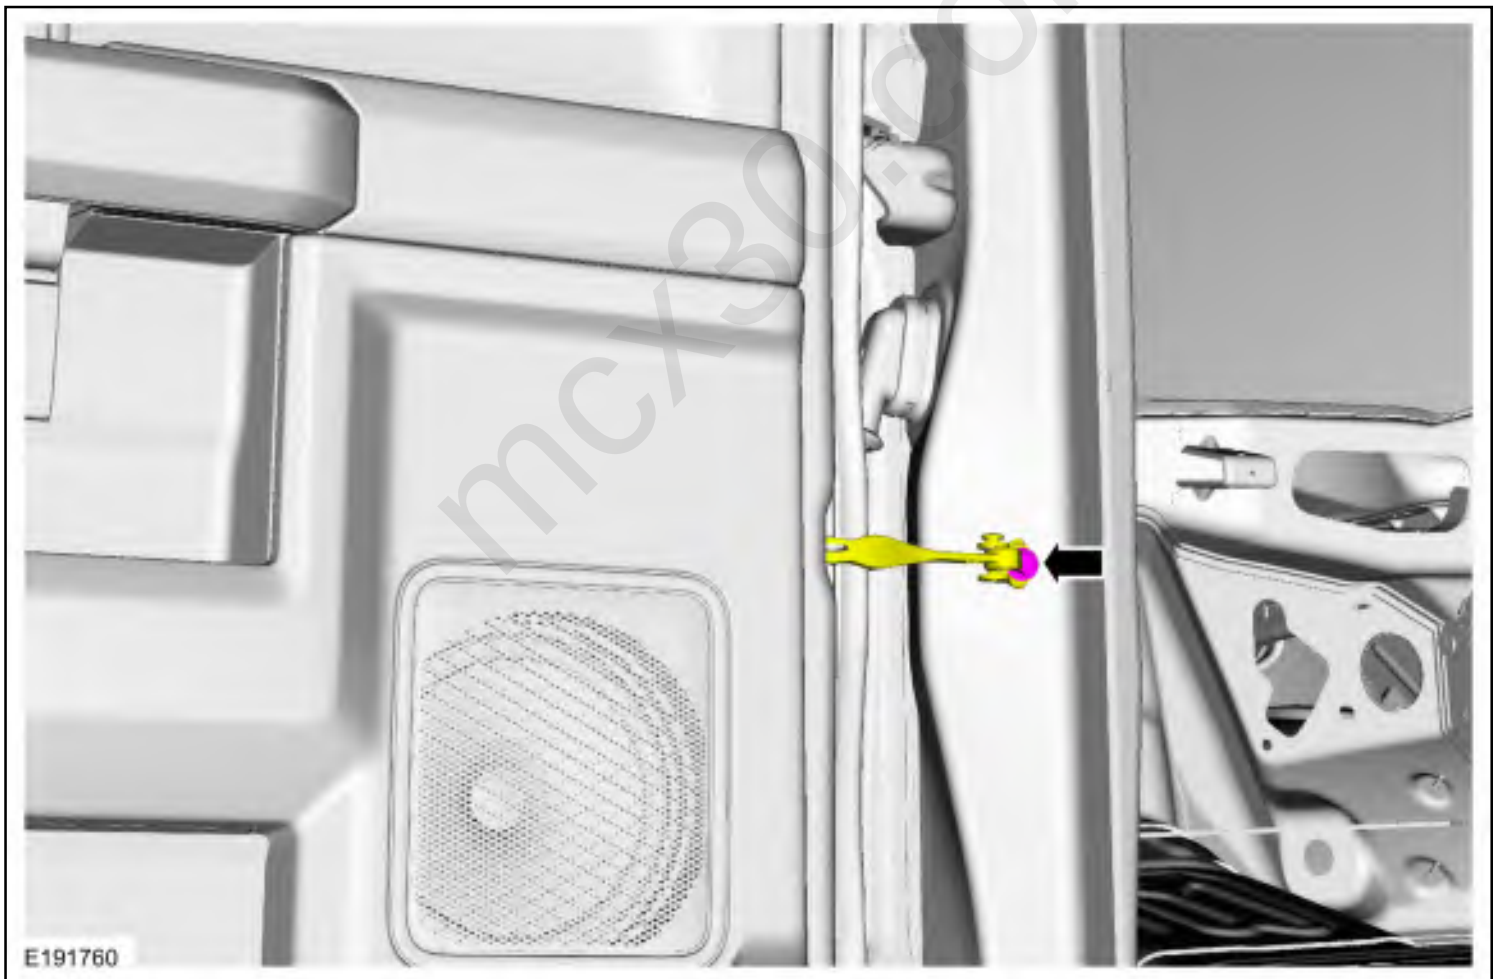

2. Remove the front door trim panel.
Refer to: [Front Door Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

3. Remove the speaker.
 1. Disconnect the electrical connector.
 2. Remove the bolts and the speaker.

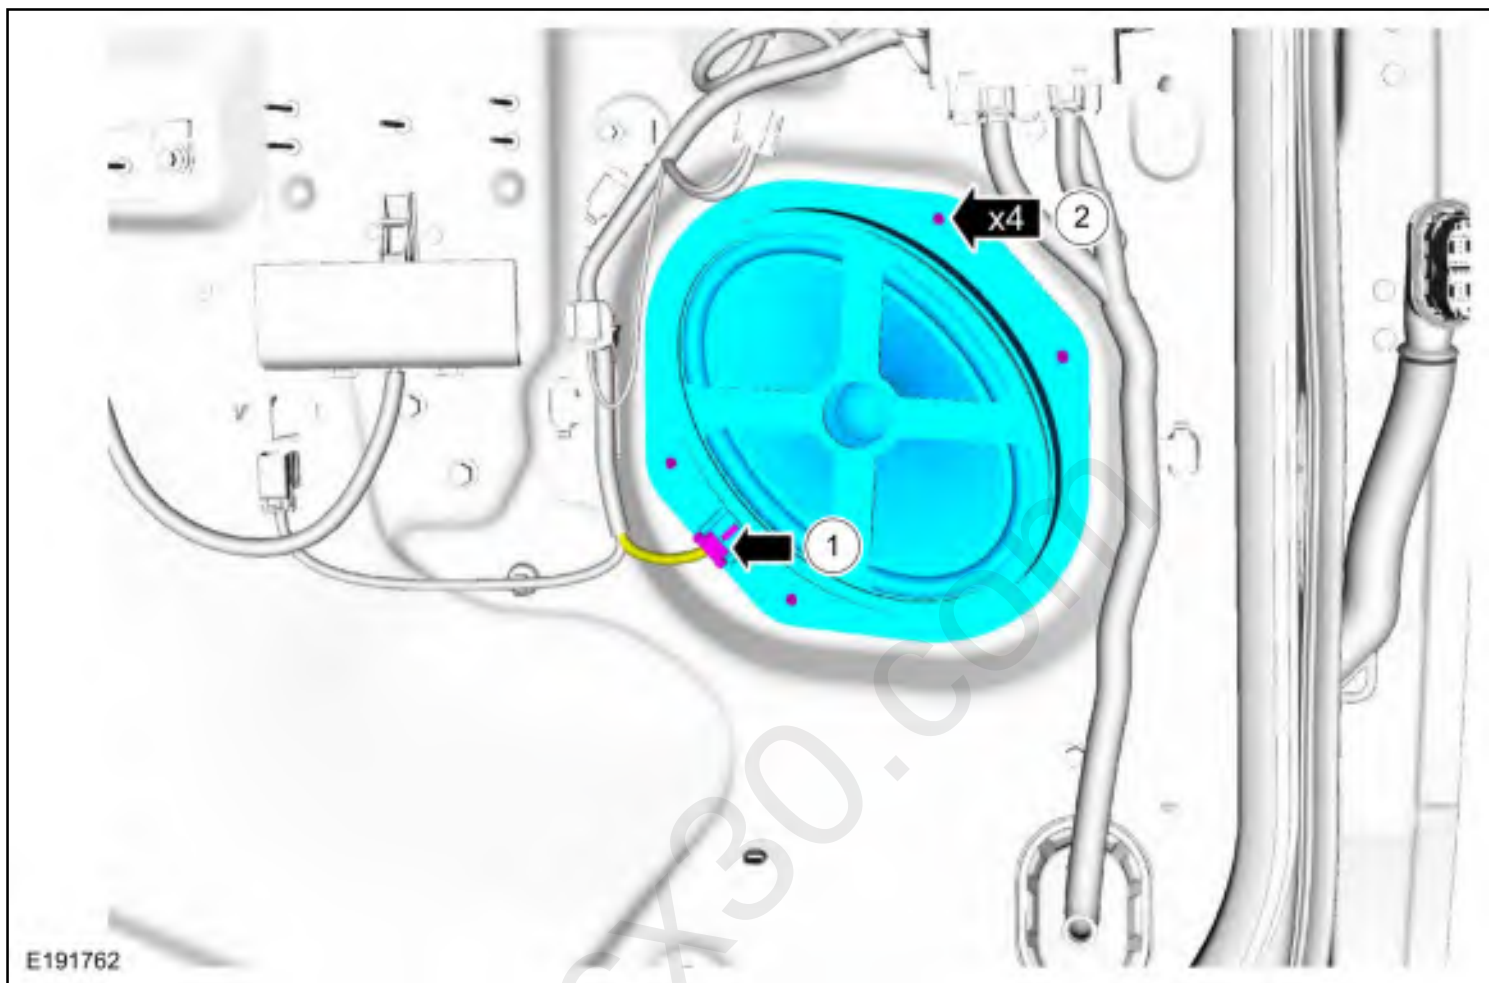


4. Remove the nuts.
Torque: 80 lb.in (9 Nm)



E191761



5. Remove the check arm assembly.

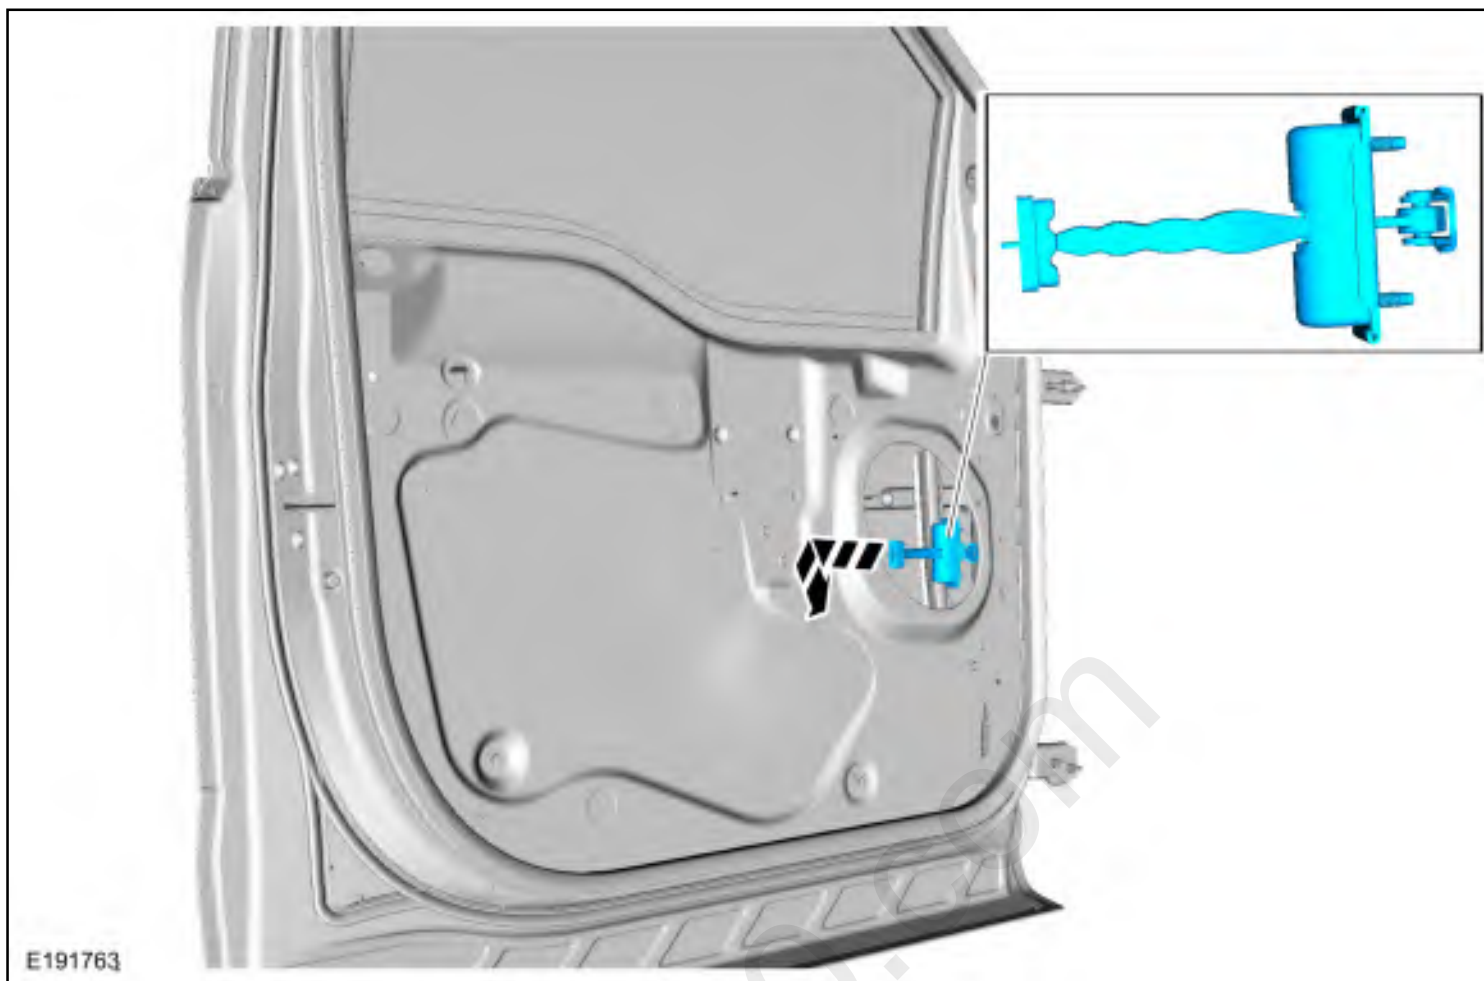

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company