


Radius Arm Bushing - F-450/F-550

Special Tool(s) / General Equipment

 E234273	204-356 Remover/Installer, Radius Arm Axle Bushing TKIT-2005P-F TKIT-2005P-ROW
 E131848	205-118 (T77F-4222-A) Differential bearing cap installer


Removal

1. Remove the radius arm.
Refer to: Radius Arm - F-450/F-550 (204-01A Front Suspension - RWD, Removal and Installation).
2. Remove the radius arm bushing.
Use Special Service Tool: 204-356 Remover/Installer, Radius Arm Axle Bushing , 205-118 (T77F-4222-A) Differential bearing cap installer.

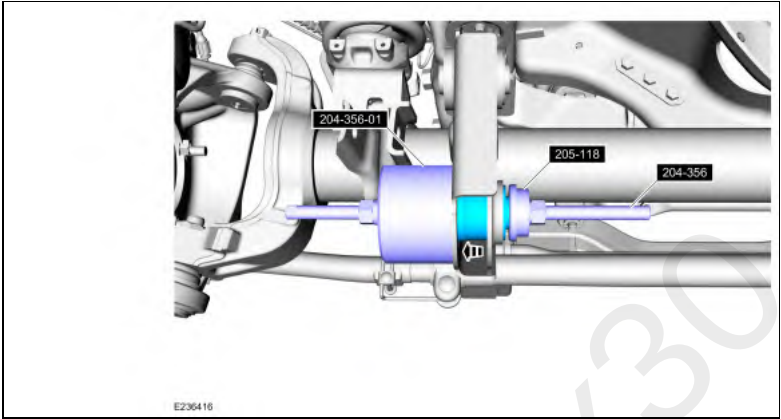

Installation

1. Install the radius arm bushing.
Use Special Service Tool: 204-356 Remover/Installer, Radius Arm Axle Bushing.

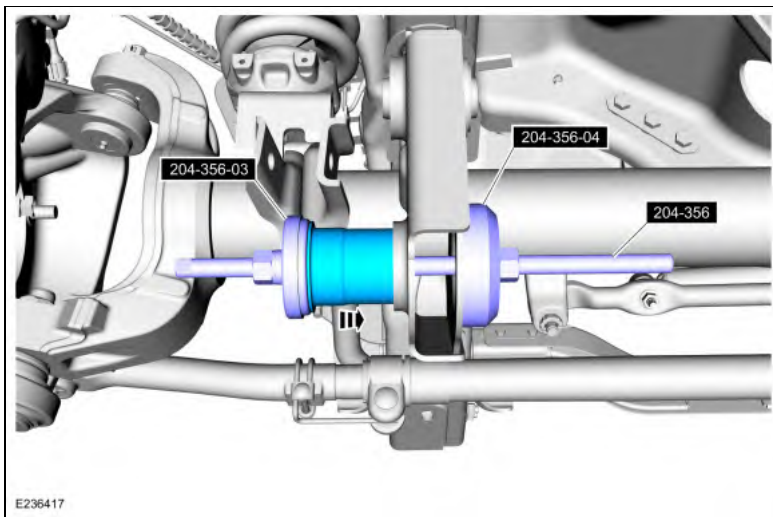

2. Install the radius arm
Refer to: Radius Arm - F-450/F-550 (204-01A Front Suspension - RWD, Removal and Installation).