


## Front Stabilizer Bar Bushing - F-250/F-350

### Removal

**NOTICE:** Suspension fasteners are critical parts that affect the performance of vital components and systems. Failure of these fasteners may result in major service expense. Use the same or equivalent parts if replacement is necessary. Do not use a replacement part of lesser quality or substitute design. Tighten fasteners as specified.

**NOTE:** Removal steps in this procedure may contain installation details.


1. With the vehicle in NEUTRAL, position it on a hoist.  
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
2. On both sides.  
Remove the front stabilizer bar bracket nuts and brackets.  
*Torque: 41 lb.ft (55 Nm)*

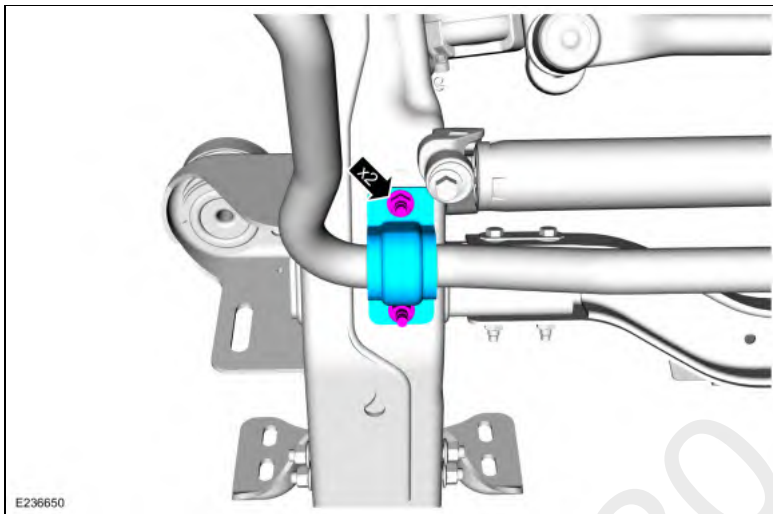

3.
  1. Lower and support the front stabilizer bar.
  2. **NOTICE:** Do not use any lubrication on the stabilizer bar or the bushings or damage to the bushings may occur.

**NOTE:** Stabilizer bar bushings must be installed with slits facing the front of the vehicle.

Remove the front stabilizer bar bushing.

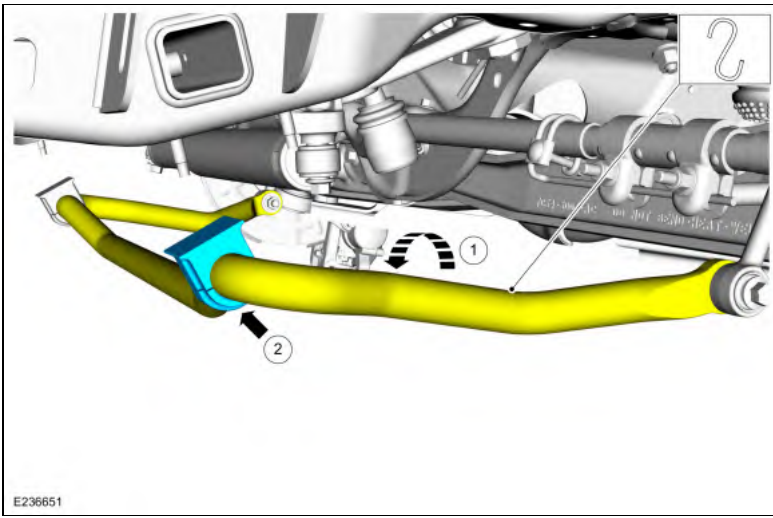

**Installation**

- 1. To install, reverse the removal procedure.