

Track Bar Ball Joint - Vehicles With: Integral Ball Joint


Special Tool(s) / General Equipment

	204-355 Remover/Installer, Ball Joint TKIT-2005P-F TKIT-2005P-ROW
	205-086 (T74P-4635-C) Installer/Remover, C-Frame and Screw


Removal

NOTICE: Suspension fasteners are critical parts that affect the performance of vital components and systems. Failure of these fasteners may result in major service expense. Use the same or equivalent parts if replacement is necessary. Do not use a replacement part of lesser quality or substitute design. Tighten fasteners as specified.

- 1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
- 2. Remove the track bar.
Refer to: Track Bar - Vehicles With: Integral Ball Joint (204-01A Front Suspension - RWD, Removal and Installation).
- 3. Remove the track bar ball joint boot.

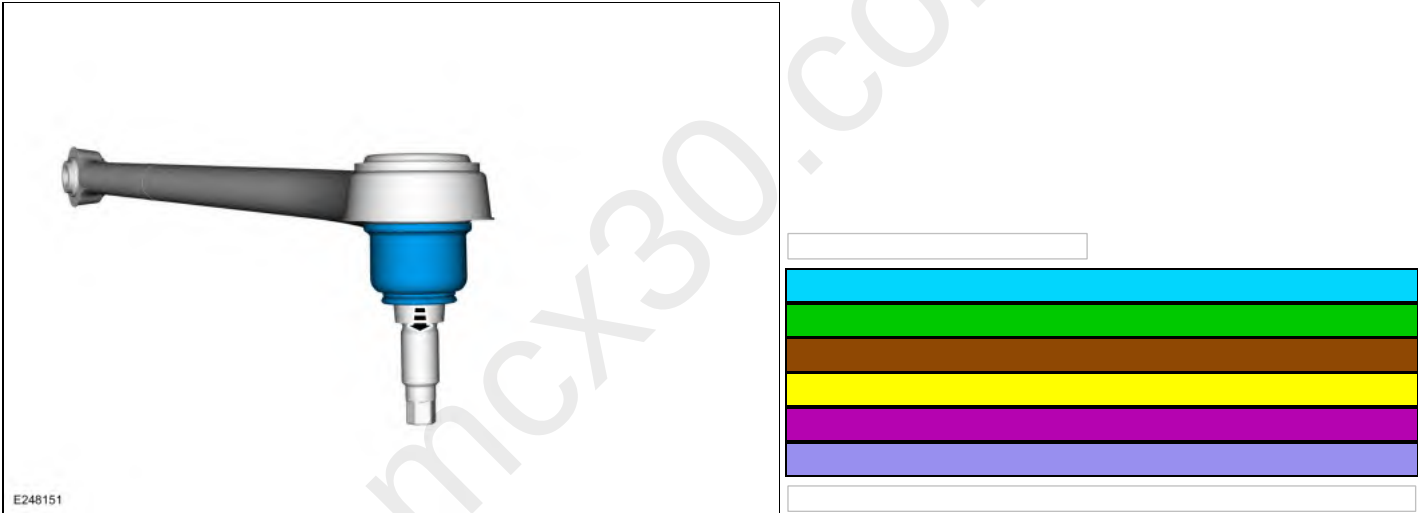

- 4. Remove the track bar ball joint.
Use Special Service Tool: 204-355 Remover/Installer, Ball Joint. , 205-086 (T74P-4635-C) Installer/Remover, C-Frame and Screw.


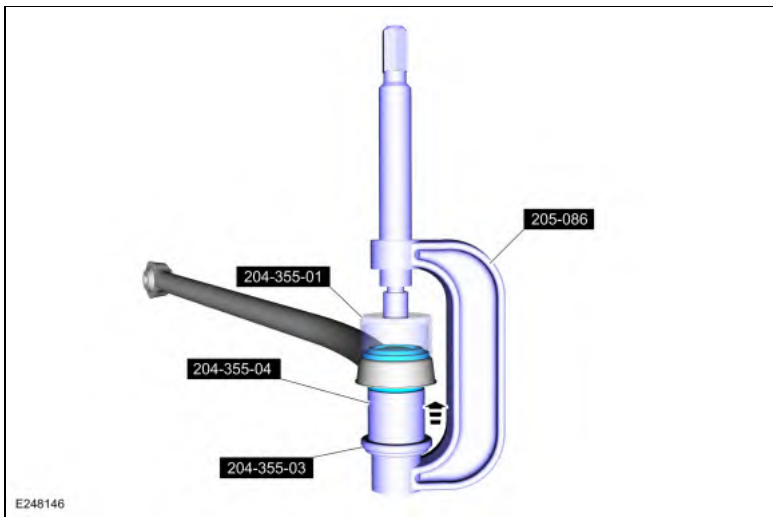


Installation

NOTICE: The track bar ball joint is installed with the dust boot attached to the ball joint. Do not damage the track bar ball joint boot during installation.

1. Install the track bar ball joint.

 Use Special Service Tool: 204-355 Remover/Installer, Ball Joint. , 205-086 (T74P-4635-C) Installer/Remover, C-Frame and Screw.

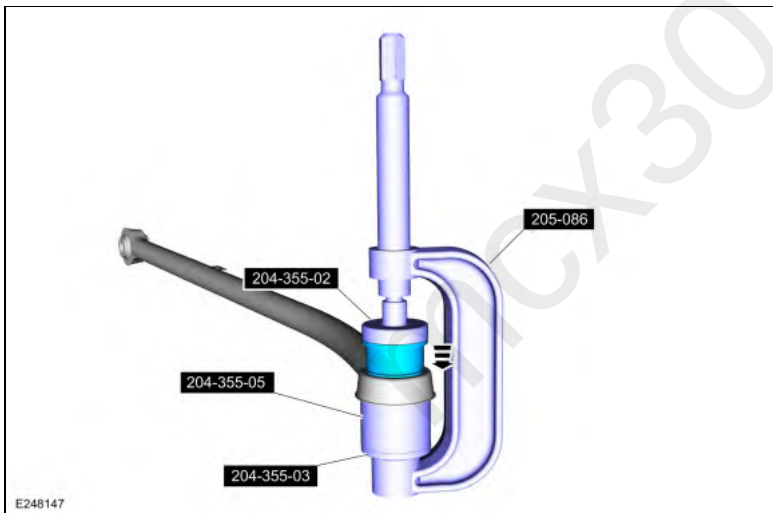

2. Install the track bar.

Refer to: Track Bar - Vehicles With: Integral Ball Joint (204-01A Front Suspension - RWD, Removal and Installation).

