 


Track Bar Bushing

Special Tool(s) / General Equipment

 E234277	204-608 Bushings Remover TKIT-2006UP-FLM TKIT-2006UP-ROW
 E234292	205-090 (T75L-1165-B) Plate, Bearing/Oil Seal
 E133913	205-153 (T80T-4000-W) Handle
 E180811	205-488 Installer, Drive Pinion Bearing TKIT-1999S-FLM/LT
	307-375 Installer, Needle Bearing TKIT-1999A-F/LT TKIT-1999A-FM/FLM TKIT-1999A-LM
Hydraulic Press	

Removal


1. Remove the track bar.
Refer to: Track Bar (204-01A Front Suspension - RWD, Removal and Installation).
Refer to: Track Bar - Vehicles With: Integral Ball Joint (204-01A Front Suspension - RWD, Removal and Installation).

2. **NOTICE: To avoid damage to the components, do not use heat to aid track bar bushing removal.**


Remove and discard the track bar bushing.

Use Special Service Tool: 205-090 (T75L-1165-B) Plate, Bearing/Oil Seal. , 205-153 (T80T-4000-W) Handle. , 205-488 Installer, Drive Pinion Bearing. , 307-375 Installer, Needle Bearing.

Use the General Equipment: Hydraulic Press

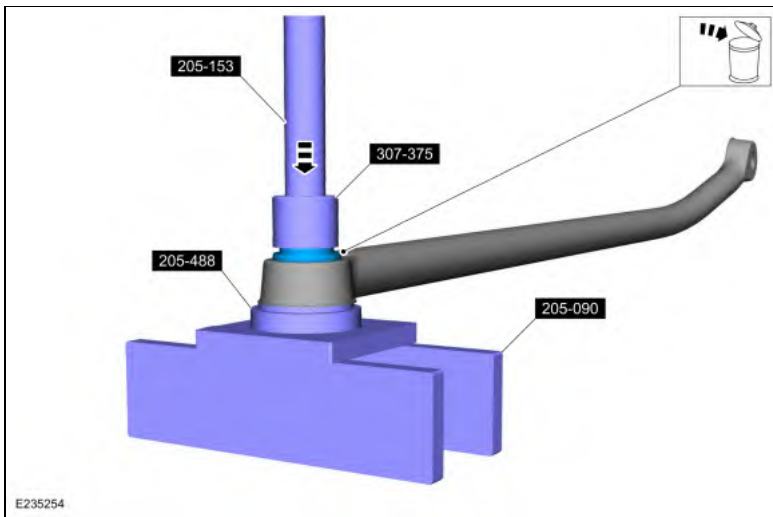

3. **NOTE:** Use clean shop rag.
Clean and inspect the track bar.

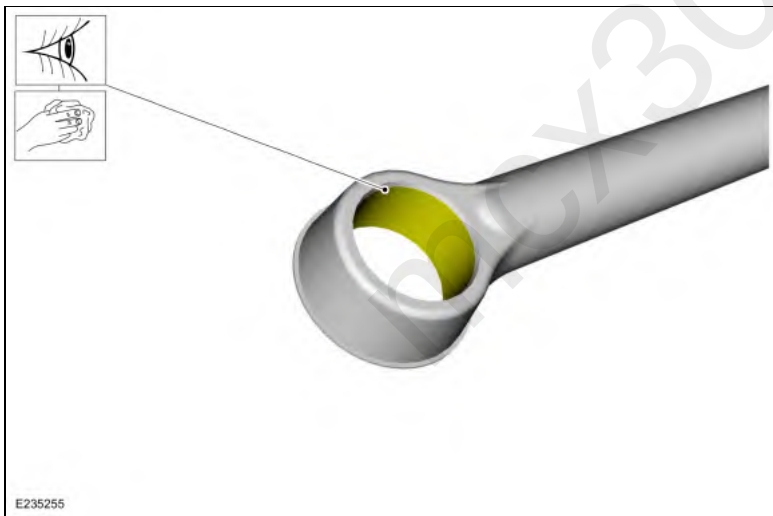


Installation

1. **NOTE:** Bushing should be centered in track bar with equal amounts of the bushing exposed on both sides of the track bar.

Install the new track bar bushing into the track bar.

Use Special Service Tool: 204-608 Bushing Remover, 205-488 Installer, Drive Pinion Bearing, 205-090 (T75L-1165-B) Plate, Bearing/Oil Seal.

Use the General Equipment: Hydraulic Press

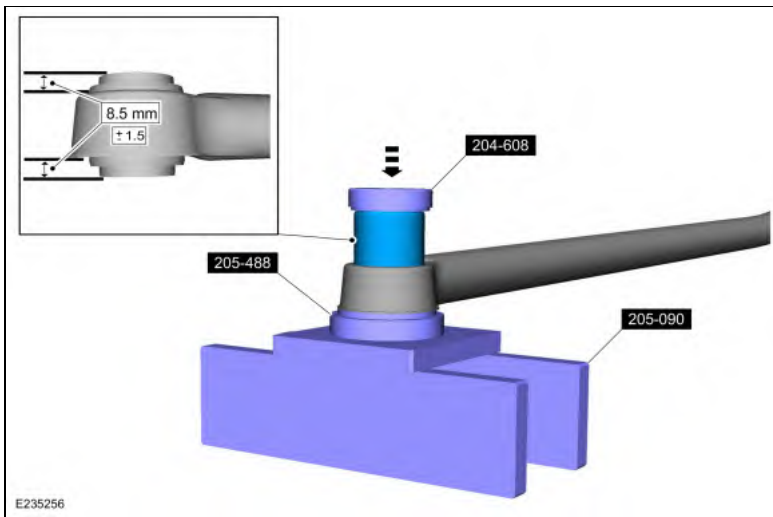

2. Install the track bar.
 Refer to: Track Bar (204-01A Front Suspension - RWD, Removal and Installation).
 Refer to: Track Bar - Vehicles With: Integral Ball Joint (204-01A Front Suspension - RWD, Removal and Installation).

mcx30.com