


Crankshaft Position (CKP) Sensor

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
2. Disconnect the CKP sensor electrical connector, and remove the CKP sensor.

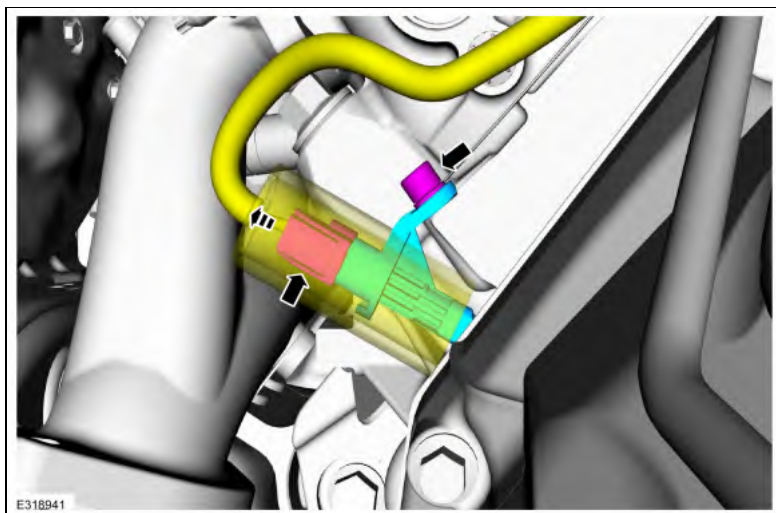

Installation

1. To install, reverse the removal procedure.
2. Using the scan tool, perform the Misfire Monitor Neutral Profile Correction procedure, following the on-screen instructions.