


Cylinder Head Temperature (CHT) Sensor

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. **NOTE:** Do not reuse the CHT sensor, install a new sensor.

Disconnect the CHT sensor electrical connector.

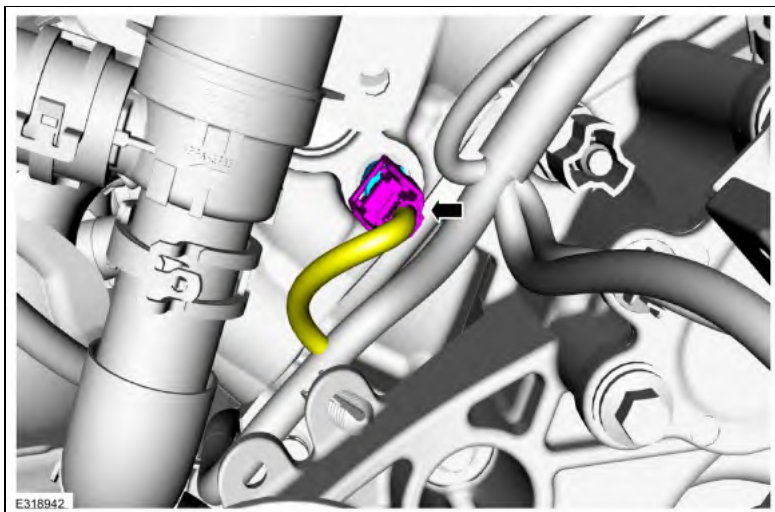

2. Remove the CHT sensor.
Torque: 97 lb.in (11 Nm)

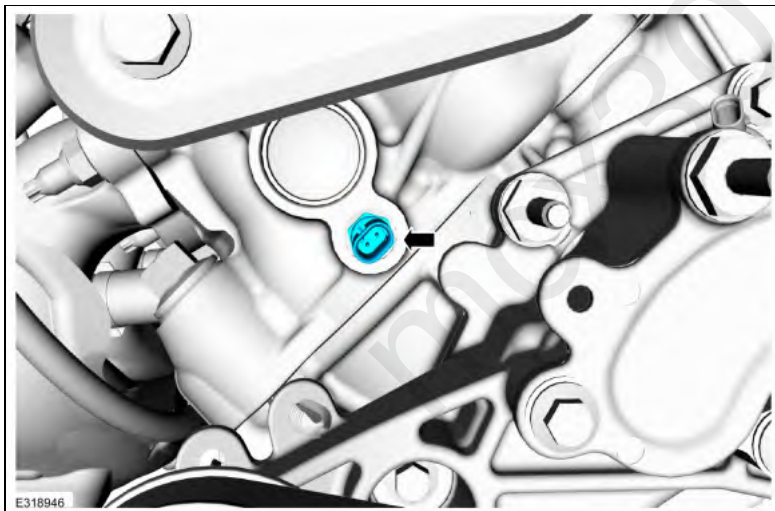

Installation

1. To install, reverse the removal procedure.

