

Engine Oil Pressure (EOP) Sensor

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. Disconnect the electrical connector and remove the EOP sensor.

Torque:

Stage 1: 124 lb.in (14 Nm)

Stage 2: 185Å°

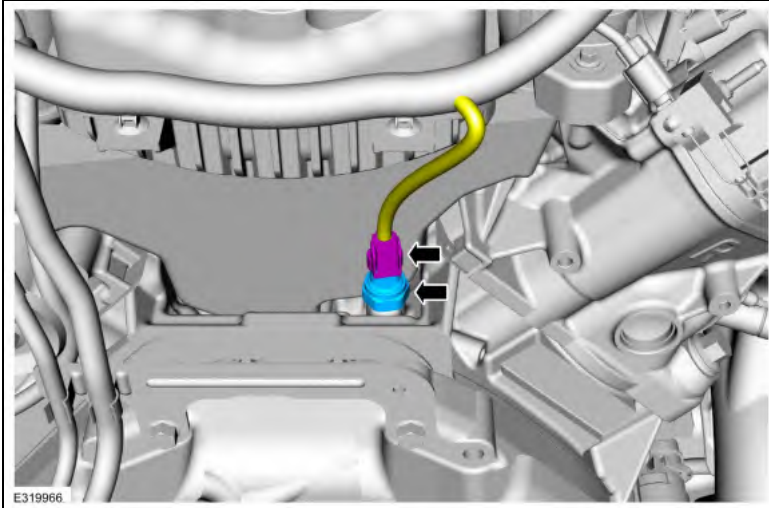

Installation

1. **NOTE:** Lubricate the EOP sensor O-ring with clean engine oil.

To install, reverse the removal procedure.