


Mass Air Flow (MAF) and Intake Air Temperature (IAT) Sensor

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Disconnect the electrical connector, remove the screws and the MAF sensor.
Torque: 12 lb.in (1.3 Nm)

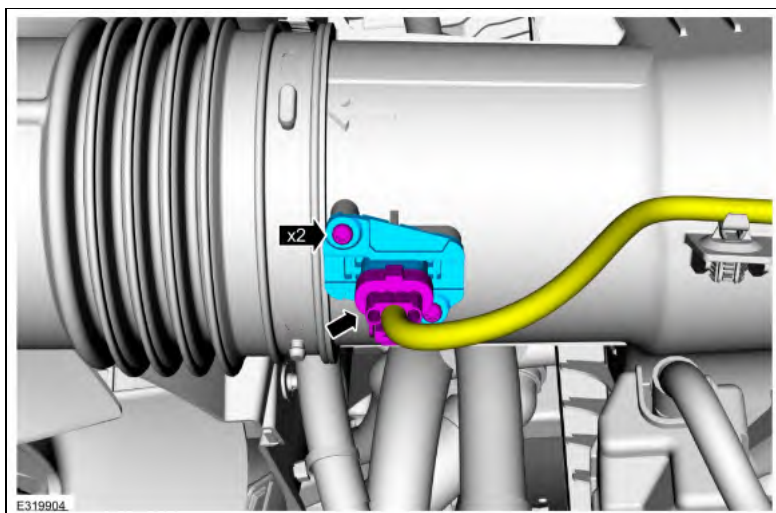

Installation

1. To install, reverse the removal procedure.