

Oil Pressure Control Solenoid


Removal

1. **NOTE:** Removal steps in this procedure may contain installation details.

With the vehicle in NEUTRAL, position it on a hoist.

Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).


2. Remove the nut and position the harness aside to access the oil pressure control solenoid.
Torque: 97 lb.in (11 Nm)

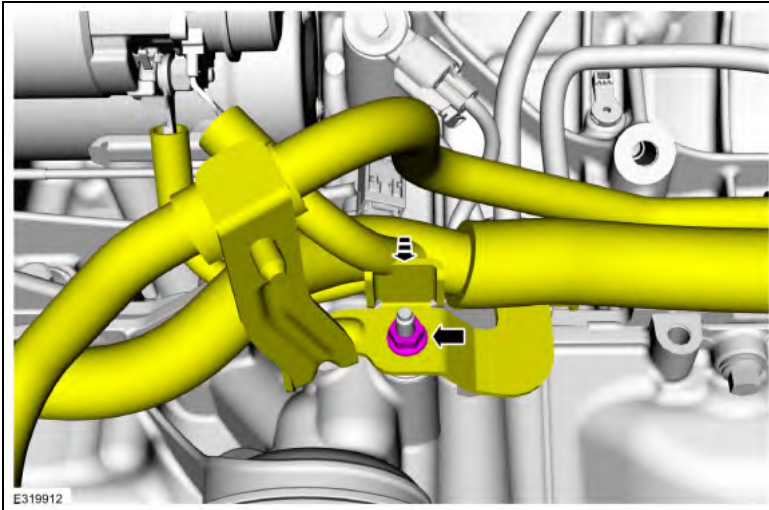

3. **NOTE:** Inspect O-ring and lubricate with clean engine oil.

Remove the bolt and the oil pressure control solenoid.

Torque: 89 lb.in (10 Nm)

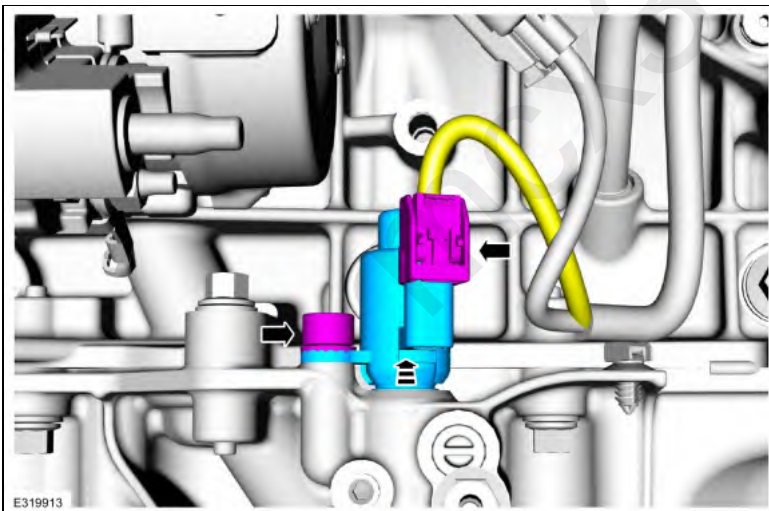

Installation

1. To install, reverse the removal procedure.
2. Inspect and adjust the engine oil level
Refer to: Specifications (303-01C Engine - 7.3L 2V DEVCT V8 (239kW/320PS) (J0), Specifications).

