


Variable Camshaft Timing (VCT) Oil Control Solenoid

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the engine front cover.
Refer to: Engine Front Cover (303-01C Engine - 7.3L 2V DEVCT V8 (239kW/320PS) (J0), Removal and Installation).
2. Remove the bolts and the VCT oil control solenoid and harness plug from the front cover.
Torque: 89 lb.in (10 Nm)

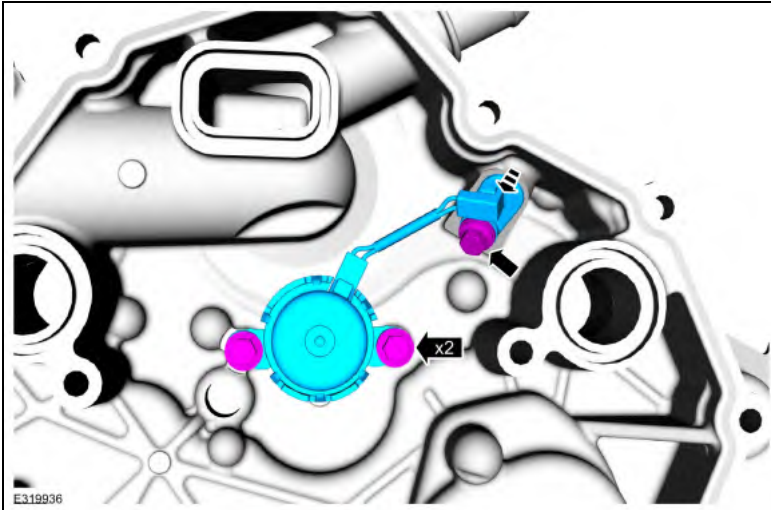

Installation

NOTE: Before installation, lubricate the VCT oil control solenoid O-ring seals with clean engine oil.

1. To install, reverse the removal procedure.