




Transmission Description

Disassembled Views

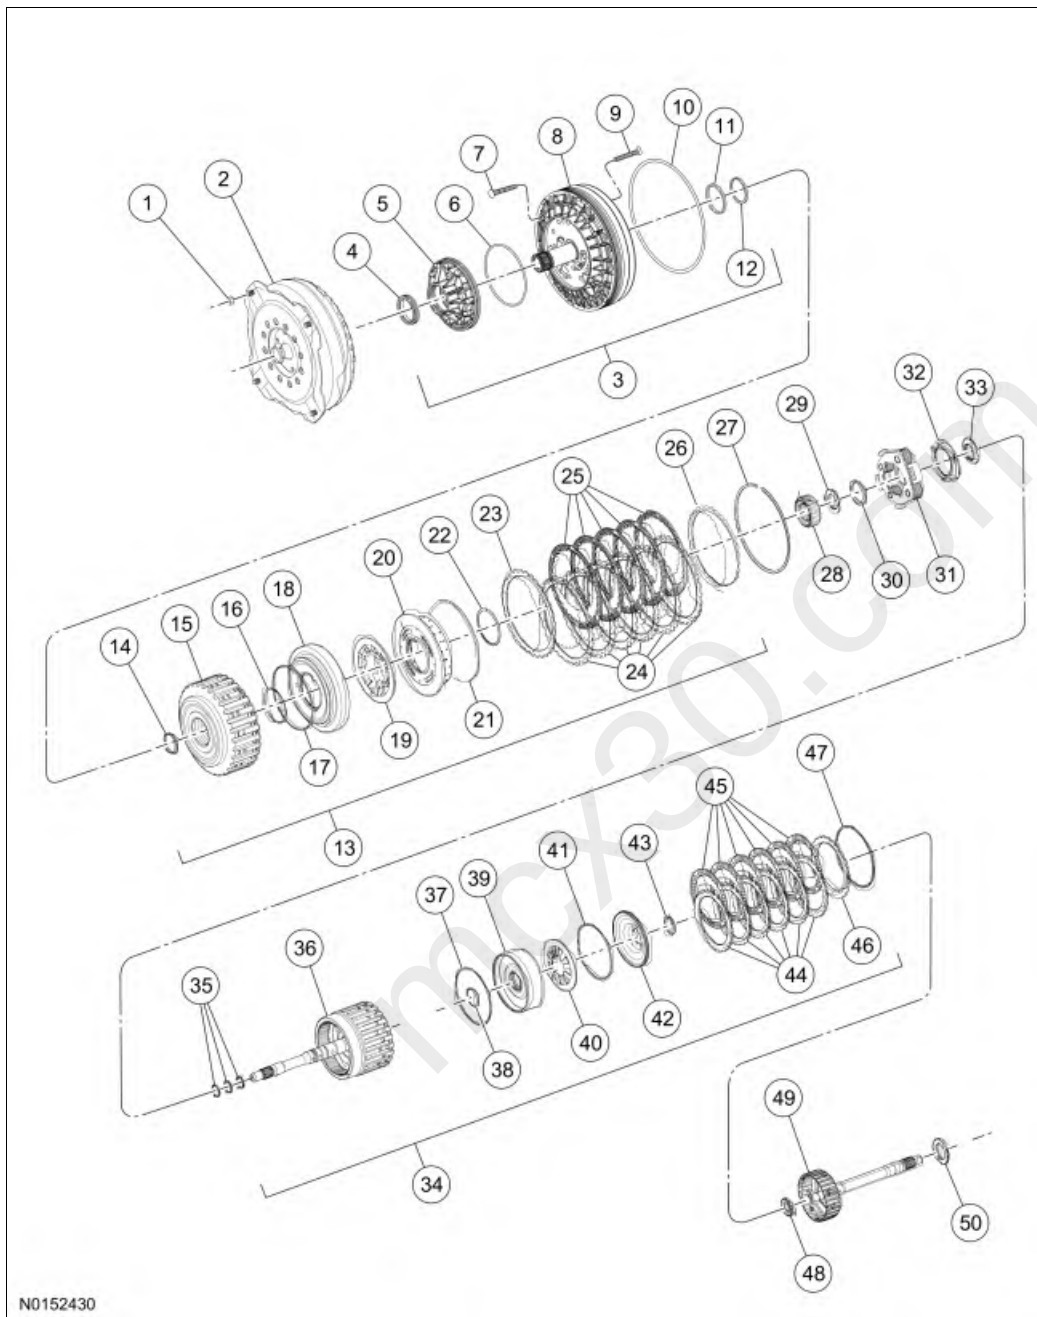

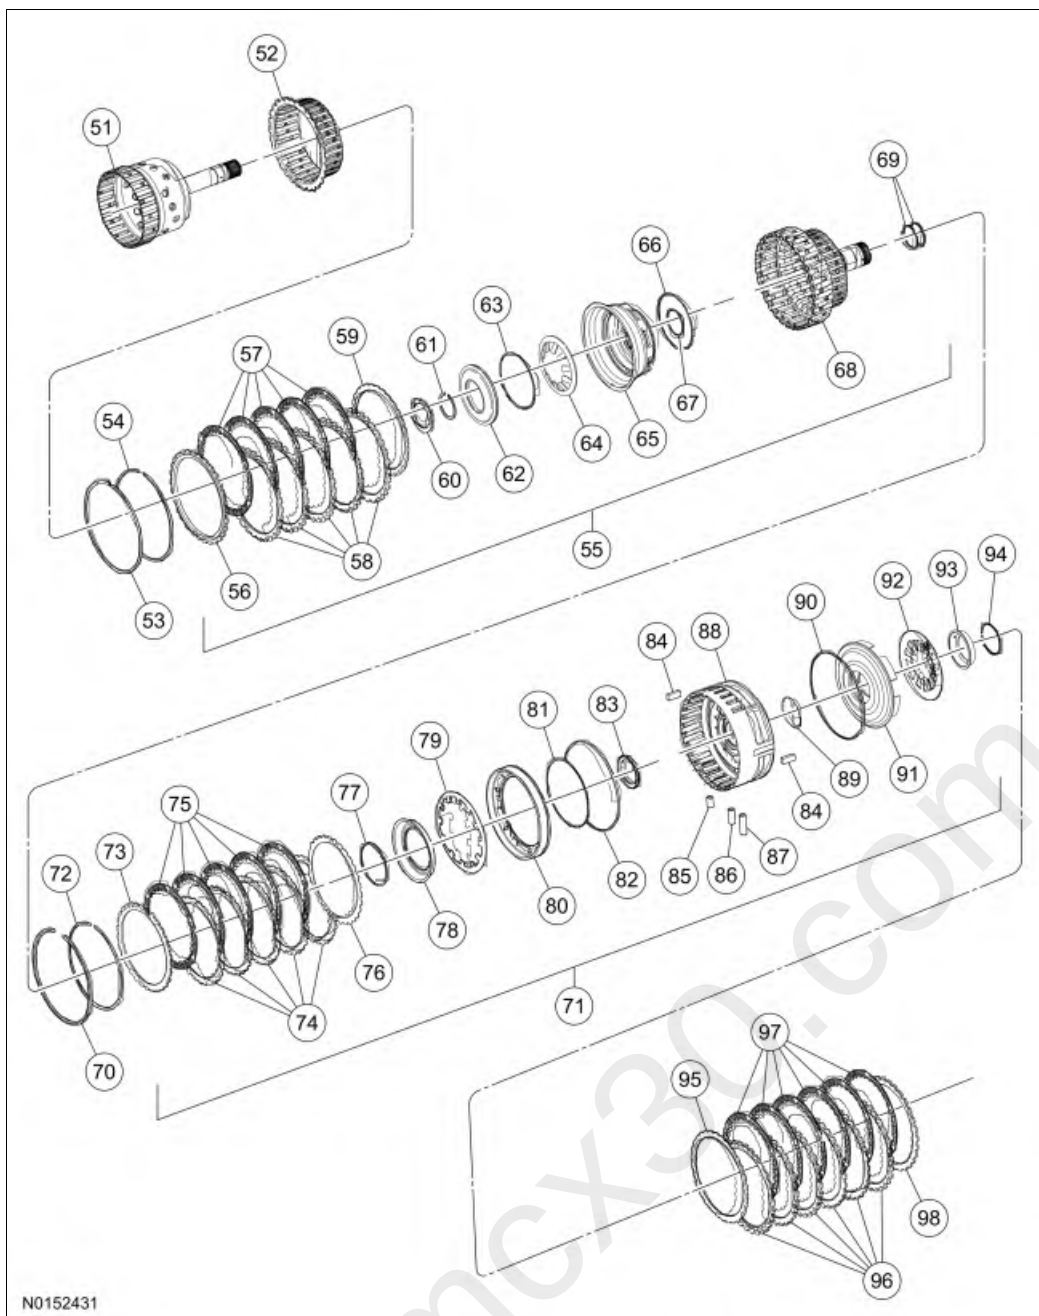

N0152431

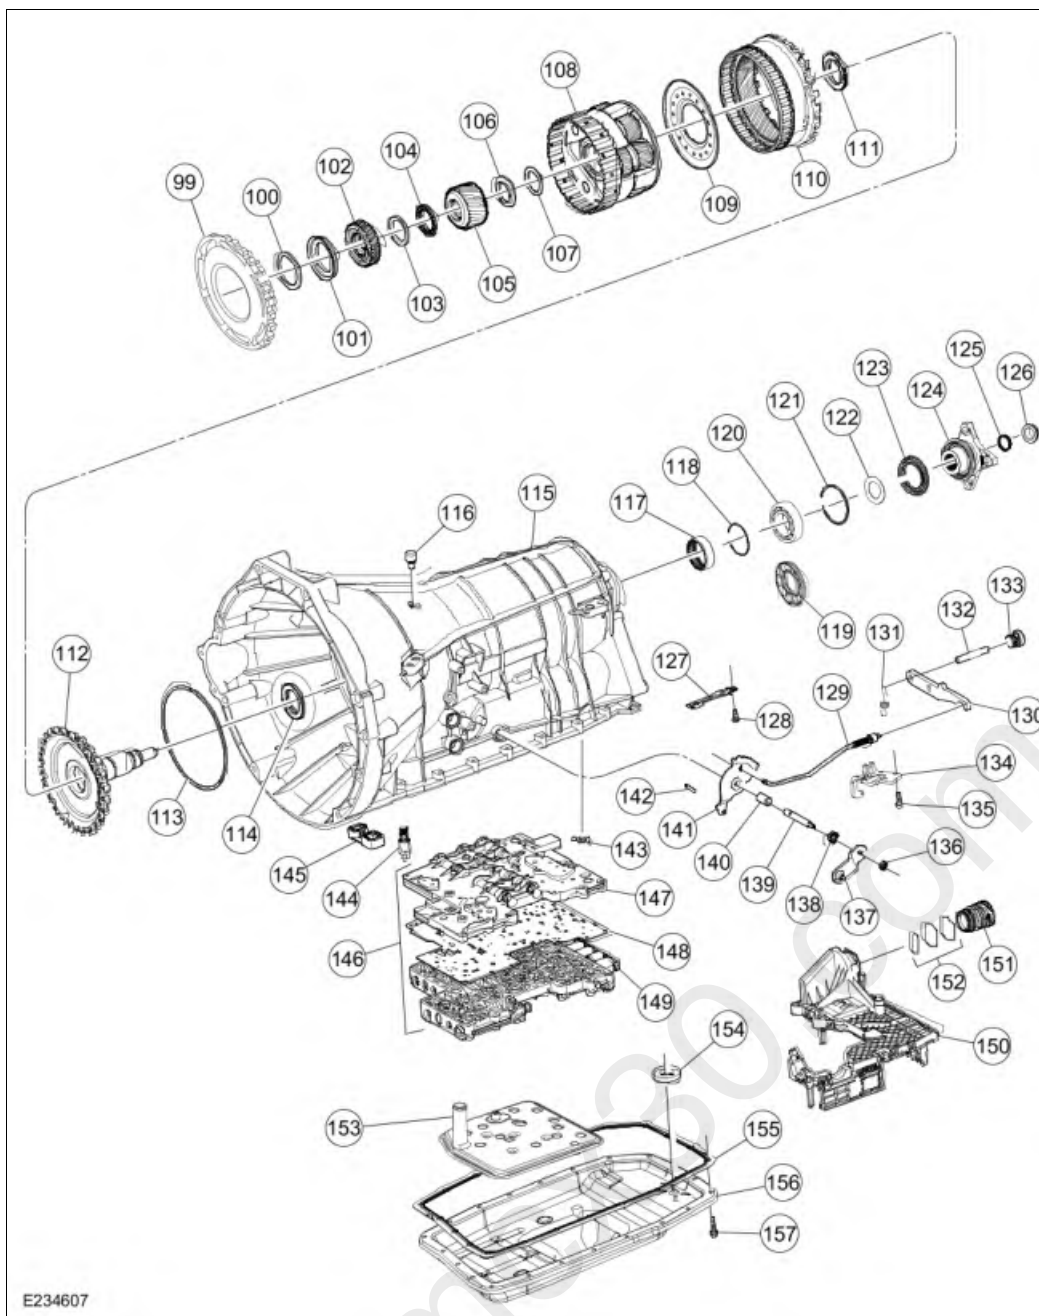

E234607

Item	Part Number	Description
1	N800750-S437	Flexplate-to-torque converter nut (quantity model dependent)
2	7902	Torque converter (model dependent)
3	7A103	Pump assembly
4	7A248	Front pump oil seal
5	â€	Pump body (part of 7A103)
6	7A248	Front pump inner oil seal
7	7N134	Front pump-to-case bolt (13 required)
8	7A103	Front pump assembly
9	W707871-S300	Bolt â€ attaches pump to pump adapter assembly (11 required)
10	7A248	Front pump outer oil seal
11	7D019	Clutch support fluid seal
12	7L323	Front pump support seal
13	â€	Forward (A) clutch assembly
14	7D014	Front pump selective washer


15	7A360	Forward (A) clutch cylinder and hub assembly
16	7A548	Forward (A) clutch inner piston seal
17	7A548	Forward (A) clutch outer piston seal
18	7A262	Forward (A) clutch piston
19	7A480	Forward (A) clutch piston retaining spring
20	7H360	Forward (A) clutch balance piston assembly
21	7A548	Forward (A) clutch balance piston outer seal
22	7H365	Forward (A) clutch balance piston snap ring
23	7E085	Forward (A) clutch cushion spring
24	7E314	Forward (A) clutch steel plates (externally splined) (quantity model dependent)
25	7B164	Forward (A) clutch friction plates (internally splined) (quantity model dependent)
26	7E314	Forward (A) clutch pressure plate
27	7D483	Forward (A) clutch retaining snap ring
28	7D063	Front planetary sun gear (No. 1)
29	7H375	Bearing (T1)
30	â€”	Front planetary carrier assembly snap ring (part of 7A398)
31	7A398	Front planetary carrier assembly
32	7L339	Plate transmission fluid collector
33	7L495	Bearing (T2)
34	â€”	Overdrive (E) clutch assembly
35	7G091	Turbine shaft seals (3 required)
36	7F207	Input shaft
37	7A548	Overdrive (E) clutch piston outer seal
38	7A548	Overdrive (E) clutch piston inner seal
39	7A262	Overdrive (E) clutch piston
40	7B070	Overdrive clutch piston spring
41	7A548	Balance piston outer seal
42	7H360	Overdrive (E) balance piston
43	7C122	Balance piston snap ring
44	7B442	Overdrive (E) clutch steel plates (externally splined)
45	7B164	Overdrive (E) clutch friction plates (internally splined)
46	7B066	Overdrive (E) pressure plate
47	7D483	Overdrive (E) clutch retaining ring
48	7C096	Bearing (T3)
49	7F351	Intermediate (C) clutch shaft
50	7H375	Bearing (T4)
51	7B067	Sun gear hub and shaft assembly
52	7F236	Direct (B) clutch hub
53	7C122	Direct (B) clutch cylinder retaining ring
54	7D483	Direct (B) clutch pressure plate retaining ring
55	â€”	Direct (B) clutch assembly (clutch B)
56	7B066	Direct (B) clutch pressure plate
57	7B164	Direct (B) clutch friction plates (internally splined) (quantity model dependent)
58	7B442	Direct (B) clutch steel plates (externally splined) (quantity model dependent)
59	7E085	Direct (B) clutch cushion plate

60	7C096	Roller bearing (T5)
61	7A577	Direct (B) clutch piston retaining ring
62	7A262	Direct (B) clutch balance piston
63	7A548	Direct (B) clutch balance seal
64	7B488	Direct (B) clutch piston return spring
65	â€”	Direct (B) clutch piston
66	7A548	Direct (B) clutch piston outer seal
67	7C099	Direct (B) clutch piston inner seal
68	7F283	Direct (B) clutch cylinder
69	7D020	Shell cylinder seals (2 required)
70	7D483	Center support retaining ring
71	â€”	Center support assembly
72	7D483	Intermediate (C) clutch pressure plate retaining ring
73	7B066	Intermediate (C) clutch pressure plate
74	7B442	Intermediate (C) clutch steel plates (externally splined) (quantity model dependent)
75	7B164	Intermediate (C) clutch friction plates (internally splined) (quantity model dependent)
76	7E085	Intermediate (C) clutch pressure plate spring
77	7A577	Intermediate (C) clutch retaining ring
78	7B043	Intermediate (C) clutch ring
79	7A480	Intermediate (C) clutch piston spring
80	7E005	Intermediate (C) clutch piston
81	7F225	Intermediate (C) clutch piston inner seal
82	7F224	Intermediate (C) clutch piston outer seal
83	7F373	Bearing (T6)
84	7B220	Center support keys (2 required)
85	7G199	Center support feed tube seal (black)
86	7G087	Center support feed tube seal (green or orange)
87	7G084	Center support feed tube seal (blue)
88	7G033	Center support
89	7D404	Low/reverse clutch piston center seal
90	7D403	Low/reverse clutch piston outer seal
91	7A262	Low/reverse clutch piston
92	7B070	Low/reverse clutch piston return spring
93	7H318	Low/reverse clutch piston retainer
94	7D483	Retainer transmission-snap ring
95	7E085	Clutch disc cushion plate
96	7B442	Low/reverse clutch steel plates (externally splined)
97	7B164	Low/reverse clutch friction plates (internally splined)
98	7B066	Low/reverse clutch pressure plate (select fit)
99	7A089	OWC
100	7F405	Thrust gear shim (select fit)
101	7C041	Thrust bearing (T7)
102	7D063	Sun gear No. 2
103	7D235	Thrust bearing outer race
104	7D234	Roller bearing (T8)

105	7D063	Sun gear No. 3
106	7D234	Roller bearing (T9)
107	â€”	Roller bearing race (T9)
108	7D006	Rear planetary carrier assembly
109	â€”	Fluid collar rear planetary plate (part of 7D006)
110	7A153	Output shaft ring gear assembly
111	7G178	Thrust Bearing (T10)
112	7060	Output shaft park gear assembly
113	7N194	Output shaft retaining ring
114	7B368	Bearing (T11)
115	7005	Transmission case assembly (model dependent)
116	7034	Transmission case vent assembly (model dependent)
117	7A415	Output shaft bearing assembly
118	7030	Output shaft bearing snap ring
119	â€”	Output shaft seal (4WD)
120	7R205	Output shaft ball bearing (RWD)
121	7030	Output shaft ball bearing snap ring (RWD)
122	7N135	Slip plane washer (RWD)
123	7052	Output shaft seal (RWD)
124	7A021	Output shaft flange (RWD) (model dependent)
125	7052	Output shaft flange seal (RWD)
126	7045	Output shaft flange retaining nut (RWD)
127	7E332	Manual valve detent spring
128	W711235-S300	Manual valve detent spring retaining screw and washer
129	7A232	Park pawl actuator rod
130	7A441	Park pawl
131	7D070	Park pawl return spring
132	7D071	Park pawl shaft
133	7H398	Plug assembly transmission case housing
134	7G101	Park rod actuating plate
135	W711235-S300	Park pawl abutment retaining screw and washer
136	W708455-S441	Manual control lever nut
137	7A256	Manual control lever
138	7B498	Manual control lever shaft seal
139	7C493	Manual control lever shaft
140	7A209	Manual control lever shaft spacer
141	7A115	Manual valve detent lever assembly
142	7G100	Manual valve detent lever retaining pin
143	7F277	OWC bias spring
144	7H322	Thermal bypass valve (model dependent)
145	7B148	Front pump adapter seal
146	7A100	Main control assembly (model dependent)
147	â€”	Main control valve body assembly (part of 7A100)
148	7Z490	Main control valve body separator plate

149	â€”	Lower main control valve body (part of 7A100)
150	7G276	Molded leadframe
151	7G276	Bulkhead connector sleeve
152	7A248	Bulkhead connector sleeve seals
153	7A098	Transmission fluid filter (model dependent)
154	â€”	Transmission fluid pan magnet
155	7A191	Transmission fluid pan gasket
156	7A194	Transmission fluid pan
157	W500214-S437	Transmission fluid pan bolt

Component Location

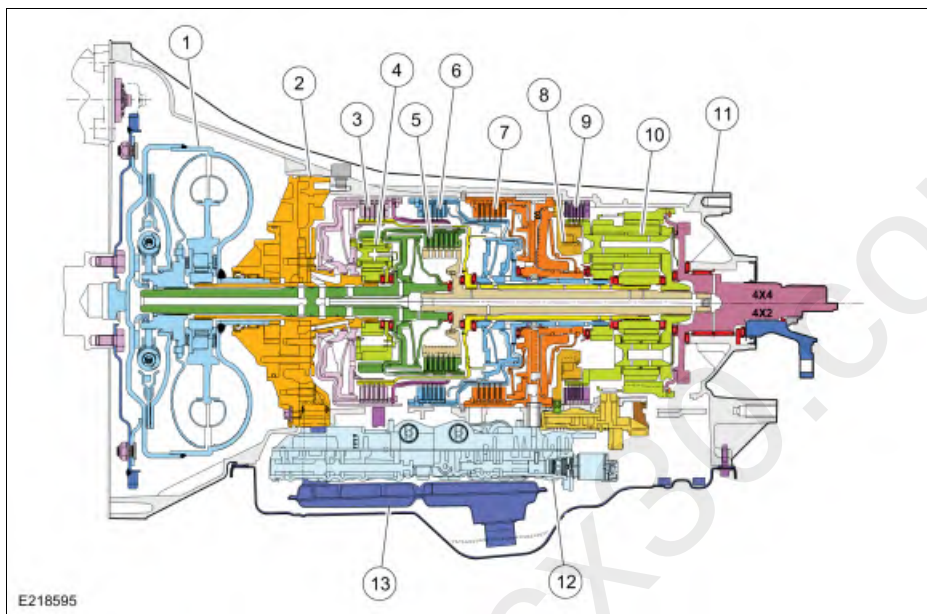

Item	Description
1	Torque converter
2	Front pump assembly
3	Forward clutch (A)
4	Front planetary gearset
5	Overdrive clutch (E)
6	Direct clutch (B)
7	Intermediate clutch (C)
8	One-Way Clutch (OWC)
9	Low/reverse clutch (D)
10	Rear planetary gearset
11	Transmission case
12	Main control assembly
13	Transmission fluid filter

