

Front Stabilizer Bar

Removal

NOTICE: Suspension fasteners are critical parts that affect the performance of vital components and systems. Failure of these fasteners may result in major service expense. Use the same or equivalent parts if replacement is necessary. Do not use a replacement part of lesser quality or substitute design. Tighten fasteners as specified.


NOTE: Removal steps in this procedure may contain installation details.

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
2. **NOTE:** Use the hex-holding feature to prevent the ball stud from turning while removing or installing the stabilizer bar link nut.


On both sides.

Remove and discard the front stabilizer bar link upper nut.

Torque: 59 lb.ft (80 Nm)

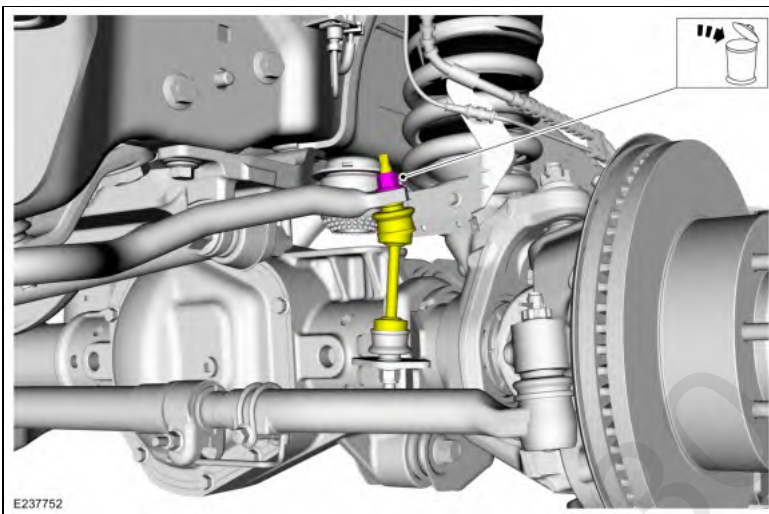

3.
 1. On both sides.
Remove the front stabilizer bar bracket nuts and brackets.
Torque: 41 lb.ft (55 Nm)
 2. Remove the front stabilizer bar.

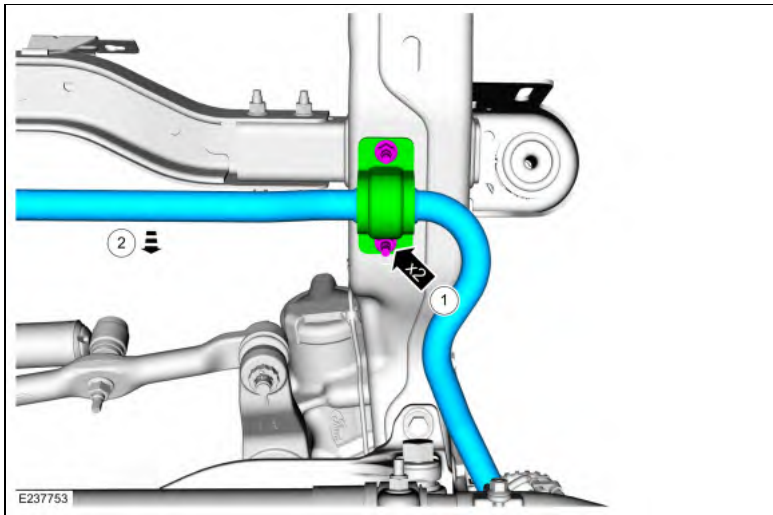

Installation

1. To install, reverse the removal procedure.