

Low One-Way Clutch Assembly

Low One Way Clutch

For low one way clutch operation,

REFER to: Low One-Way Clutch Assembly (307-01A Automatic Transmission, Transfer Case and Power Transfer Unit - 6-Speed Automatic Transmission 6R100, Description and Operation).

NOTICE: Do not clean with water or with water-based solvents. Damage to the component may occur.

NOTE: The low one way clutch cannot be disassembled.

Clean and inspect the low one way clutch for cracks and damaged splines. The splined section should rotate in the direction of the number 1 arrow and lock when rotated in the direction of the number 2 arrow. Check for burned or excessively worn surfaces. If any damage is found or the clutch does not rotate or lock, install a new low one-way clutch.



