

Transmission Support Insulator


Removal

NOTE: The transmission support insulator studs may come out of the transmission support insulator while removing the transmission support insulator-to-crossmember nuts. If this occurs, replace the transmission support insulator.

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
2. Remove the transmission support crossmember.
Refer to: Transmission Support Crossmember (502-02 Full Frame and Body Mounting, Removal and Installation).


Rear Wheel Drive (RWD) vehicles

3. Remove the transmission support insulator bolts.

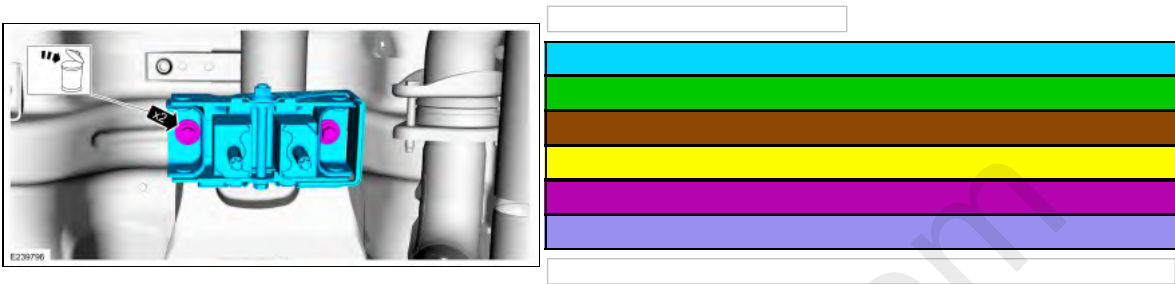

Four-Wheel Drive (4WD) vehicles


4. Remove the transmission support insulator bolts.

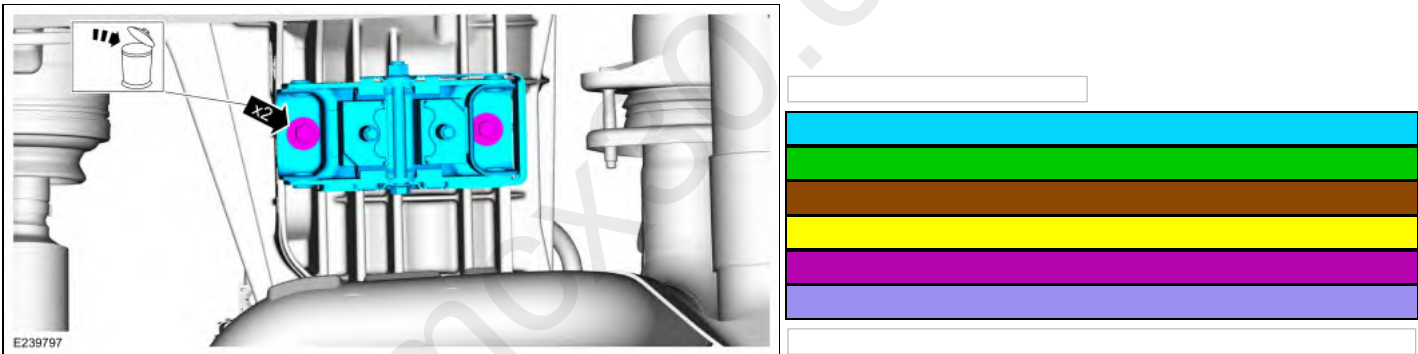

Installation


Rear Wheel Drive (RWD) vehicles

1. Install the transmission support insulator.
Torque: 76 lb.ft (103 Nm)

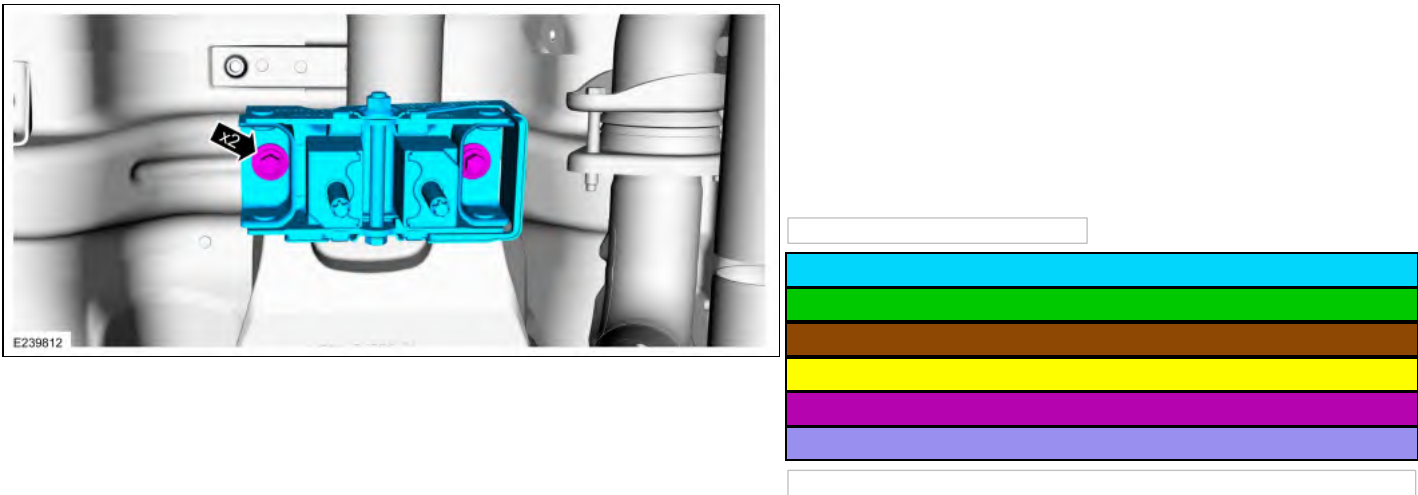

Four-Wheel Drive (4WD) vehicles

- 2. Install the transmission support insulator.
Torque: 76 lb.ft (103 Nm)

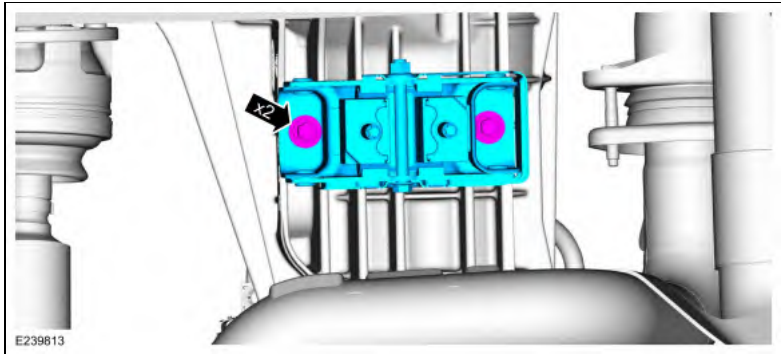

All vehicles

- 3. Install the transmission support crossmember.
Refer to: Transmission Support Crossmember (502-02 Full Frame and Body Mounting, Removal and Installation).

mcx30.com