


Pump Assembly


Overview

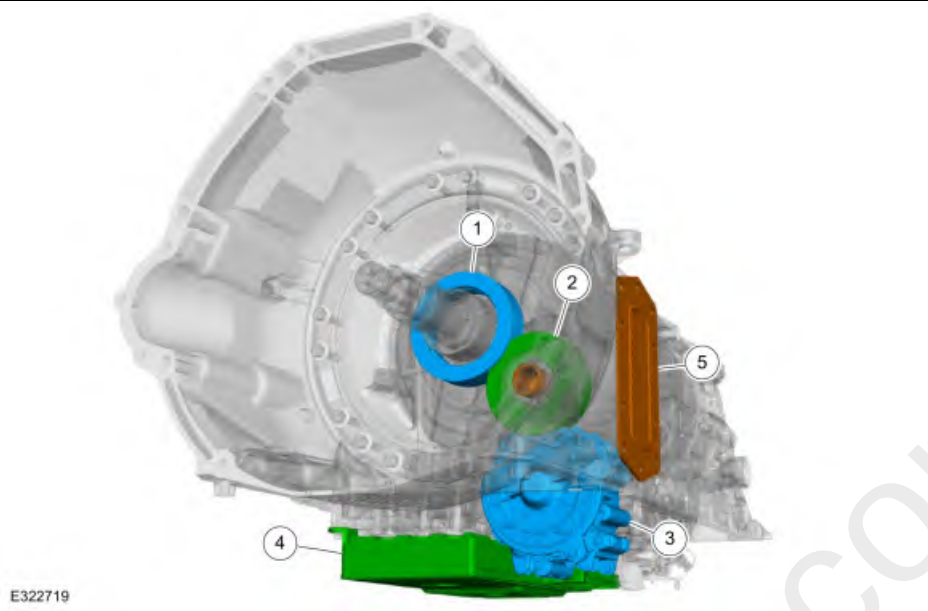

Item	Description
1	Transmission fluid pump drive gear
2	Transmission fluid pump idler gear
3	Transmission fluid pump assembly
4	Transmission fluid filter
5	PTO cover (model depedent)

The transmission fluid in the sump area at the bottom of the transmission case flows through a transmission fluid filter to the pump assembly. The pump is bolted to the bottom of the case and is driven by a set of gears mounted on the stator support and turned by the torque converter.

Pump Assembly Exploded View

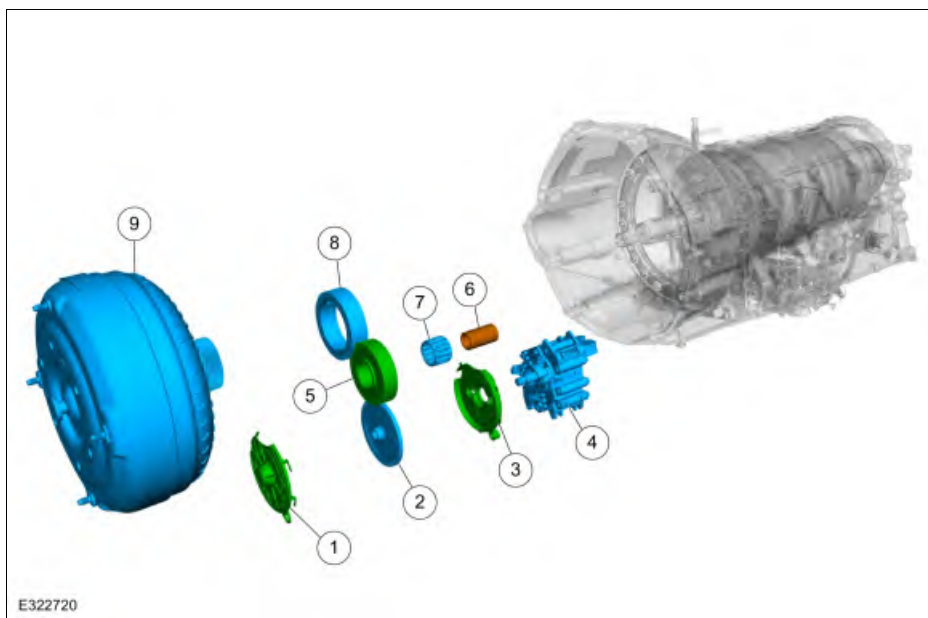

Item	Description
1	Transmission fluid pump driven gear outer cover
2	Transmission fluid pump driven gear
3	Transmission fluid pump driven gear inner cover
4	Transmission fluid pump
5	Transmission fluid pump idler gear
6	Transmission fluid pump idler gear shaft (model depedent)
7	Transmission fluid pump idler gear bearing (model depedent)
8	Transmission fluid pump drive gear (model depedent)
9	Torque converter