


## Extension Housing Seal

### Removal



1. Remove the following items:
  1. Refer to: Transmission Support Insulator (307-01B Automatic Transmission, Transfer Case and Power Transfer Unit - 10-Speed Automatic Transmission â€“ 10R140, Removal and Installation).
  2. Refer to: Rear Driveshaft (205-01 Driveshaft, Removal and Installation).
2. Remove and discard the extension housing bolts and remove the extension housing.

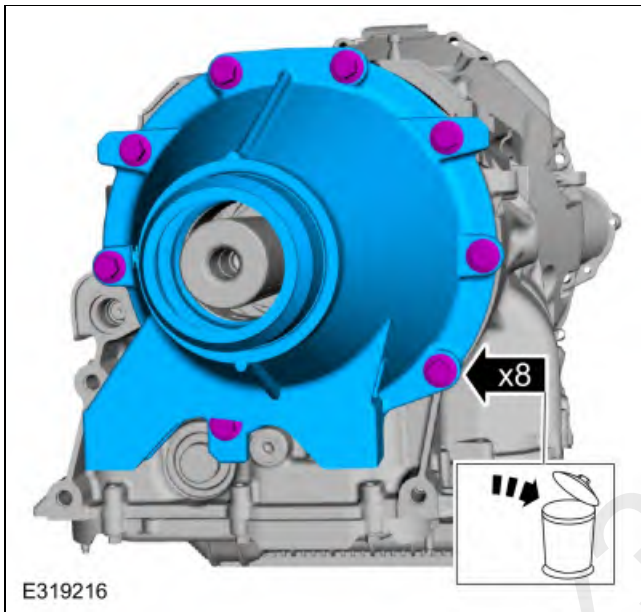

3. Remove and discard the O-ring seal (7B031) from the extension housing.




4. Remove and discard the rear bushing fluid feed seal (7H366).

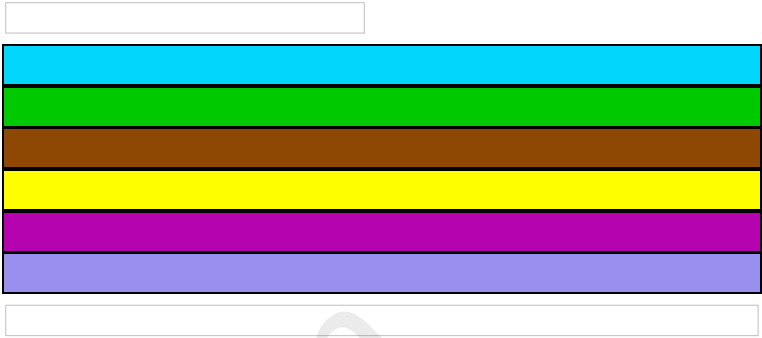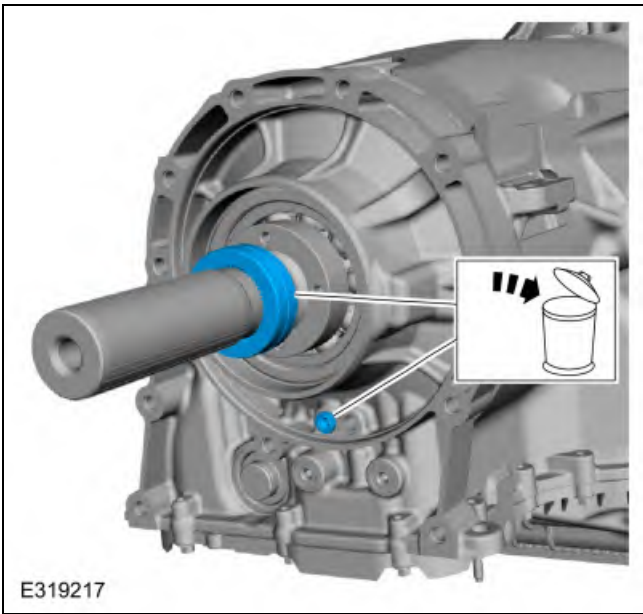


**Installation**


- 1. Install the new rear bushing fluid feed seal.

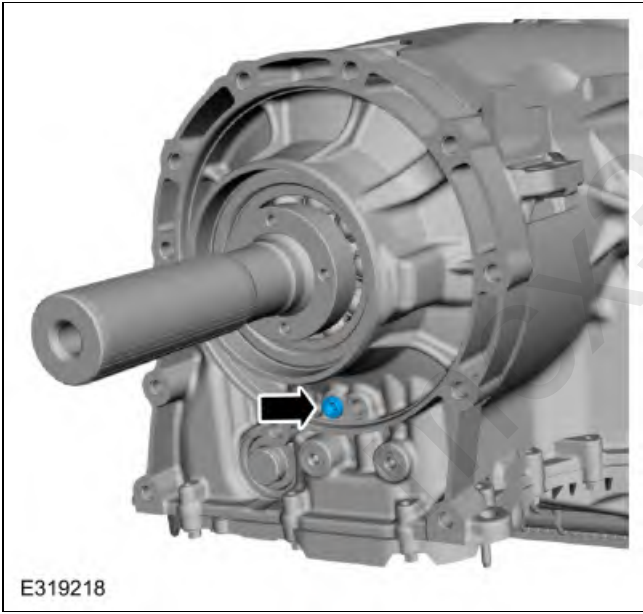

- 2. Install the new O-ring seal on the extension housing. Lubricate the O-ring seal with petroleum jelly.

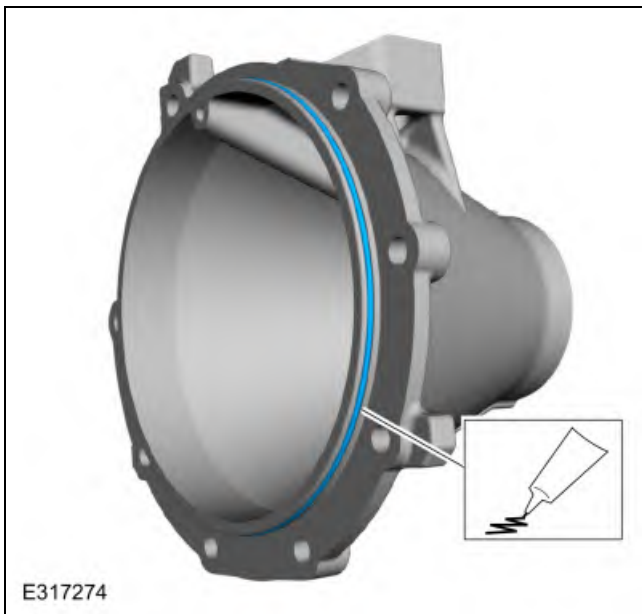

3. Install the new extension housing bolts in a crisscross pattern.  
Torque: 30 lb.ft (40 Nm)

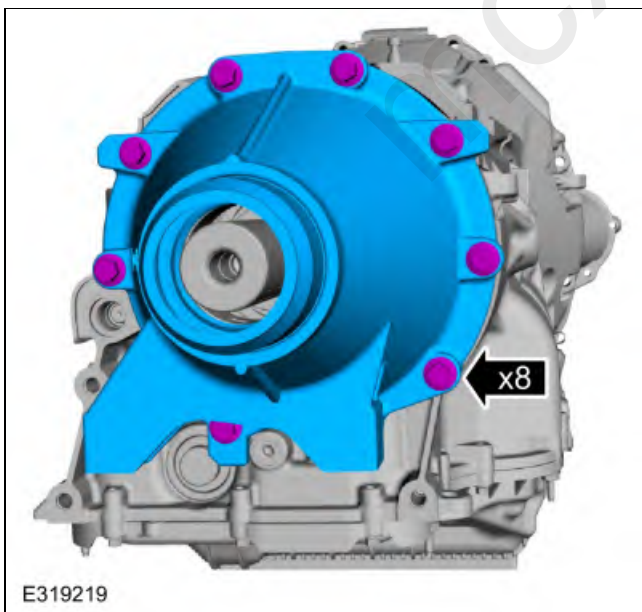

4. Install the following items:
  1. Refer to: Transmission Support Insulator (307-01B Automatic Transmission, Transfer Case and Power Transfer Unit - 10-Speed Automatic Transmission & 10R140, Removal and Installation).
  2. Refer to: Rear Driveshaft (205-01 Driveshaft, Removal and Installation).
5. Check the transmission fluid level.  
Refer to: Transmission Fluid Level Check (307-01B Automatic Transmission, Transfer Case and Power Transfer Unit - 10-Speed

mcx30.com