


Selector Shaft Seal

Special Tool(s) / General Equipment


	307-549 Installer, Shift Shaft Fluid Seal TKIT-2005D1-F1
---	--

Removal



- With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
- Disconnect the selector lever cable from the transmission manual lever.

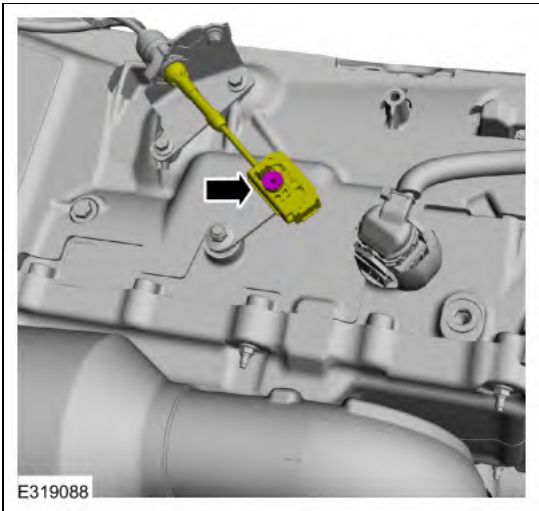

- Remove the nut and the manual lever.

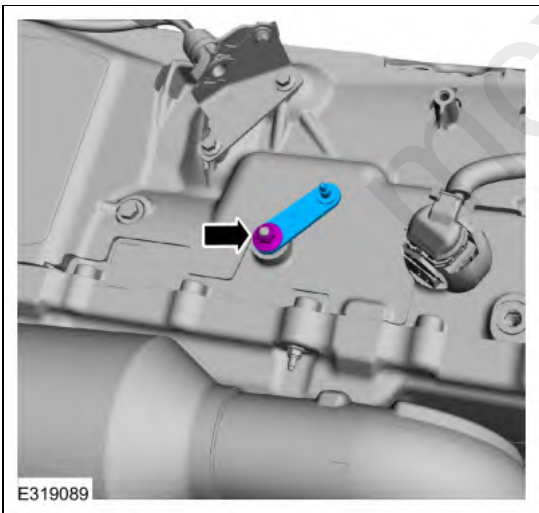


 - Remove and discard the selector shaft seal (7F337).

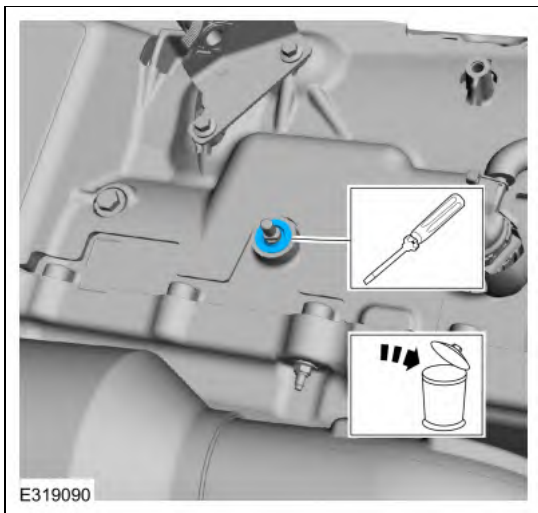


Installation


1. Slide the selector shaft seal onto the manual shaft.

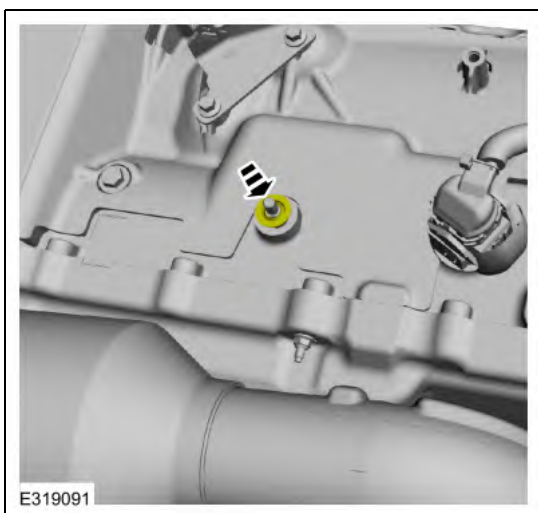

2. Using the special tool, install the selector shaft seal.
Use Special Service Tool: 307-549 Installer, Shift Shaft Fluid Seal.

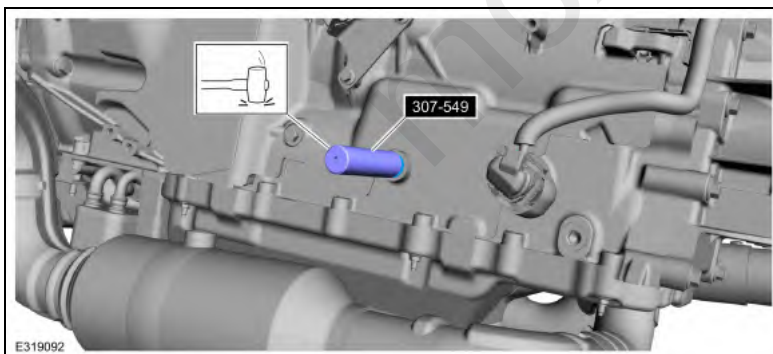

3. Install the manual lever and the nut.
Torque: 106 lb.in (12 Nm)

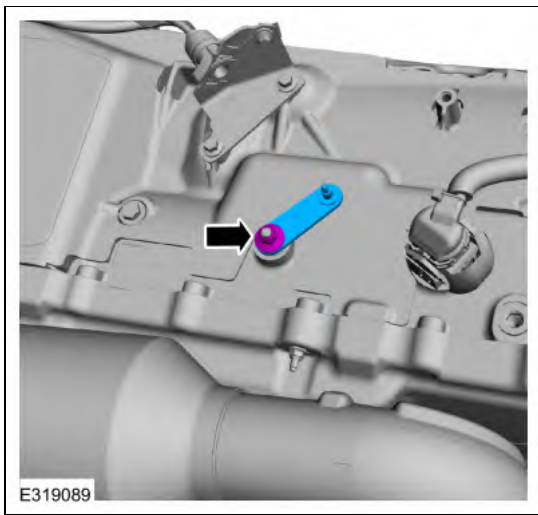

4. Adjust the selector lever cable.
Refer to: Selector Lever Cable Adjustment (307-05B Automatic Transmission External Controls - 10-Speed Automatic Transmission â€“ 10R140, General Procedures).
5. Check the transmission fluid level.
Refer to: Transmission Fluid Level Check (307-01B Automatic Transmission, Transfer Case and Power Transfer Unit - 10-Speed Automatic Transmission â€“ 10R140, General Procedures).

mcx30.com