


Transmission Support Insulator


Removal

1. Remove the transmission support crossmember.
Refer to: Transmission Support Crossmember (502-02 Full Frame and Body Mounting, Removal and Installation).
2. Remove the transmission support insulator (6D091) and discard the bolts (391558).

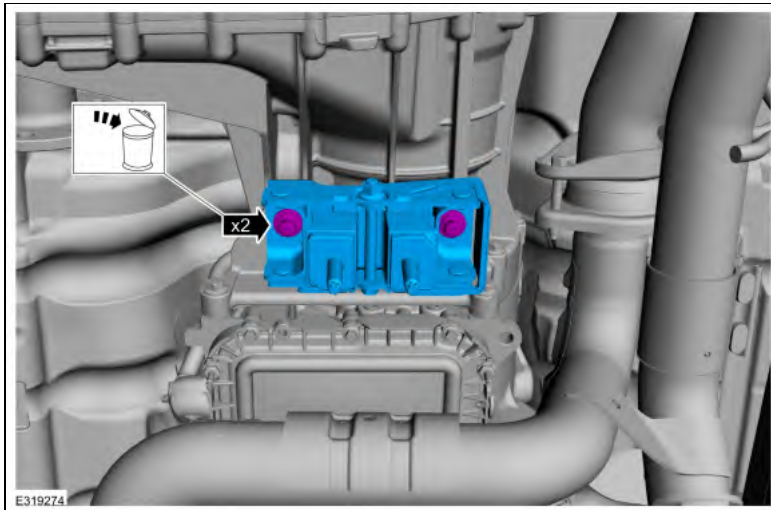

Installation

1. Install the transmission support insulator and the new transmission support insulator bolts.
Torque: 76 lb.ft (103 Nm)

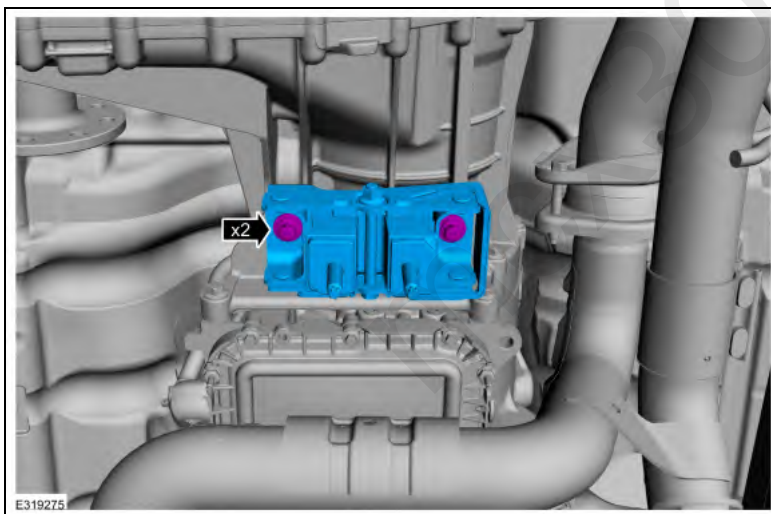

2. Install the transmission support crossmember.
Refer to: Transmission Support Crossmember (502-02 Full Frame and Body Mounting, Removal and Installation).

