


Turbine Shaft Speed (TSS) Sensor


Removal

1. Remove the main control valve body.
Refer to: Main Control Valve Body (307-01B Automatic Transmission, Transfer Case and Power Transfer Unit - 10-Speed Automatic Transmission â€“ 10R140, Removal and Installation).
2. Remove the TSS sensor.
 1. Slide the plastic lock to the unlocked position. While pressing the plastic tab, disconnect the electrical connector.
 2. Remove the bolt and the TSS sensor.

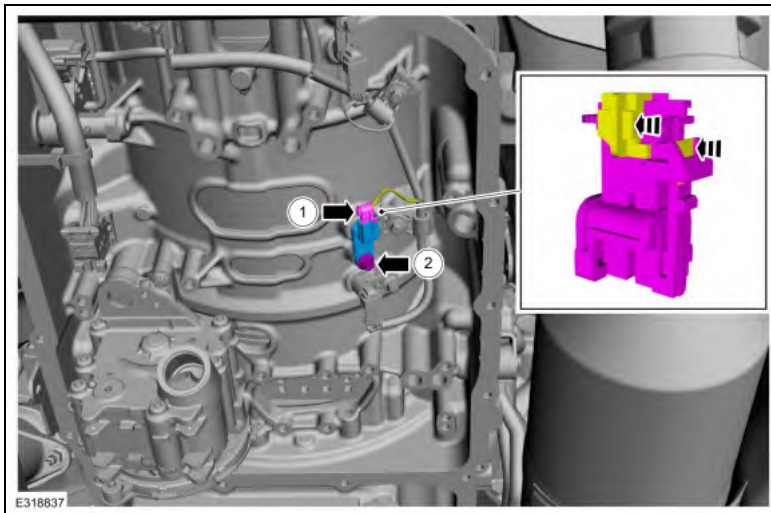

Installation

1. Install the TSS sensor.
 1. Install the TSS sensor bolt.
Torque: 62 lb.in (7 Nm)
 2. Connect the electrical connector. Slide the plastic lock to the locked position.

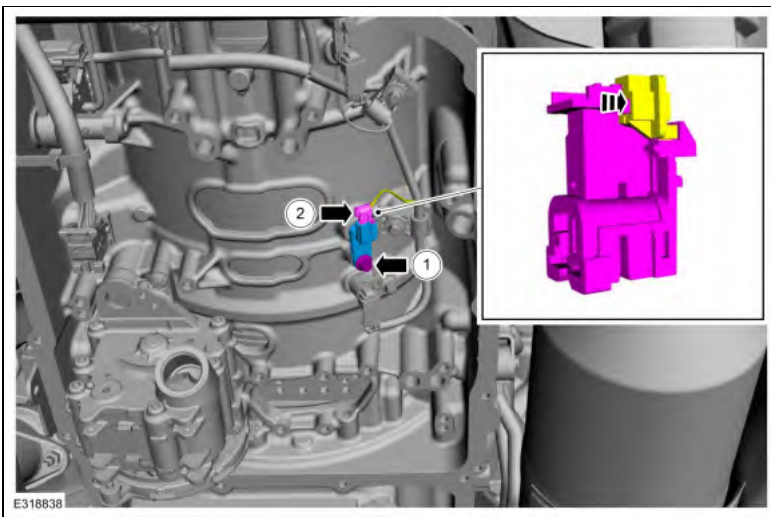

2. Install the main control valve body.
Refer to: Main Control Valve Body (307-01B Automatic Transmission, Transfer Case and Power Transfer Unit - 10-Speed Automatic Transmission â€“ 10R140, Removal and Installation).