

Transmission

1. To remove the transmission assembly.

Refer to: Transmission - 6.2L V8 (307-01B Automatic Transmission, Transfer Case and Power Transfer Unit - 10-Speed Automatic Transmission – 10R140, Removal and Installation).

Refer to: Transmission - 6.7L Power Stroke Diesel (307-01B Automatic Transmission, Transfer Case and Power Transfer Unit - 10-Speed Automatic Transmission – 10R140, Removal and Installation).

Refer to: Transmission - 7.3L 2V DEVCT V8 (239kW/320PS) (J0) (307-01B Automatic Transmission, Transfer Case and Power Transfer Unit - 10-Speed Automatic Transmission – 10R140, Removal and Installation).

mcx30.com