

Transmission Fluid Auxiliary Cooler - 6.2L V8


Special Tool(s) / General Equipment

	307-569 Disconnect Tool TOC Line (1/2) TKIT-2006U-F/FM TKIT-2006U-FLM/LM TKIT-2006U-ROW1 TKIT-2006U-ROW2
---	---


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Remove the radiator grille.
Refer to: Radiator Grille (501-08 Exterior Trim and Ornamentation, Removal and Installation).
2. Remove the transmission fluid cooler tube coupling secondary latches.

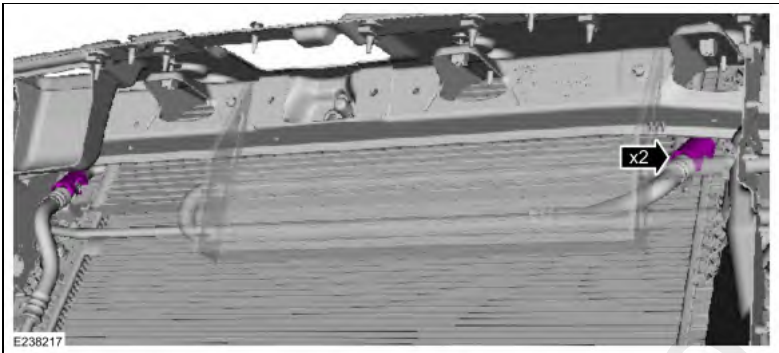


3. **NOTE:** Be prepared to collect escaping fluid.
Using the special tool, disconnect the auxiliary transmission fluid cooler RH tube.
Use Special Service Tool: 307-569 Disconnect Tool TOC Line (1/2).

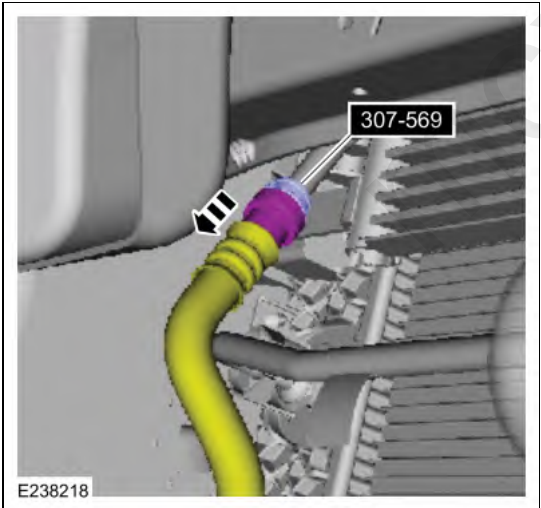

4. **NOTE:** Be prepared to collect escaping fluid.
Using the special tool, disconnect the auxiliary transmission fluid cooler LH tube.
Use Special Service Tool: 307-569 Disconnect Tool TOC Line (1/2).

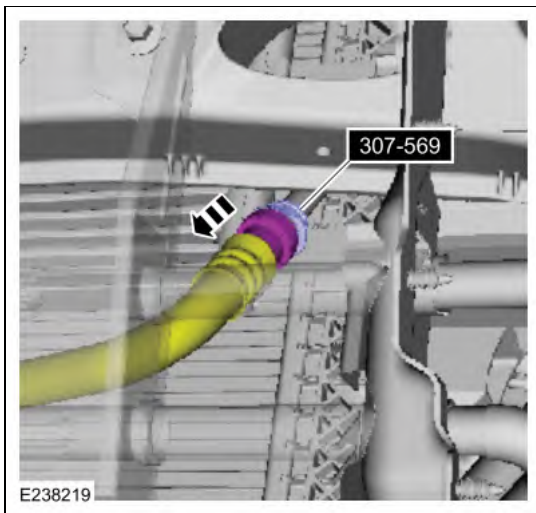

5. Remove the bolts, unlatch the retainer and remove the auxiliary transmission fluid cooler.
Torque: 62 lb.in (7 Nm)

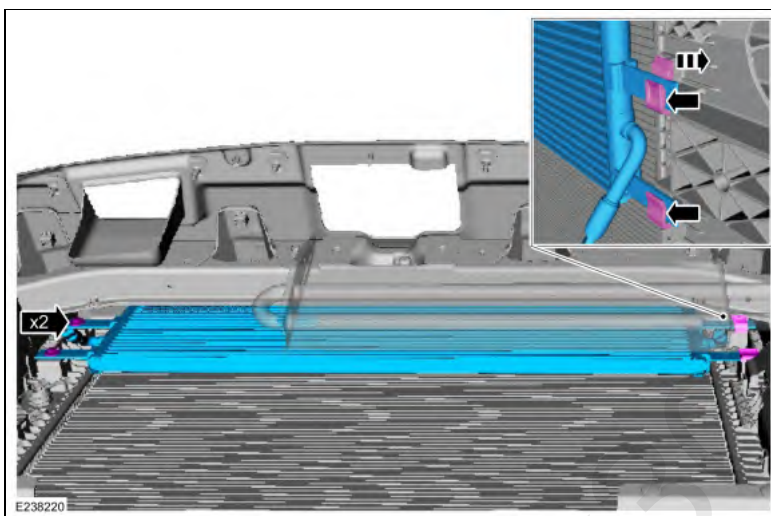

Installation

1. To install, reverse the removal procedure.
2. Check the transmission fluid level and adjust as necessary.
Refer to: Transmission Fluid Level Check (307-01A Automatic Transmission, Transfer Case and Power Transfer Unit - 6-Speed Automatic Transmission â€“ 6R100, General Procedures).
Refer to: Transmission Fluid Level Check (307-01A Automatic Transmission, Transfer Case and Power Transfer Unit - 6-Speed Automatic Transmission â€“ 6R100, General Procedures).