


Selector Lever


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the steering column shrouds.
Refer to: Steering Column Shrouds (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Disconnect the selector lever assembly electrical connector.

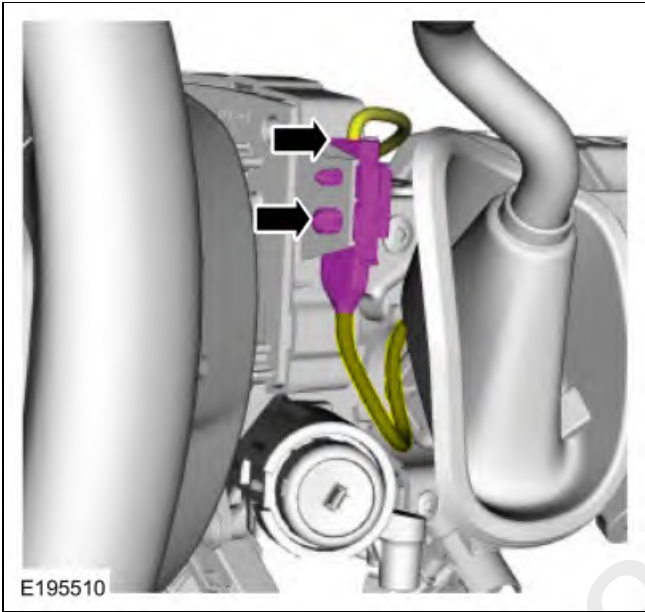

3. Remove the bolt and the selector lever assembly.
Torque: 159 lb.in (18 Nm)

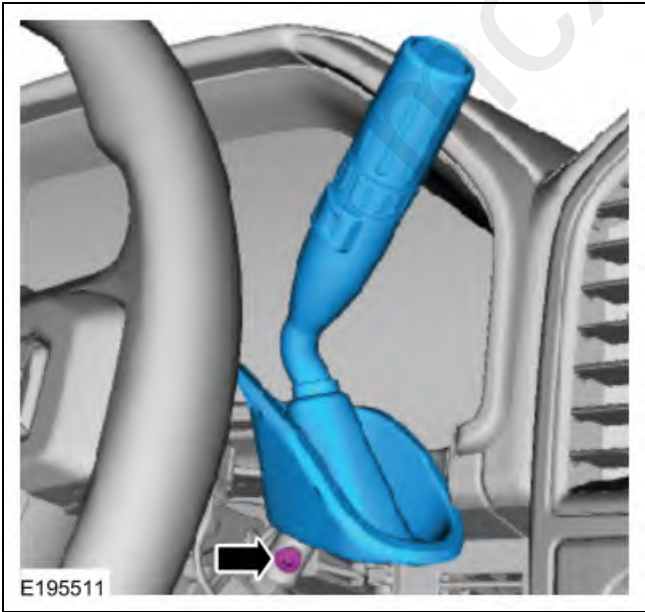

Installation

1. To install, reverse the removal procedure.

