
SelectShift Switch

Removal

1. **NOTE:** *The SelectShiftâ„¢ switch is not serviced separately. If a new SelectShiftâ„¢ switch is required, install a new column shift selector lever.*

Install a new selector lever.

Refer to: Selector Lever (307-05A Automatic Transmission External Controls - 6-Speed Automatic Transmission â€“ 6R100, Removal and Installation).

Installation

1. **NOTE:** *The SelectShiftâ„¢ switch is not serviced separately. If a new SelectShiftâ„¢ switch is required, install a new column shift selector lever.*

Install a new selector lever.

Refer to: Selector Lever (307-05A Automatic Transmission External Controls - 6-Speed Automatic Transmission â€“ 6R100, Removal and Installation).
