

Transmission Draining and Filling


Materials

Name	Specification
Motorcraft® Thread Sealant with PTFE TA-24-B	WSK-M2G350-A2
Motorcraft® MERCON® V Automatic Transmission and Power Steering Fluid XT-5-QMC	WSS-M2C919-E MERCON® V



1. **NOTE:** Make sure that the vehicle is level.

Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).



2. Remove the drain plug and drain the transmission fluid. Apply thread sealer to the drain plug. Install the drain plug.
Material: Motorcraft® Thread Sealant with PTFE / TA-24-B (WSK-M2G350-A2)
Torque: 177 lb.in (20 Nm)

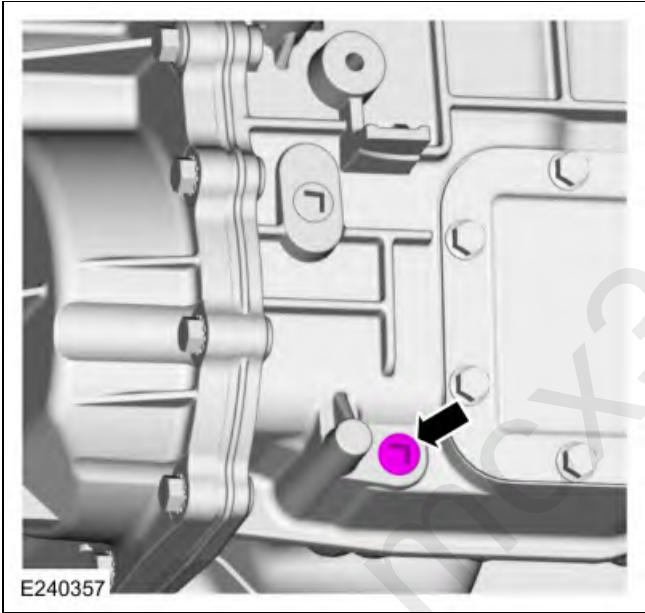

 
3. Remove the fill plug.

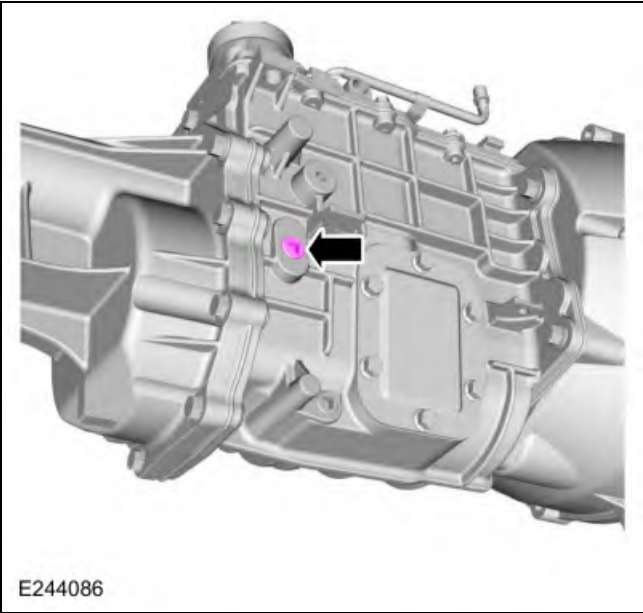

4. Fill the transmission to the bottom of the fill hole.
Refer to: Specifications (308-03 Manual Transmission, Specifications).
Material: Motorcraft® MERCON® V Automatic Transmission and Power Steering Fluid / XT-5-QMC (WSS-M2C919-E) (MERCON® V)

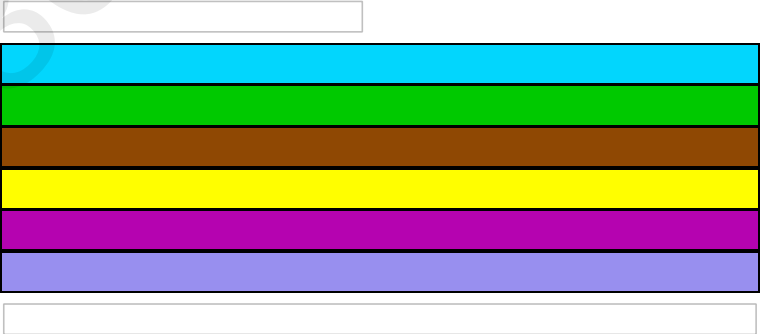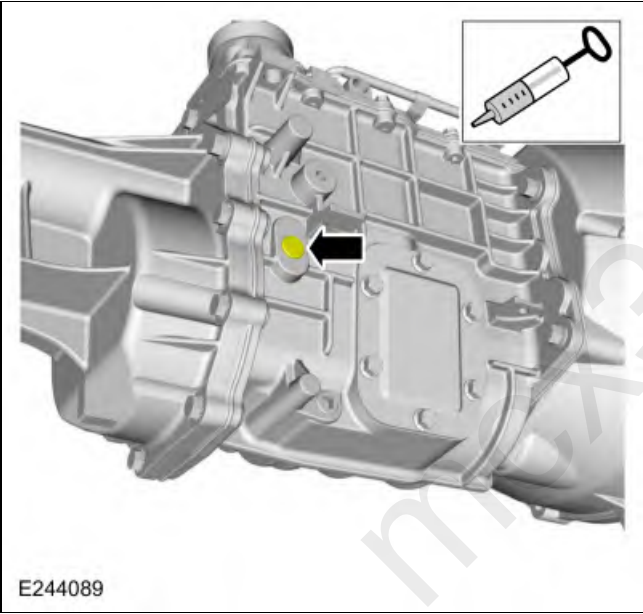

5. Apply thread sealer to the fill plug. Install the fill plug.
Material: Motorcraft® Thread Sealant with PTFE / TA-24-B (WSK-M2G350-A2)
Torque: 177 lb.in (20 Nm)

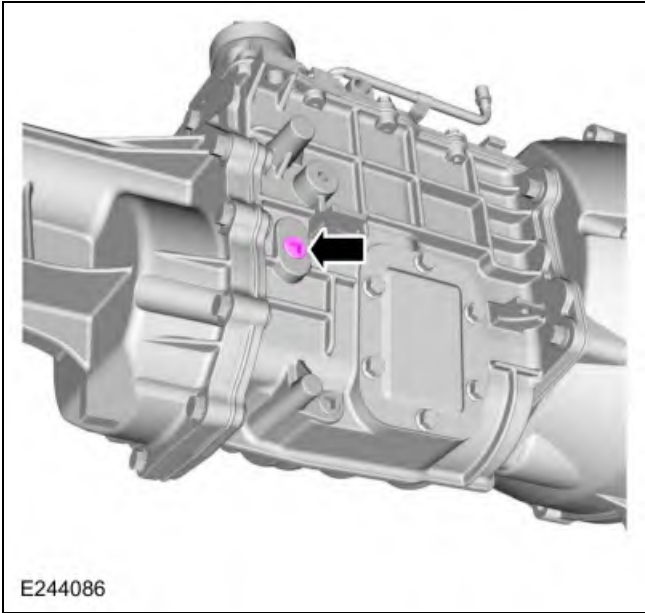

E244086



mcx30.com