

Transfer Case Front Output Shaft Seal

Removal

1. Remove the transfer case.
Refer to: Transfer Case (308-07B Transfer Case, Removal).
2. **NOTE:** *Transfer case front output shaft seal can only be replaced if the transfer case is disassembled.*

To replace the front output shaft seal, refer to transfer case disassembly.
Refer to: Transfer Case (308-07B Transfer Case, Disassembly and Assembly).

Installation

1. To install, reverse the removal procedure.

mcx30.com