

Transfer Case Rear Seal - Vehicles With: Slip Yoke

Special Tool(s) / General Equipment

 E232969	205-1018 Installation Tube
 E232990	308-942 Installer, Slip Yoke Seal


Removal

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
2. Remove the rear driveshaft.
Refer to: Rear Driveshaft (205-01 Driveshaft, Removal and Installation).
3. Remove the rear output shaft seal.



Installation

1. Using the special tool, install the rear output shaft seal.
Use Special Service Tool: 205-1018 Installation Tube. , 308-942 Installer, Slip Yoke Seal.

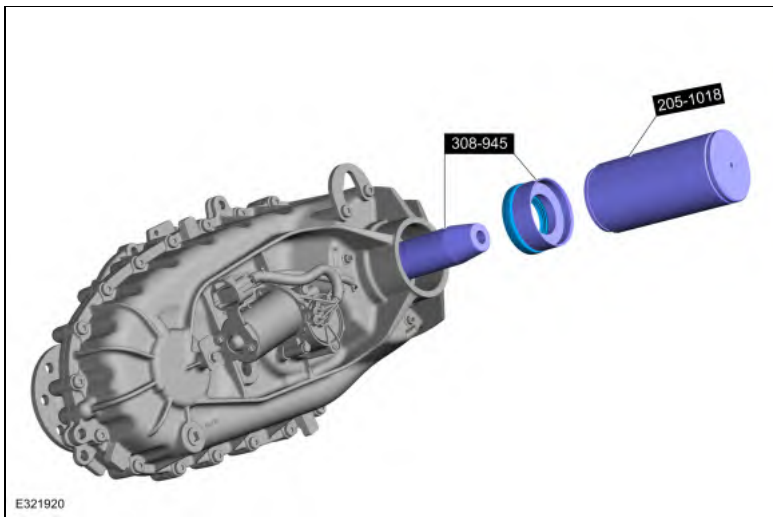

2. Install the rear driveshaft.
Refer to: Rear Driveshaft (205-01 Driveshaft, Removal and Installation).
3. Check the transfer case fluid.
Refer to: Transfer Case Draining and Filling (308-07B Transfer Case, General Procedures).