


Special Tool(s) / General Equipment

All vehicles


1. Remove the front driveshaft.
Refer to: Front Driveshaft (205-01 Driveshaft, Removal and Installation).
2. Drain the fluid if the transfer case is to be disassembled.
Refer to: Transfer Case Draining and Filling (308-07B Transfer Case, General Procedures).

3. Remove the rear driveshaft.
Refer to: Rear Driveshaft (205-01 Driveshaft, Removal and Installation).


4. Position the driveshaft aside.
 - Index mark the driveshaft and U-joint flange.
 - Remove and discard the U-joint strap bolts and U-joint straps.
 - Position the driveshaft aside and support it with mechanics wire.

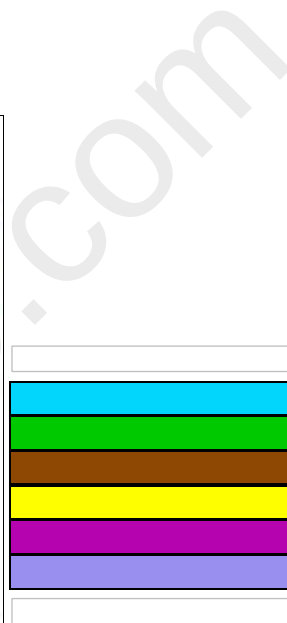[illegible]



5. Disconnect the shift motor electrical connectors and detach the harness retainer clip from the transfer case.

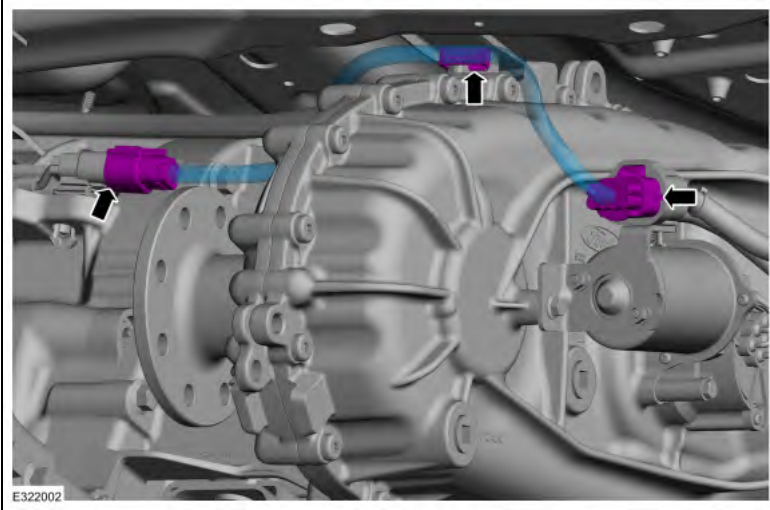

6. Disconnect the vent hose from the transfer case.

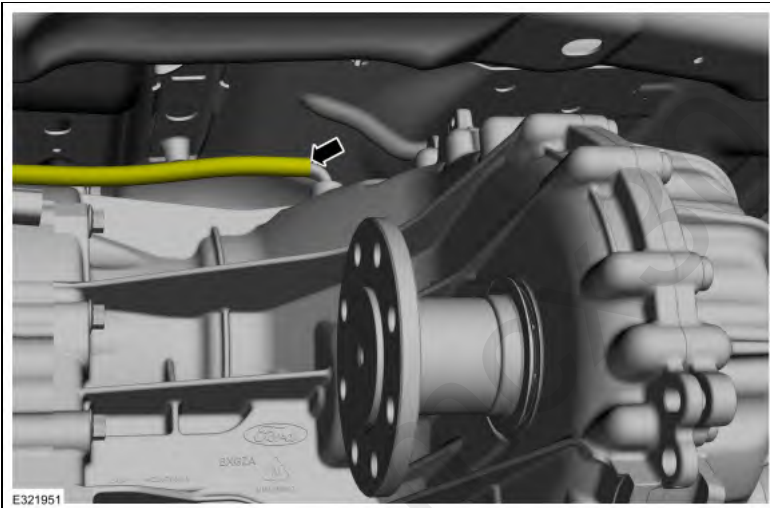

 7. Remove the transmission support crossmember.
Refer to: Transmission Support Crossmember (502-02 Full Frame and Body Mounting, Removal and Installation).
8. Remove the transmission mount bolts and the transmission mount.

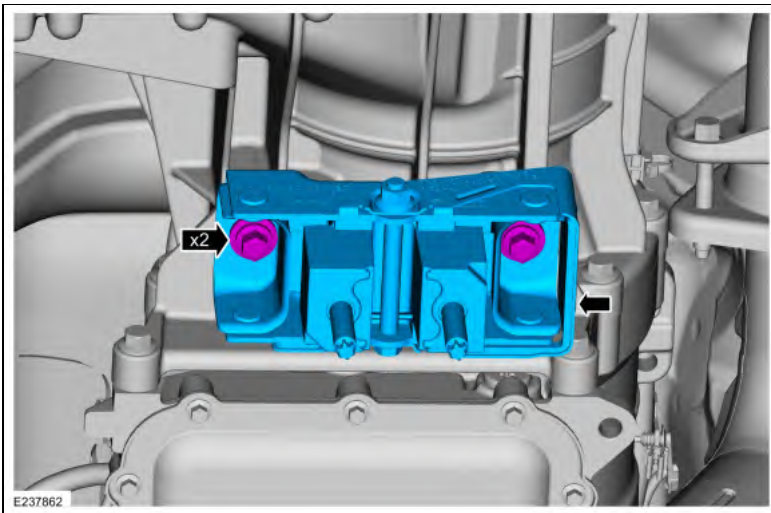

9. Using a transmission jack, remove the transfer case-to-transmission bolts and remove the transfer case.
Use the General Equipment: Transmission Jack

