

Exhaust Intermediate Pipe


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
2. Remove the rear muffler.
Refer to: Rear Muffler (309-00A Exhaust System - 6.2L V8, Removal and Installation).
3. **NOTE:** Install new clamp if necessary.

NOTE: During assembly, make sure the tab is fully seated in the notch on the pipe.

Loosen the front muffler-to-exhaust intermediate pipe clamp.
Torque: 41 lb.ft (55 Nm)

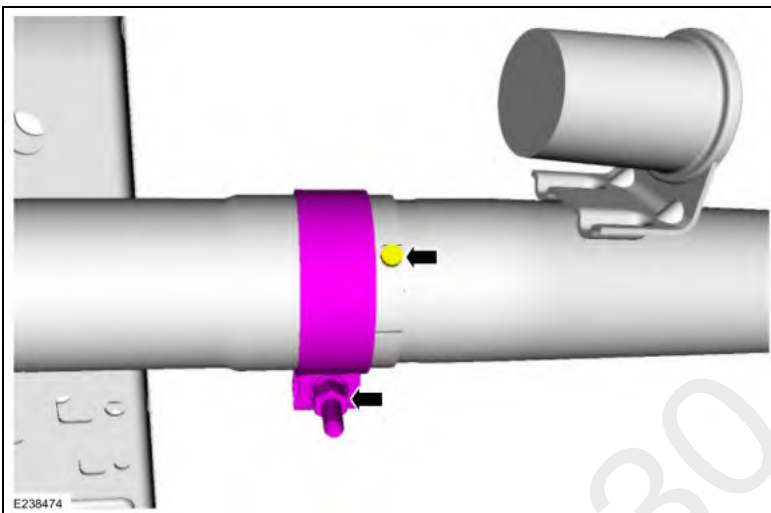

4. Remove the exhaust intermediate pipe.
Torque: 41 lb.ft (55 Nm)

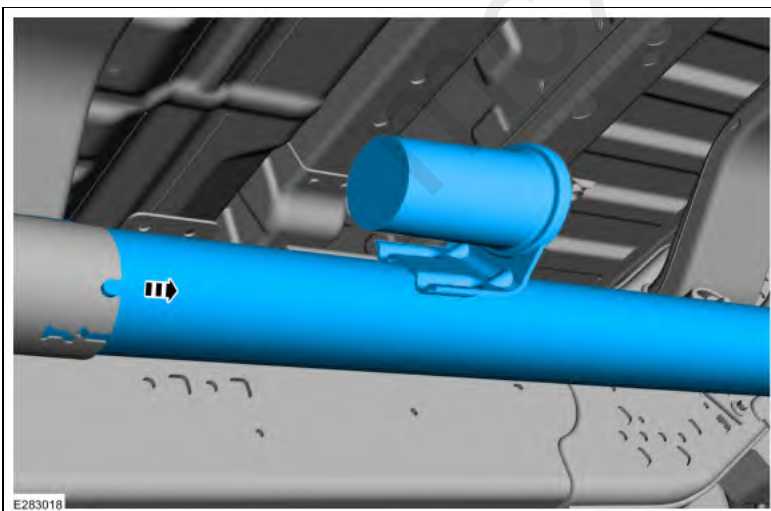

Installation

1. To install, reverse the removal procedure.
2. Clean all exhaust connections before reassembly.
3. Check the exhaust system for leaks.

