


Rear Stabilizer Bar Bushing - F-450/F-550

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the rear stabilizer bar.
Refer to: Rear Stabilizer Bar - F-450/F-550 (204-02 Rear Suspension, Removal and Installation).
2. On both sides.
Remove the rear stabilizer bar bushing.

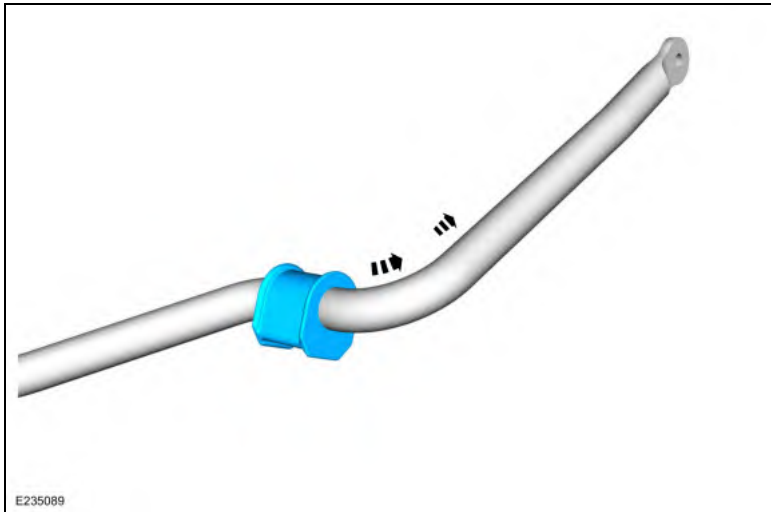

Installation

1. **NOTICE:** Do not use any lubrication on the stabilizer bar or the bushings or damage to the bushings may occur.

NOTE: Water may be applied to the bracket to aid in installation.

To install, reverse the removal procedure.