

Tailpipe - Pickup

Removal

WARNING: Keep the holes and tabs in the tailpipe free of foreign material or blockage. Do not modify or permanently remove the tailpipe section that contains the holes. Operating the vehicle with plugged or blocked holes or with modifications to the system may result in elevated exhaust gas temperatures, which may burn persons contacted by the exhaust gas. Failure to follow these instructions may result in serious personal injury to the technician or vehicle occupant(s).


NOTE: Do not modify, install an aftermarket part or permanently remove the tailpipe.

NOTE: Clean all exhaust connections before reassembly.


NOTE: Removal steps in this procedure may contain installation details.

NOTE: The configuration of the exhaust system varies depending on wheelbase and frame length. Typical application shown.

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
2. Remove the particulate matter sensor.
Refer to: Particulate Matter Sensor (303-14B Electronic Engine Controls - 6.7L Power Stroke Diesel, Removal and Installation).
3. Remove and discard the tailpipe flange nuts.
Torque: 41 lb.ft (55 Nm)

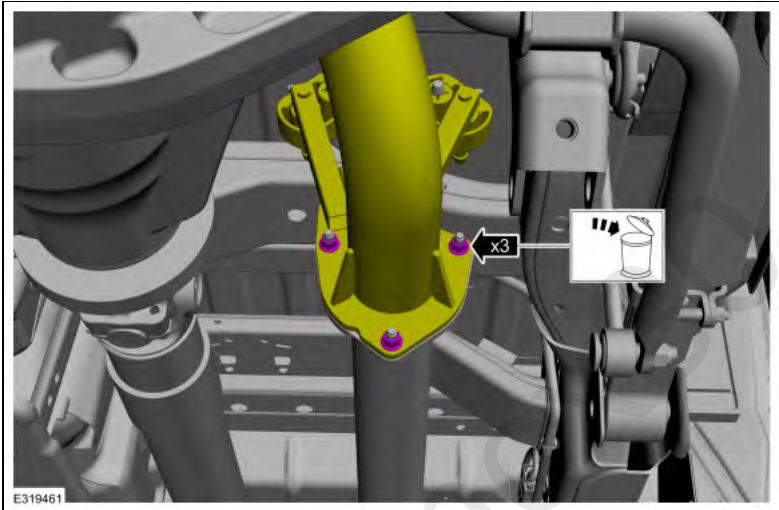


4. Detach the isolators.

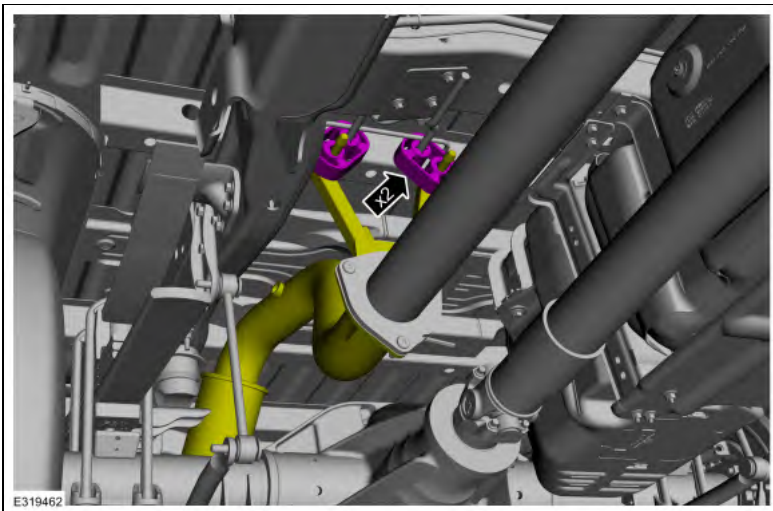


A horizontal bar chart consisting of six equally long, stacked rectangular segments. From top to bottom, the colors are cyan, green, brown, yellow, purple, and light blue. Each segment is outlined in black. A faint, large, light blue watermark with the letters 'SM' is visible across the center of the chart.

- Slide the tailpipe assembly off the exhaust isolator and remove the tailpipe assembly.

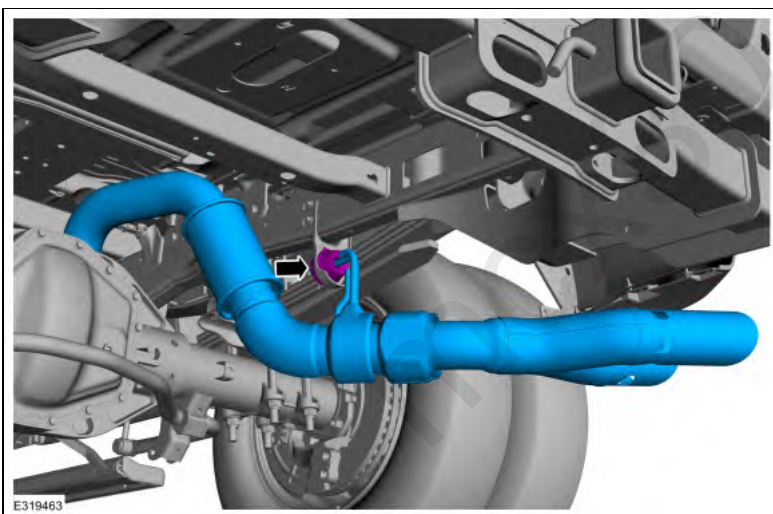


6. Remove and discard the gasket.

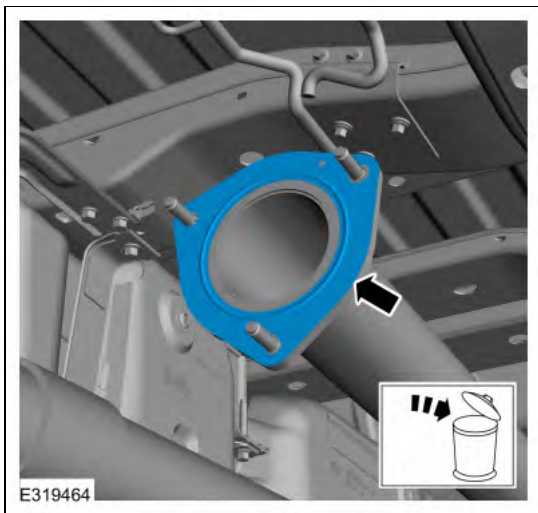

Installation

1.
 1. Clean and inspect the gasket surface.
 2. **NOTE:** Make sure that new gasket is installed.

Install the new gasket.

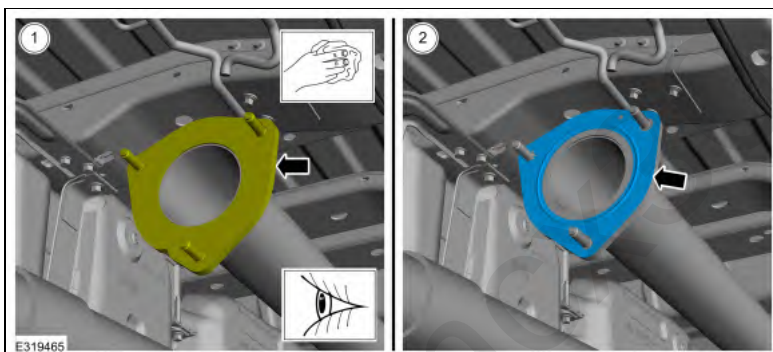

2. **NOTE:** Make sure that new flange nuts are installed.
- To install, reverse the removal procedure.
3. Check the exhaust system for leaks.