


Resonator

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
2. Remove the Exhaust intermediate pipe.
Refer to: Exhaust Intermediate Pipe (309-00C Exhaust System - 7.3L 2V DEVCT V8 (239kW/320PS) (J0), Removal and Installation).
3. **NOTE:** Install new clamp if necessary.



Loosen the dual catalytic converter-to-resonator pipe clamp.
Torque: 35 lb.ft (48 Nm)

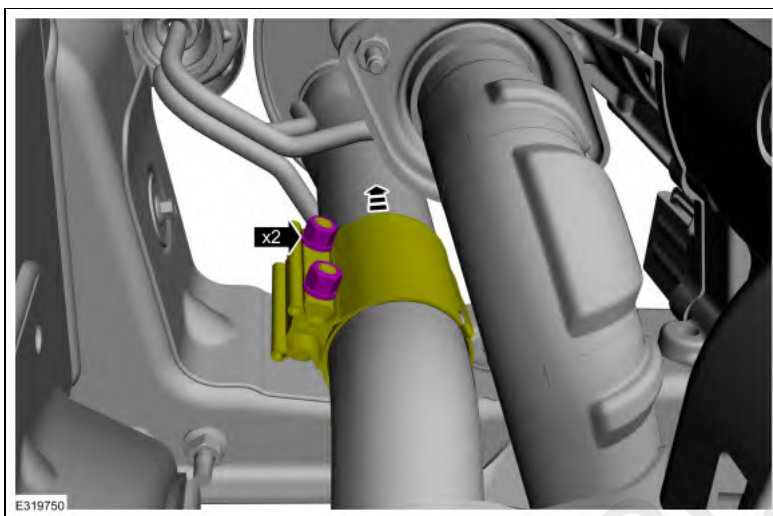

4. Remove and discard the bolts.
Torque: 30 lb.ft (40 Nm)

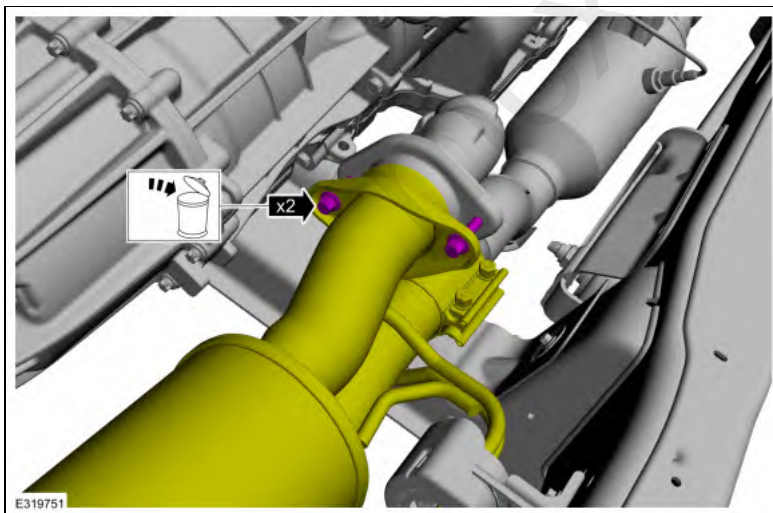

 5. Remove the front hanger bracket nuts and the resonator assembly.
Torque: 22 lb.ft (30 Nm)

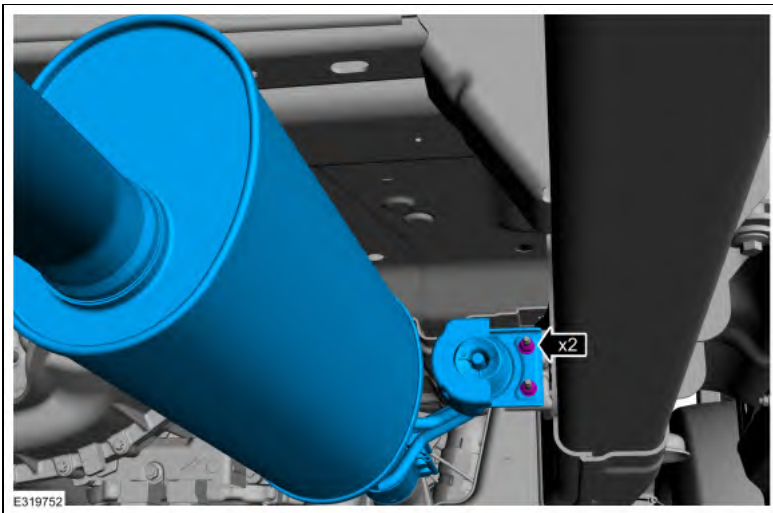

Installation

NOTE: If installing a new system, transfer the resonator isolators to new Exhaust system .

NOTE: Clean all exhaust connections before reassembly.

1. **NOTE:** Make sure that new bolts are installed.

To install, reverse the removal procedure.

2. Check the exhaust system for leaks.

mcx30.com