

Exhaust Intermediate Pipe - Chassis Cab

Removal


NOTE: Exhaust intermediate pipes will vary in configuration with different wheelbases. Typical application shown.

NOTE: Removal steps in this procedure may contain installation details.


1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
2. Remove the Catalytic converter.
Refer to: Catalytic Converter - Chassis Cab (309-00C Exhaust System - 7.3L 2V DEVCT V8 (239kW/320PS) (J0), Removal and Installation).
3. **NOTE:** Install new clamp if necessary.

NOTE: During assembly, make sure the tab is fully seated in the notch on the pipe.

Loosen the exhaust intermediate pipe-to-rear muffler pipe clamp.
Torque: 41 lb.ft (55 Nm)

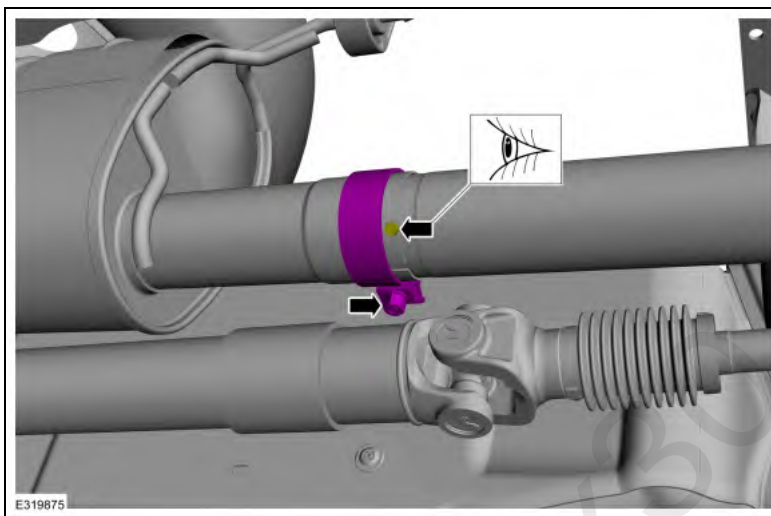

4. Remove the exhaust intermediate pipe.

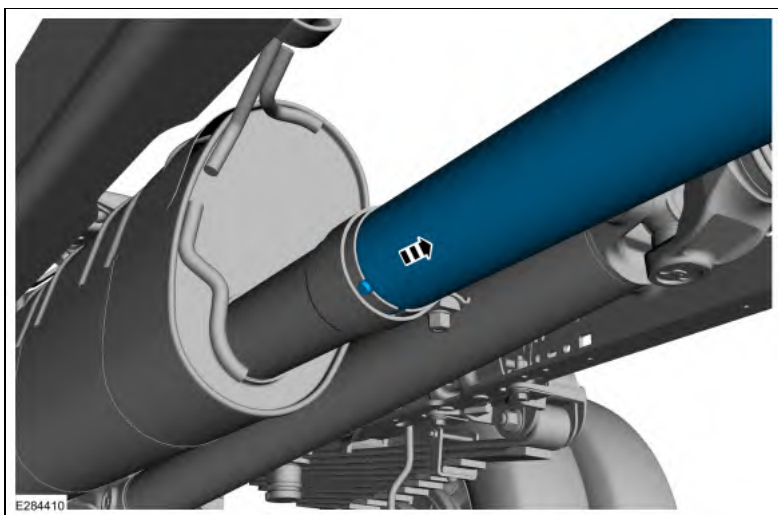

Installation

NOTE: *Clean all exhaust connections before reassembly.*

1. To install, reverse the removal procedure.
2. Check the exhaust system for leaks.