

Muffler and Tailpipe

Removal

NOTE: Removal steps in this procedure may contain installation details.


1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).

2. **NOTE:** Install new clamp if necessary.


NOTE: During assembly, make sure the tab is fully seated in the notch on the pipe.

Loosen the exhaust intermediate pipe-to-rear muffler pipe clamp.

Torque: 41 lb.ft (55 Nm)

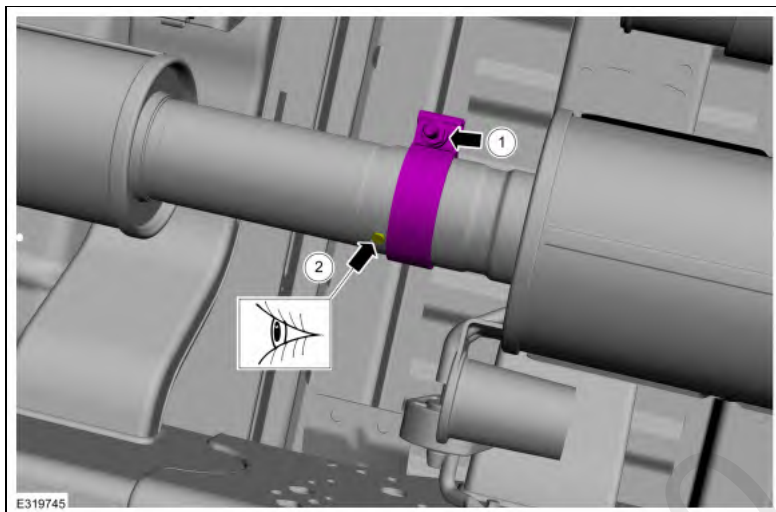


3. Remove the hanger bracket bracket nuts.
Torque: 22 lb.ft (30 Nm)

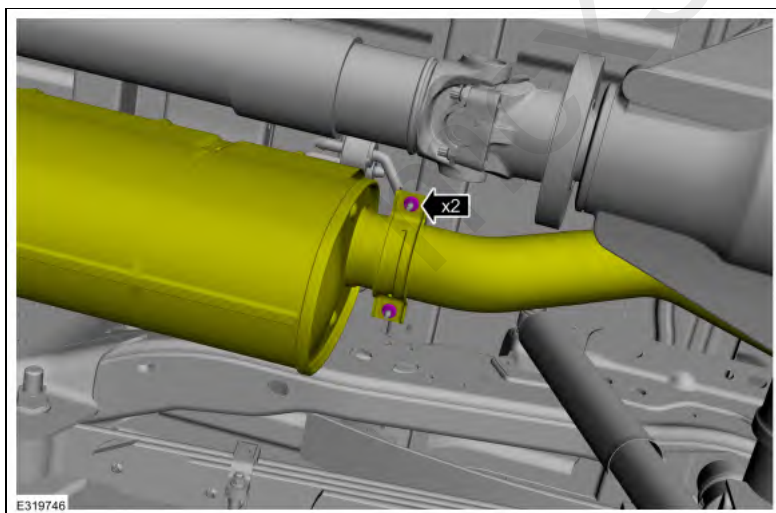

4. **NOTE:** If removing you will need a second person, if not position exhaust aside with a ratchet strap.

Remove the rear muffler tailpipe isolator bolts and remove the rear muffler.

Torque: 22 lb.ft (30 Nm)

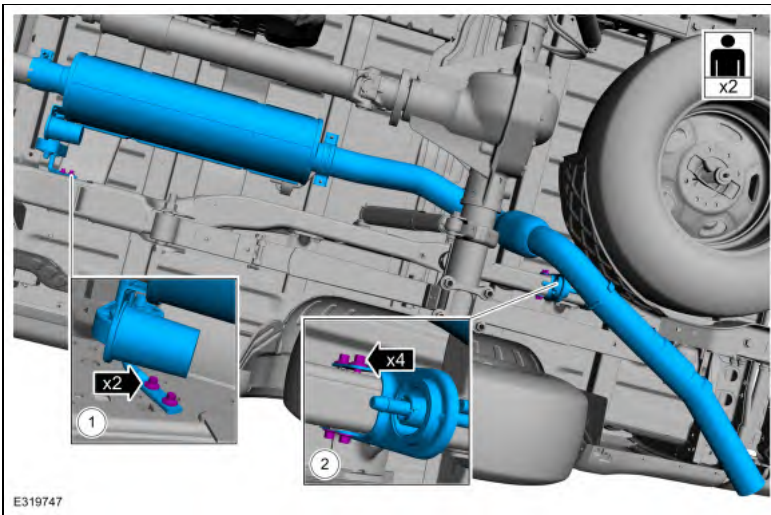

Installation

NOTE: If installing a new system, transfer the rear tail pipe isolators to new Exhaust system .

NOTE: Clean all exhaust connections before reassembly.

1. To install, reverse the removal procedure.
2. Check the exhaust system for leaks.