

Wheel Studs - Vehicles With: Dual Rear Wheels


Special Tool(s) / General Equipment

	211-023 (T74P-3044-A1) C-Frame and Screw
Vise	

Removal

NOTICE: Suspension fasteners are critical parts that affect the performance of vital components and systems. Failure of these fasteners may result in major service expense. Use the same or equivalent parts if replacement is necessary. Do not use a replacement part of lesser quality or substitute design. Tighten fasteners as specified.

1. Remove the rear wheel hub assembly.
Refer to: Wheel Hub (205-02E Wheel Hubs and Bearings - Full Floating Axle - Vehicles With: Ford 10.5 Inch Ring Gear, Removal and Installation).
2. Press the wheel stud from the wheel hub assembly.
Use Special Service Tool: 211-023 (T74P-3044-A1) C-Frame and Screw.
Use the General Equipment: Vise

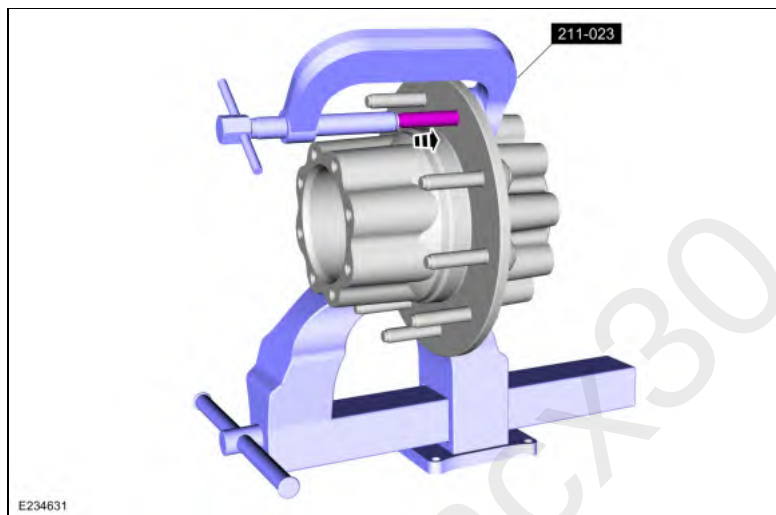


Installation

1. **NOTE:** Make sure that the serrations on the new wheel stud are aligned with those made by the original wheel stud in the wheel hub assembly.

NOTE: Make sure that the wheel stud is completely seated against the hub flange.

Press the wheel stud into the wheel hub assembly.
Use Special Service Tool: 211-023 (T74P-3044-A1) C-Frame and Screw.
Use the General Equipment: Vise

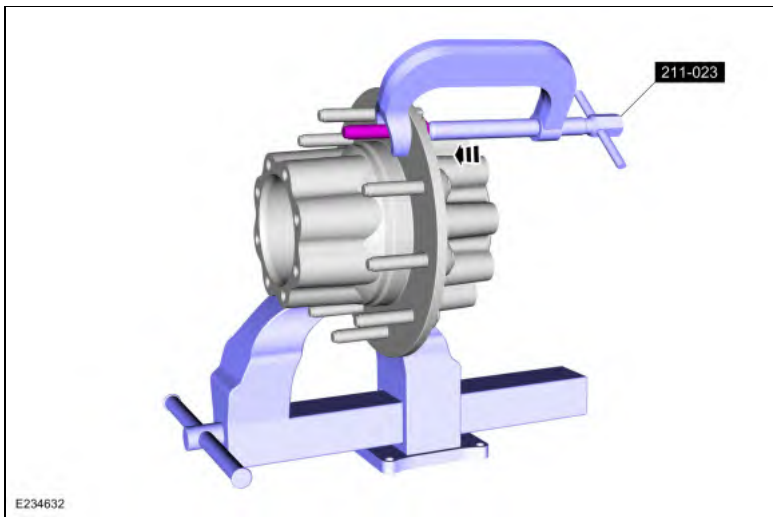

2. Install the rear wheel hub assembly.

Refer to: Wheel Hub (205-02E Wheel Hubs and Bearings - Full Floating Axle - Vehicles With: Ford 10.5 Inch Ring Gear, Removal and Installation).

mcx30.com