

Fuel Tank Draining



Special Tool(s) / General Equipment

	292-00004 Fuel Tanker 100 GPM
---	----------------------------------


Draining

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
2. Disconnect the negative battery cable.
Refer to: Battery Disconnect and Connect (414-01 Battery, Mounting and Cables, General Procedures).
3. **NOTE:** *Typical configuration shown, others similar*

Loosen the clamps and disconnect the hoses.
Torque: 33 lb.in (3.7 Nm)

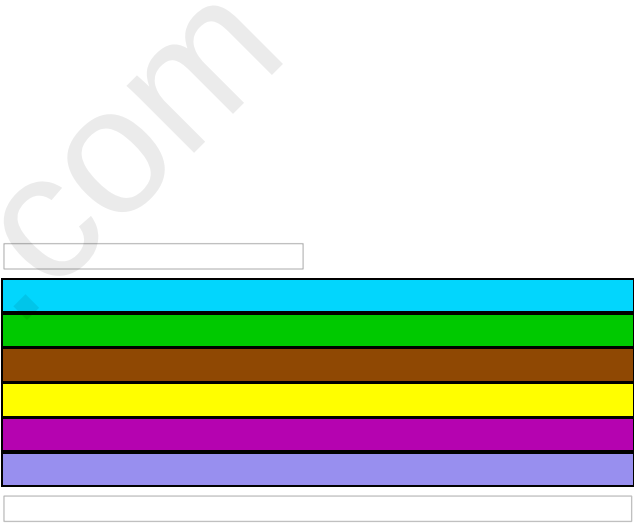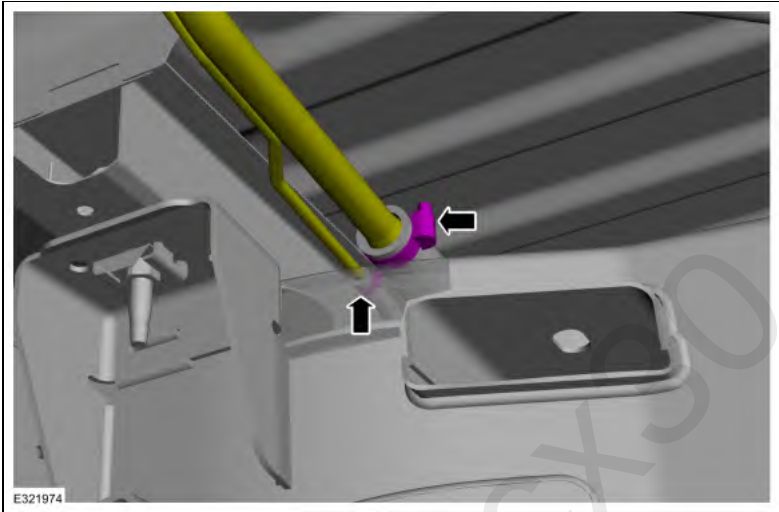

4. Insert the hose from the fuel storage tanker and siphon the fuel through the hose.
Use Special Service Tool: 292-00004 Fuel Tanker 100 GPM.

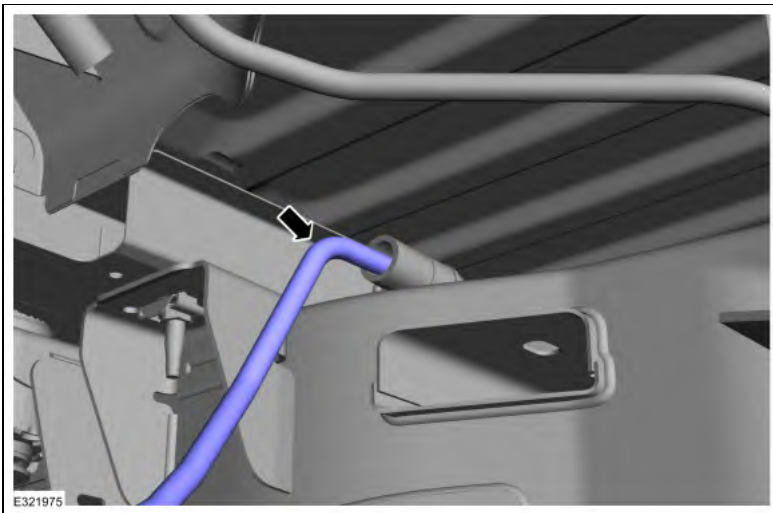

mcx30.com