

## Fuel Lines - Vehicles With: Midship Fuel Tank

### Removal

**NOTE:** Removal steps in this procedure may contain installation details.

#### All vehicles




**WARNING:** Do not smoke, carry lighted tobacco or have an open flame of any type when working on or near any fuel-related component. Highly flammable mixtures may be present and may be ignited. Failure to follow these instructions may result in serious personal injury.


1. Refer to: Gasoline and Gasoline-Ethanol Fuel Systems Health and Safety Precautions (100-00 General Information, Description and Operation).
2. Disconnect the battery ground cable.  
Refer to: Battery Disconnect and Connect (414-01 Battery, Mounting and Cables, General Procedures).
3. With the vehicle in NEUTRAL, position it on a hoist.  
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
4. Release the fuel system pressure.  
Refer to: Fuel System Pressure Release (310-00A Fuel System - General Information - 6.2L V8, General Procedures).
5. **NOTE:** Wrap the fuel line connector with a shop towel to absorb any residual fuel pressure during the removal of the fuel line.

Disconnect the quick release coupling.

Refer to: Quick Release Coupling (310-00A) .

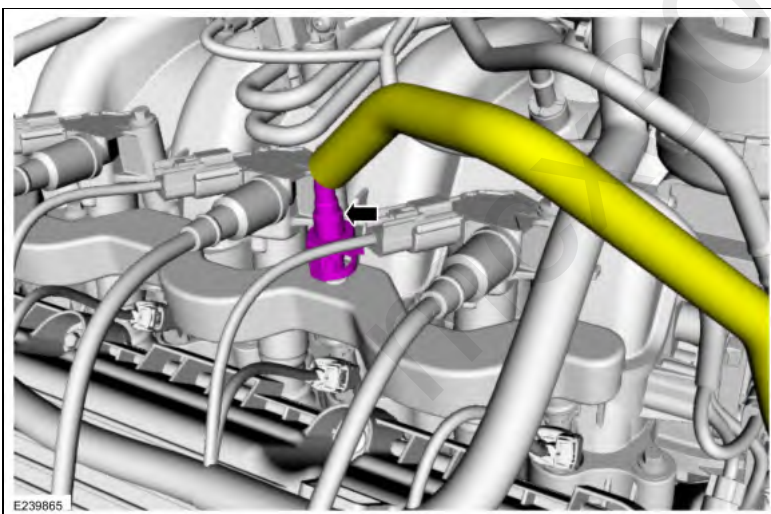


6. Disconnect the quick release coupling.  
Refer to: Quick Release Coupling (310-00A) .

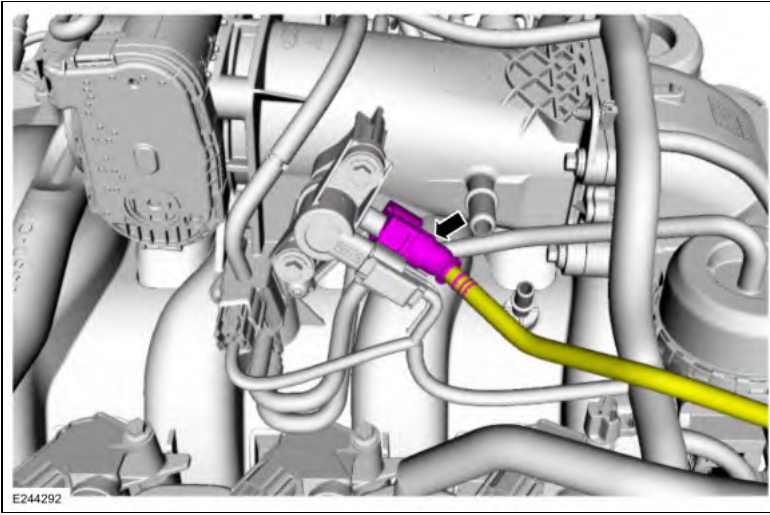


|  |
|--|
|  |
|  |
|  |
|  |
|  |
|  |
|  |
|  |
|  |
|  |

7. Remove the bolts.  
*Torque: 35 lb.ft (48 Nm)*

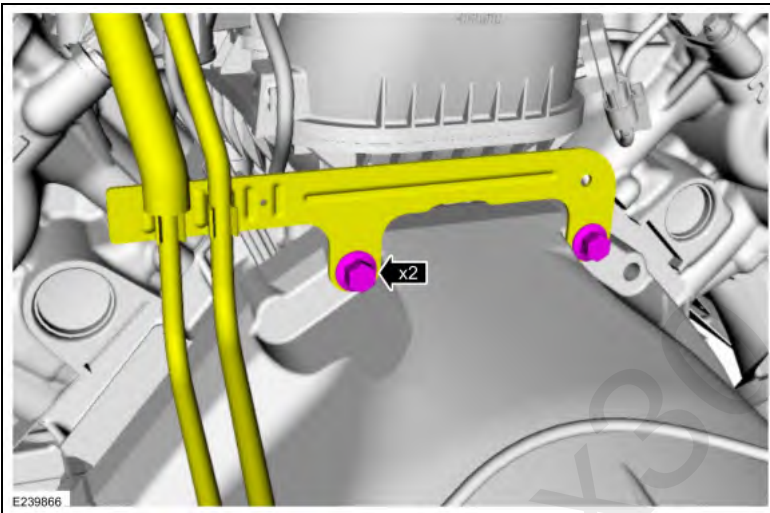


|  |
|--|
|  |
|  |
|  |
|  |
|  |
|  |
|  |
|  |
|  |
|  |

8. Disconnect the selector lever cable from the transmission lever.

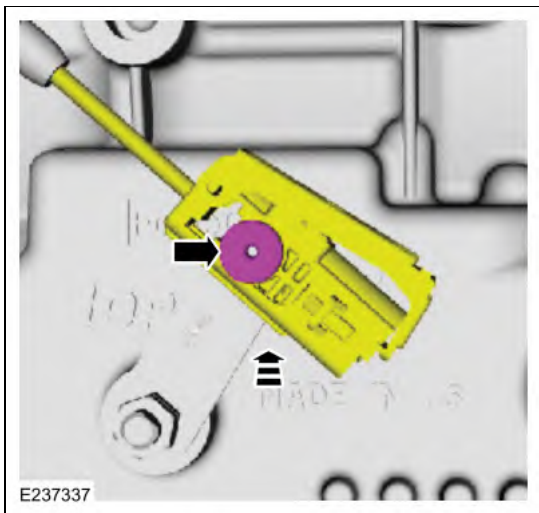


9. Remove the selector lever retainer bolt. Position the cable aside.  
Torque: 62 lb.in (7 Nm)

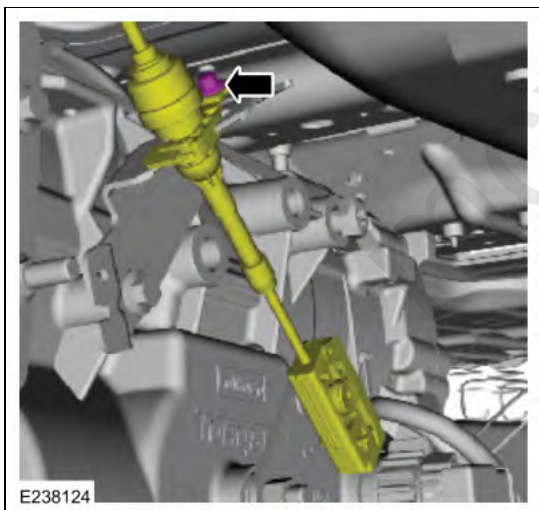

10. **NOTE:** Wrap the fuel line connector with a shop towel to absorb any residual fuel pressure during the removal of the fuel line.

**NOTE:** Manual transmission shown, automatic transmission similar.


- Disconnect the retainer from the transmission.
- Disconnect the quick release couplings and remove the fuel lines.  
Refer to: Quick Release Coupling (310-00A).

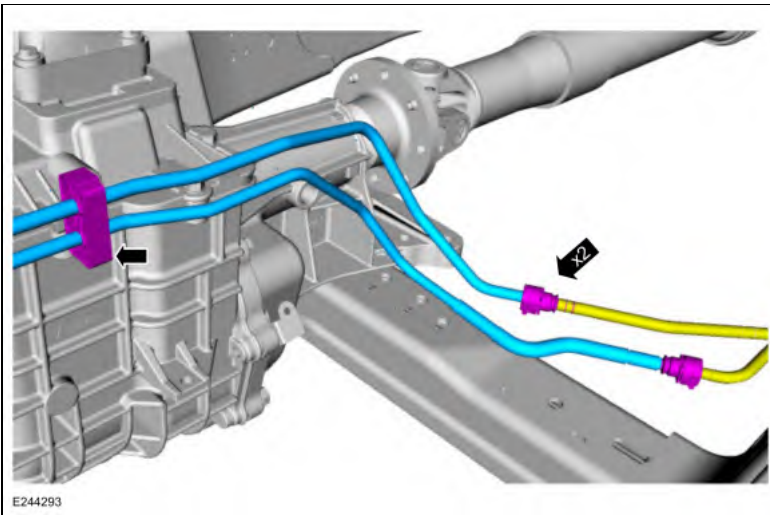

#### 142 inch and 164 inch wheelbase

11. **NOTE:** *Wrap the fuel line connector with a shop towel to absorb any residual fuel pressure during the removal of the fuel line.*


Remove the fuel lines by detaching the retainer clips and disconnecting the quick connectors.  
Refer to: Quick Release Coupling (310-00A) .

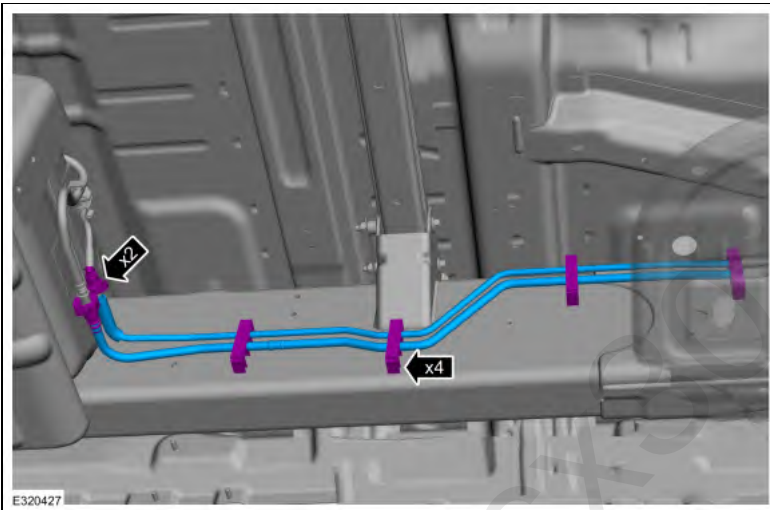

#### 175 inch wheelbase

12. **NOTE:** *Wrap the fuel line connector with a shop towel to absorb any residual fuel pressure during the removal of the fuel line.*


Remove the fuel lines by detaching the retainer clips and disconnecting the quick connectors.  
Refer to: Quick Release Coupling (310-00A) .

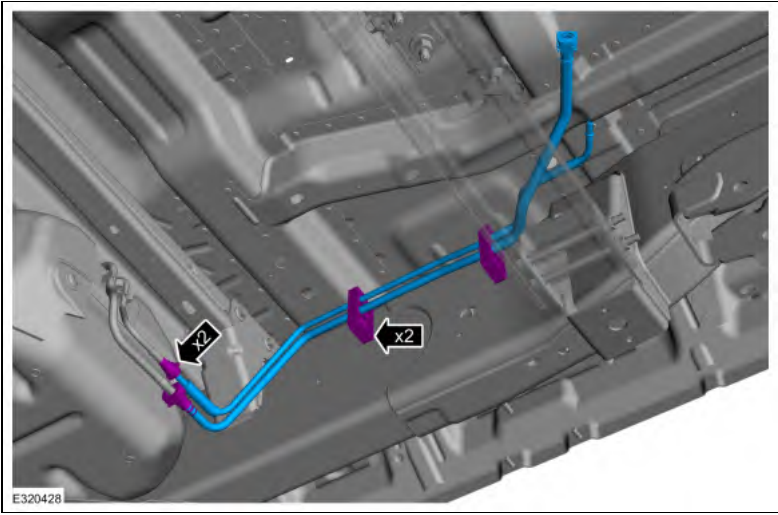

**179 inch wheelbase**

13. **NOTE:** *Wrap the fuel line connector with a shop towel to absorb any residual fuel pressure during the removal of the fuel line.*

Remove the fuel lines by detaching the retainer clips and removing the quick connectors.  
Refer to: Quick Release Coupling (310-00A) .

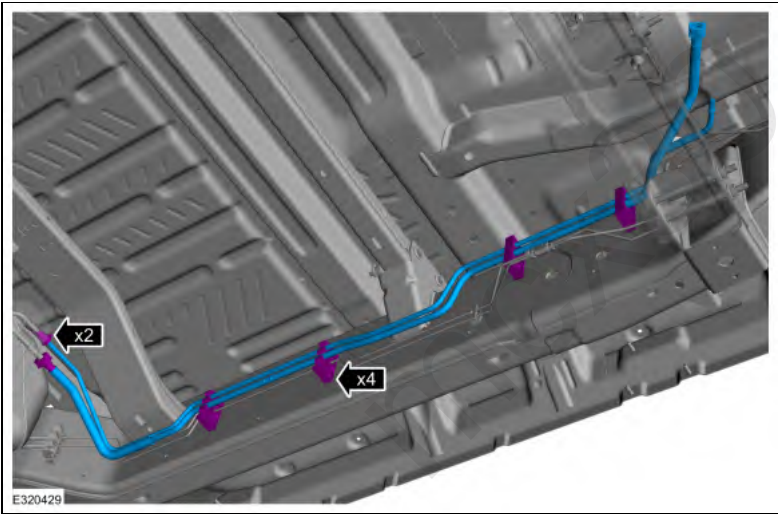

**Installation**

1. To install, reverse the removal procedure.