


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
2. Release the fuel system pressure.
Refer to: Fuel System Pressure Release (310-00B Fuel System - General Information - 6.7L Power Stroke Diesel, General Procedures).
3. Disconnect the battery ground cable.
Refer to: Battery Disconnect and Connect (414-01 Battery, Mounting and Cables, General Procedures).
4. Drain the fuel tank.
Refer to: Fuel Tank Draining (310-00B Fuel System - General Information - 6.7L Power Stroke Diesel, General Procedures).
5. **NOTE:** *Typical application shown.*

Loosen the hose clamps and disconnect the fuel tank filler pipe and vent hose from the fuel filler neck.
Torque: 44 lb.in (5 Nm)

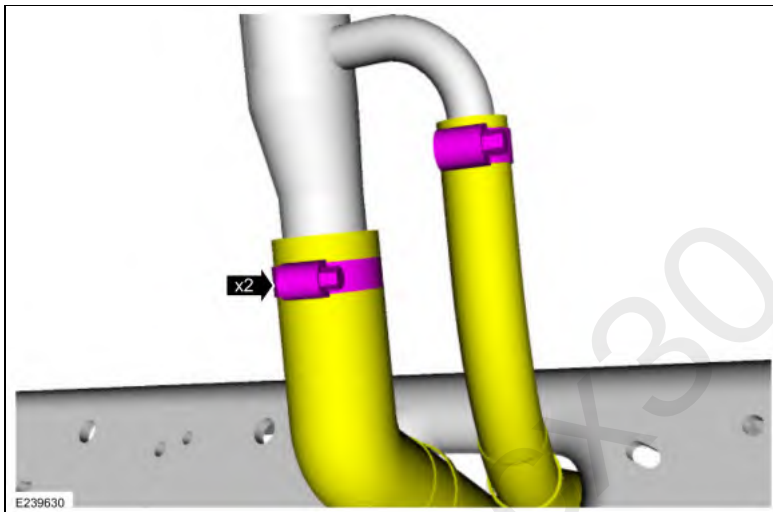


6. **NOTE:** *Typical application shown.*

Using a suitable lifting and lowering tool, support the fuel tank. Remove the fuel tank strap bolts and partially lower the fuel tank for access.
Torque: 66 lb.ft (90 Nm)

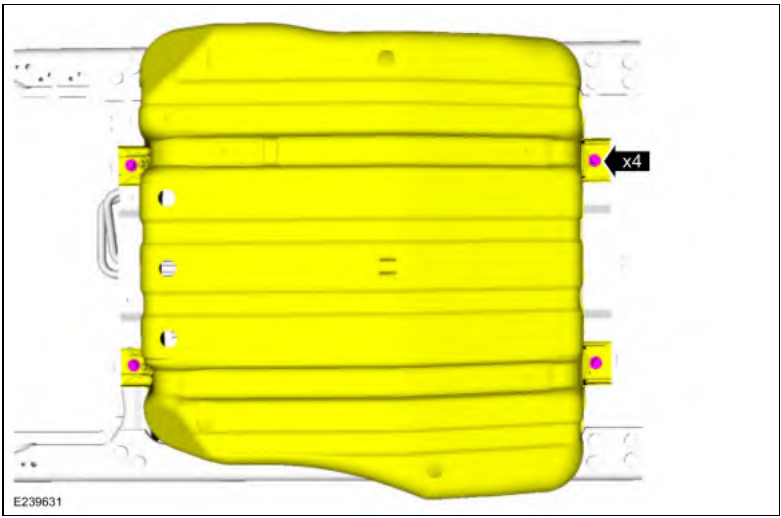


7. **NOTE:** Typical application shown.

Disconnect the electrical connector and the quick release couplings. Remove the fuel tank assembly from the vehicle.
Refer to: Quick Release Coupling (310-00 Fuel System - General Information - 6.7L Power Stroke Diesel) .

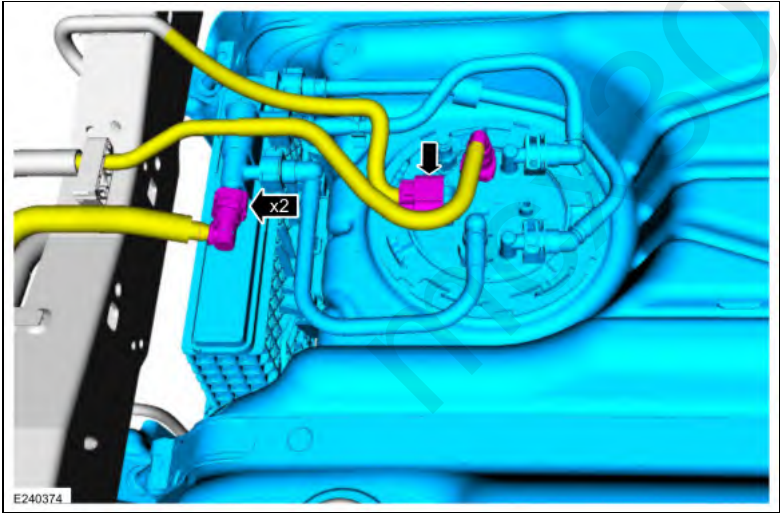


8. **NOTE:** Typical application shown.

If necessary, remove the fuel filler pipe rubber hoses from the fuel tank.
Torque: 44 lb.in (5 Nm)

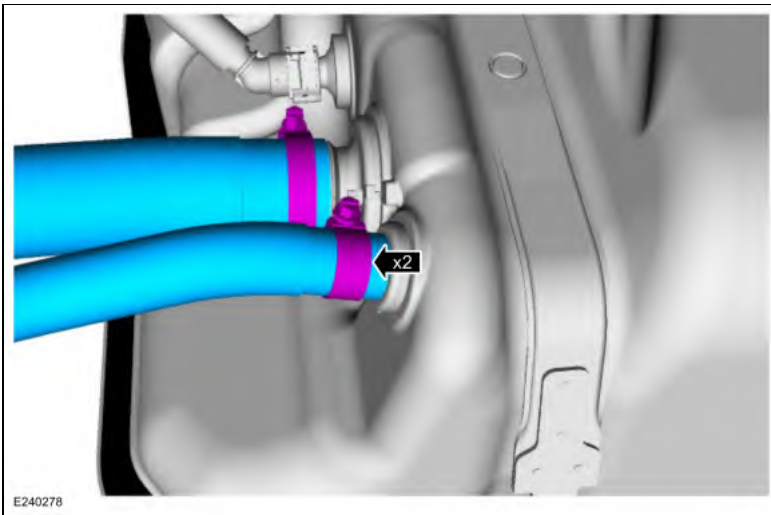

9. **NOTE:** Typical application shown.

If necessary, remove the fuel tank shield strap nuts and remove the fuel tank.
Torque: 53 lb.ft (72 Nm)

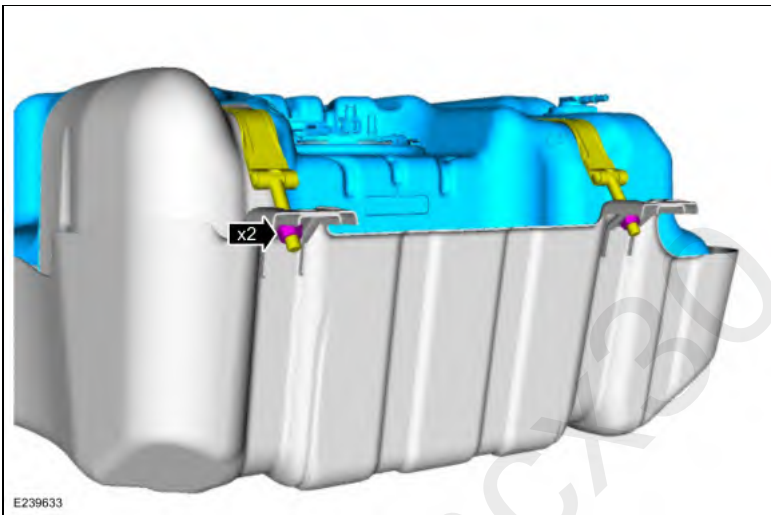

Installation

1. To install, reverse the removal procedure.