

Fuel Tank Filler Pipe - Vehicles With: Aft of Axle Fuel Tank


Removal

NOTE: Fuel systems will vary in configuration with different wheelbases. Typical application shown.

NOTE: Removal steps in this procedure may contain installation details.


1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
2. Disconnect the battery ground cable.
Refer to: Battery Disconnect and Connect (414-01 Battery, Mounting and Cables, General Procedures).
3. Drain the fuel tank until the fuel level is at or below half of a tank.
Refer to: Fuel Tank Draining (310-00B Fuel System - General Information - 6.7L Power Stroke Diesel, General Procedures).
4. **NOTE:** Typical application shown.

Remove the 3 screws from the filler pipe. Position the fuel filler pipe out of the fuel filler opening or bracket.
Torque: 106 lb.in (12 Nm)

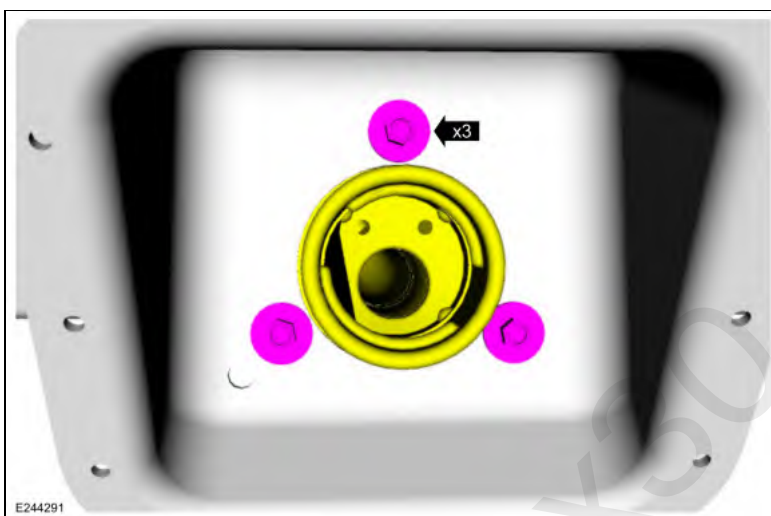

5. **NOTE:** Typical application shown.


Using a suitable lifting and lowering tool, support the fuel tank. Remove the fuel tank strap bolts and partially lower the fuel tank for access.
Torque: 66 lb.ft (90 Nm)

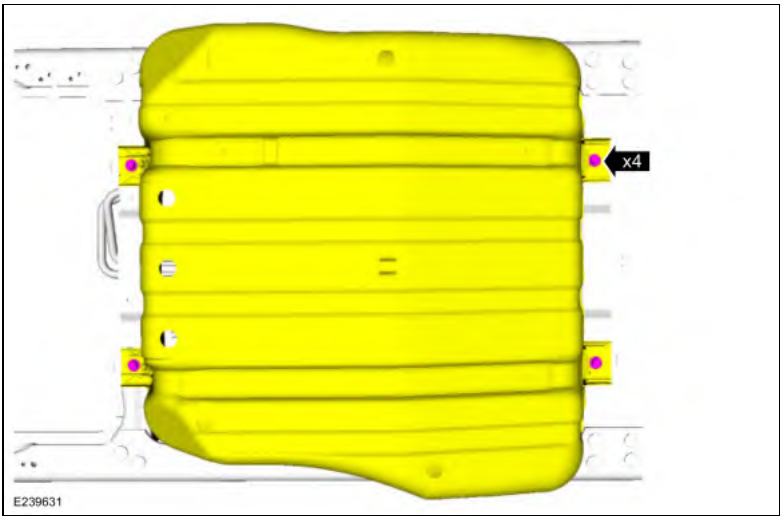

6. **NOTE:** *Typical application shown.*

Loosen the hose clamps and disconnect the fuel tank filler pipe and vent hose from the fuel tank. Remove the fuel tank filler pipe.

Torque: 44 lb.in (5 Nm)

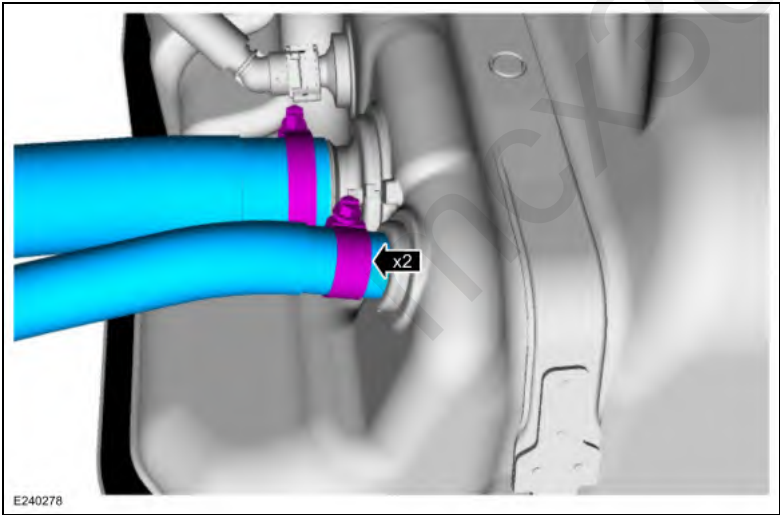

Installation

1. To install, reverse the removal procedure.

