


Fuel Level Sender


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the Fuel Pump and Sender Unit.
Refer to: Fuel Pump and Sender Unit (310-01B Fuel Tank and Lines - 6.7L Power Stroke Diesel, Removal and Installation).
2. Disconnect the electrical connector.

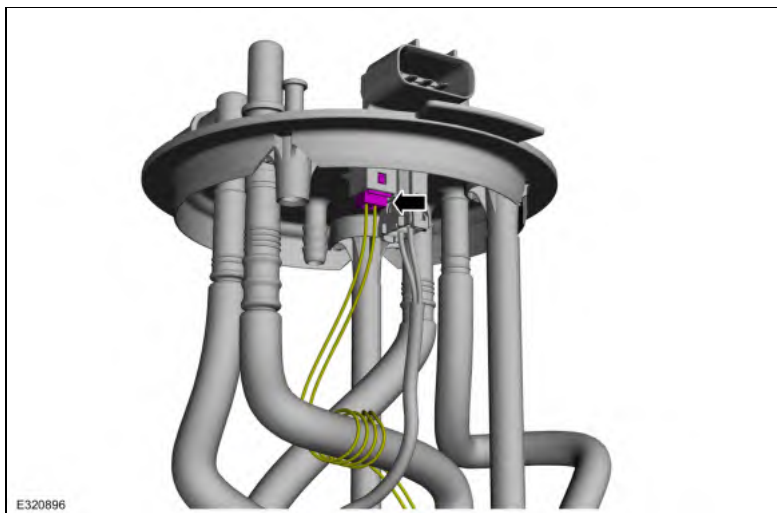

3.
 - Release the retainer tab.
 - Remove the Fuel Level Sender.

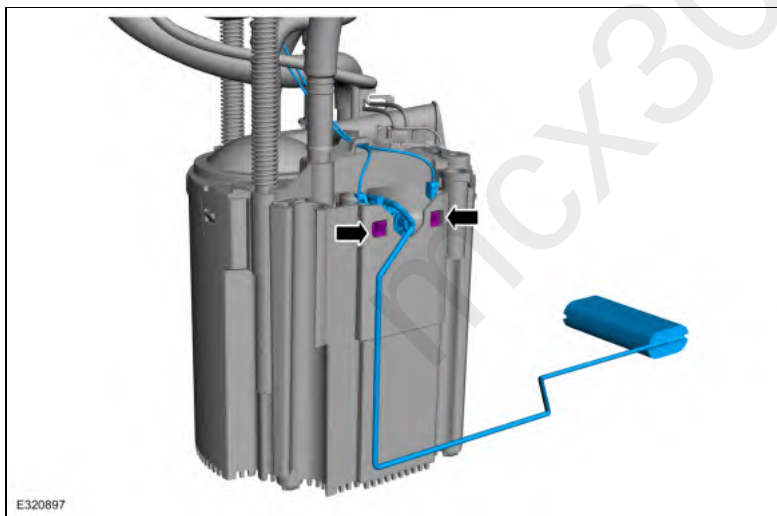

Installation

1. To install, reverse the removal procedure.

