


Fuel Level Sender

Removal

1. Remove the Fuel Pump and Sender Unit.
Refer to: Fuel Pump and Sender Unit (310-01A Fuel Tank and Lines - 6.2L V8, Removal and Installation).


2. **NOTE:** Typical application shown.

Disconnect the electrical connector.

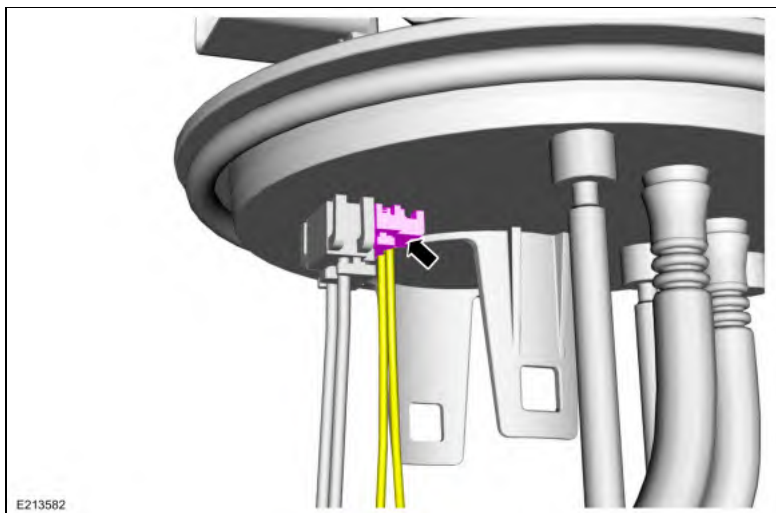

3. **NOTE:** Typical application shown.

- Release the retainer tab.
- Remove the Fuel Level Sender.

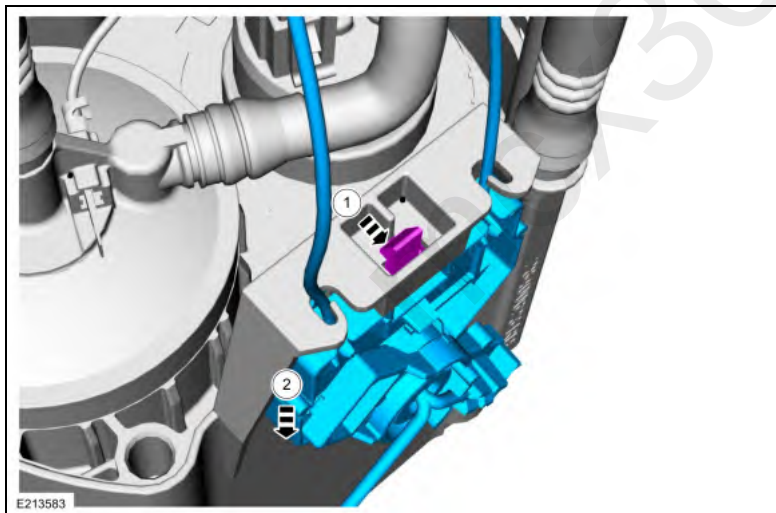

Installation

1. To install, reverse the removal procedure.

