

Fuel Lines - Vehicles With: Midship Fuel Tank

Removal

NOTE: Removal steps in this procedure may contain installation details.


All vehicles



WARNING: Do not smoke, carry lighted tobacco or have an open flame of any type when working on or near any fuel-related component. Highly flammable mixtures may be present and may be ignited. Failure to follow these instructions may result in serious personal injury.

1. Refer to: Gasoline and Gasoline-Ethanol Fuel Systems Health and Safety Precautions (100-00 General Information, Description and Operation).
2. Disconnect the battery ground cable.
Refer to: Battery Disconnect and Connect (414-01 Battery, Mounting and Cables, General Procedures).
3. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
4. Release the fuel system pressure.
Refer to: Fuel System Pressure Release (310-00A Fuel System - General Information - 6.2L V8, General Procedures).
5. **NOTE:** Wrap the fuel line connector with a shop towel to absorb any residual fuel pressure during the removal of the fuel line.

Disconnect the quick release coupling.
Refer to: Quick Release Coupling (310-00A) .

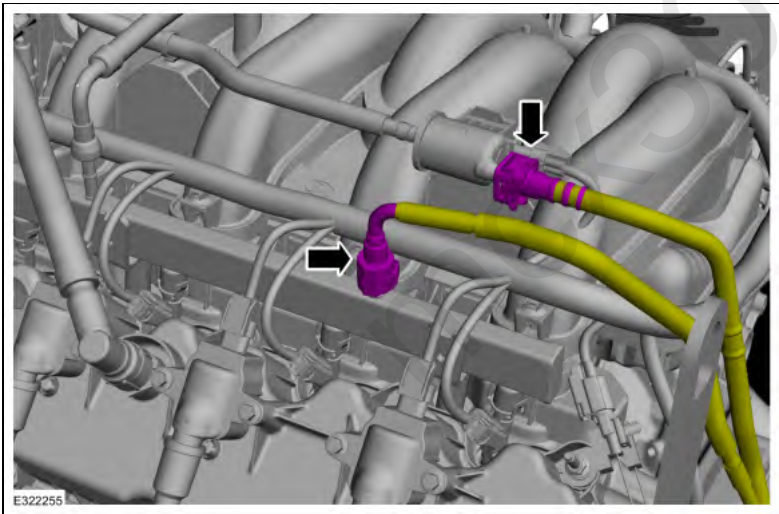

6. Remove the bolts.
Torque: 35 lb.ft (48 Nm)


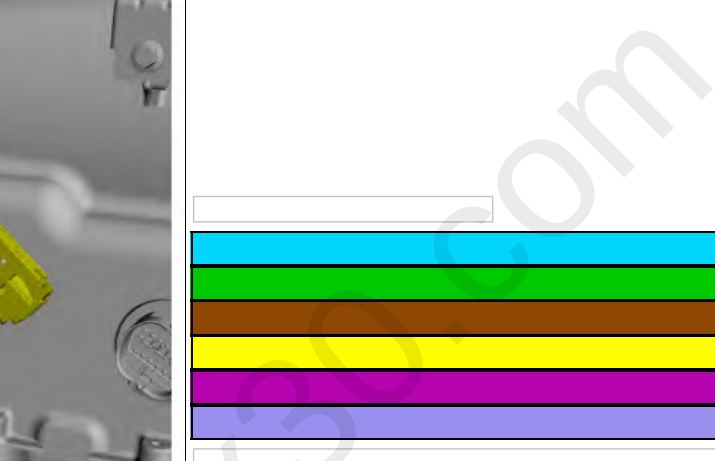



Diagram illustrating the assembly of a cable. The cable is shown with a yellow connector and a multi-colored body (blue, green, brown, yellow, purple, and light blue). The cable is positioned next to a component with a circular feature.

lt. Position the cable aside

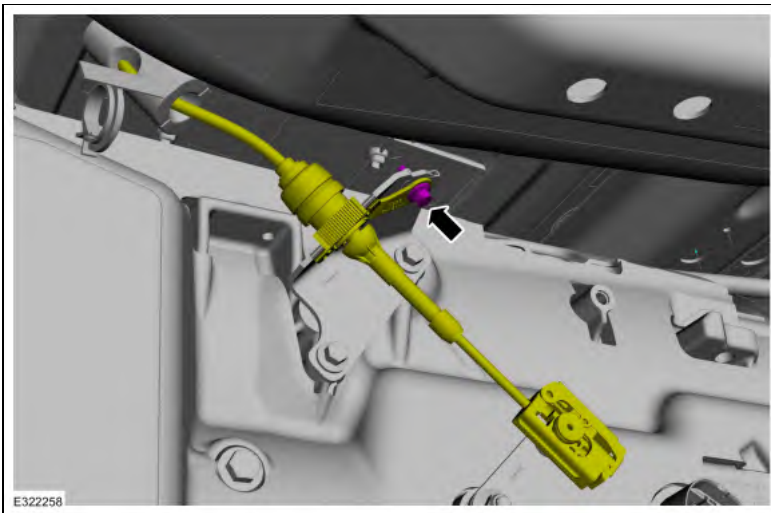

9. **NOTE:** Wrap the fuel line connector with a shop towel to absorb any residual fuel pressure during the removal of the fuel line.


- Disconnect the retainer from the transmission.
- Disconnect the quick release couplings and remove the fuel lines.
Refer to: Quick Release Coupling (310-00A) .

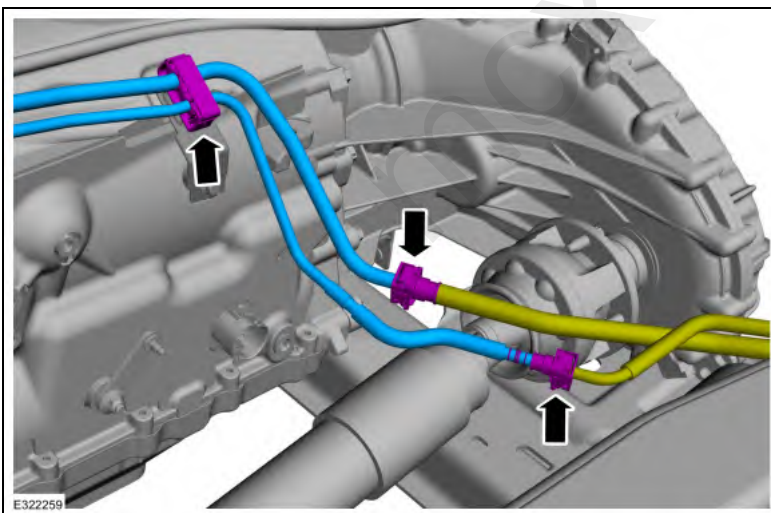

148 inch and 175 inch wheelbase

10. **NOTE:** Wrap the fuel line connector with a shop towel to absorb any residual fuel pressure during the removal of the fuel line.


Remove the fuel lines by detach the retainer clips and remove the quick connectors.
Refer to: Quick Release Coupling (310-00A) .

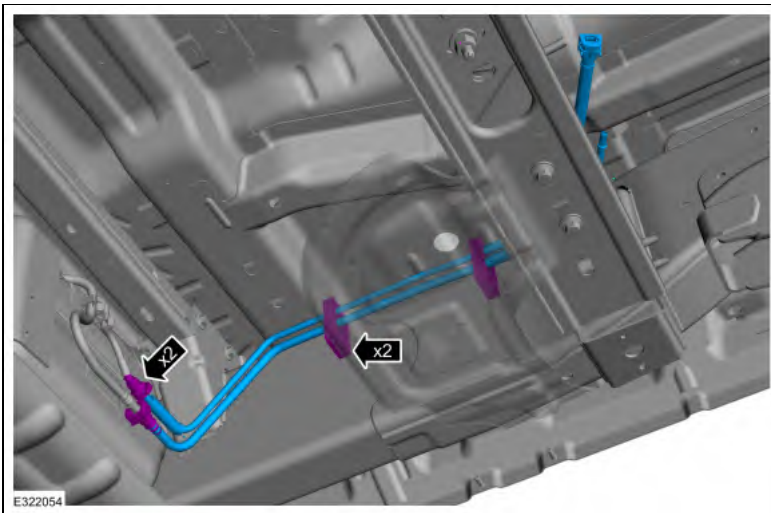

160 inch wheelbase

11. **NOTE:** *Wrap the fuel line connector with a shop towel to absorb any residual fuel pressure during the removal of the fuel line.*


Remove the fuel lines by detach the retainer clips and remove the quick connectors.
 Refer to: Quick Release Coupling (310-00A) .

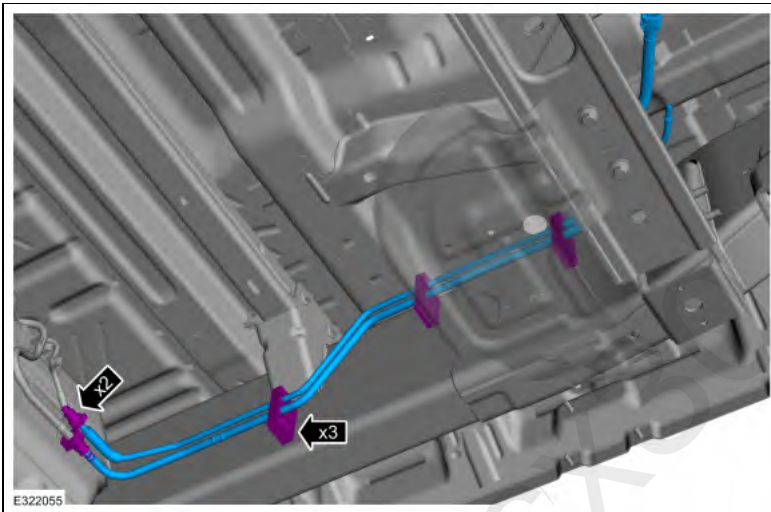

164 inch wheelbase


12. **NOTE:** *Wrap the fuel line connector with a shop towel to absorb any residual fuel pressure during the removal of the fuel line.*

Remove the fuel lines by detach the retainer clips and remove the quick connectors.
 Refer to: Quick Release Coupling (310-00A) .

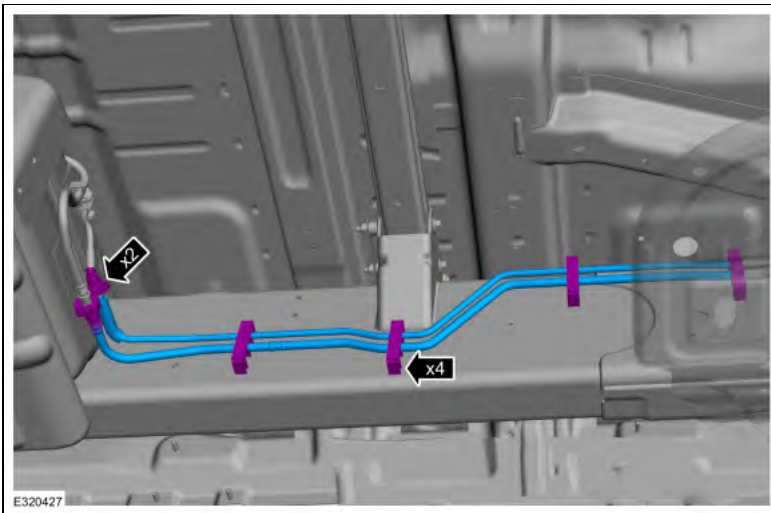

192 inch wheelbase

13. **NOTE:** *Wrap the fuel line connector with a shop towel to absorb any residual fuel pressure during the removal of the fuel line.*
 Remove the fuel lines by detach the retainer clips and remove the quick connectors.
 Refer to: Quick Release Coupling (310-00A) .

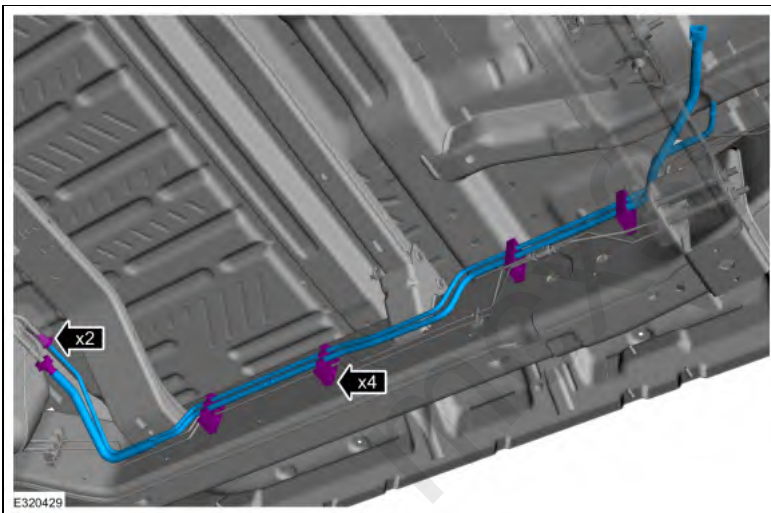

Installation

1. To install, reverse the removal procedure.