


Air Conditioning (A/C) Pressure Transducer

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Disconnect the A/C pressure transducer electrical connector and remove the A/C pressure transducer.
Torque: 71 lb.in (8 Nm)

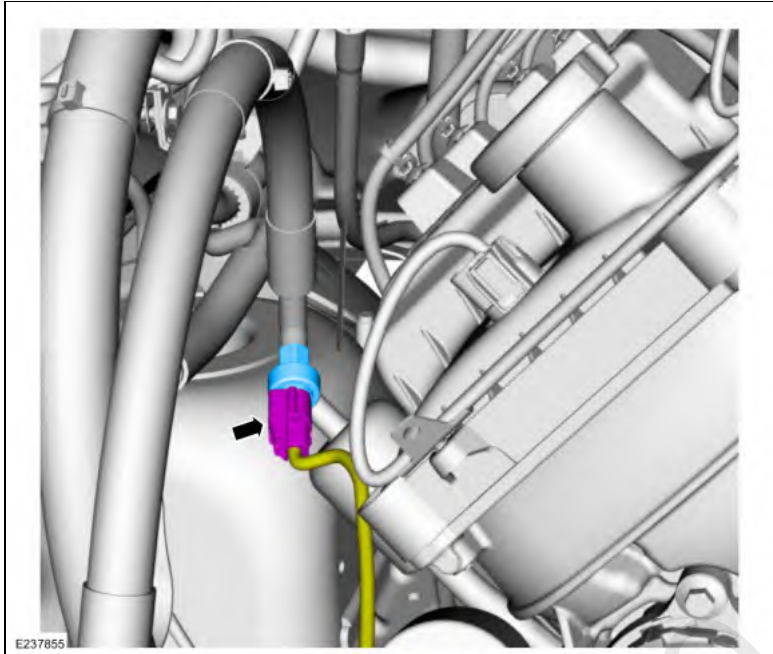

Installation

1. To install, reverse the removal procedure.