


Air Distribution Door Actuator

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Disconnect the air distribution door actuator electrical connector, remove the retainers and the air distribution door actuator.

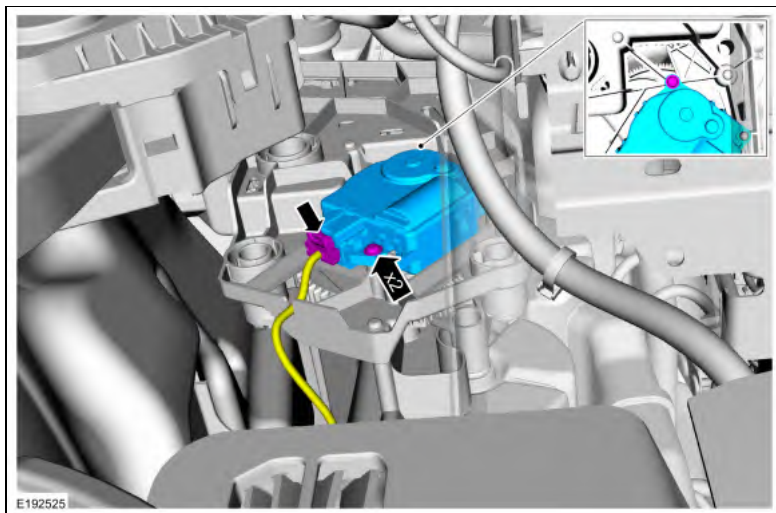

Installation

1. To install, reverse the removal procedure.