

Ambient Air Temperature Sensor


Special Tool(s) / General Equipment

Flat-Bladed Screwdriver

Removal

NOTE: Removal steps in this procedure may contain installation details.

1.
 - Using a suitable tool, pry and detach the ambient air temperature sensor bezel from the RH exterior mirror housing. Use the General Equipment: Flat-Bladed Screwdriver
 - Disconnect the ambient air temperature sensor electrical connector and remove the ambient air temperature sensor.

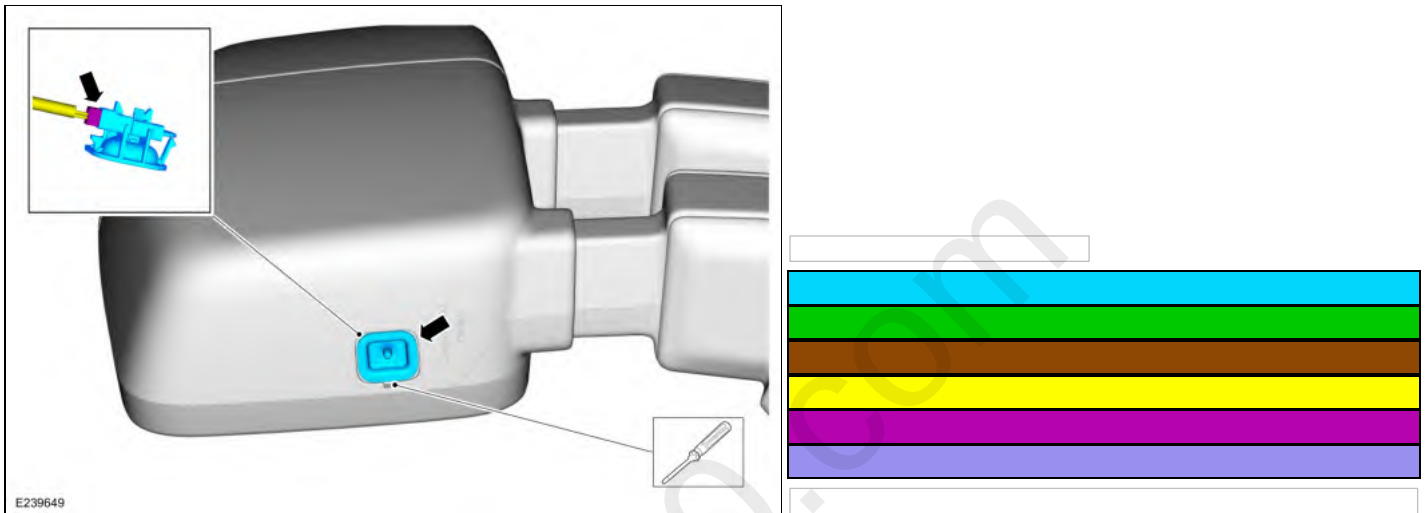

Installation

1. To install, reverse the removal procedure.
 - If replacing the ambient air temperature sensor a reset must be performed. Select the A/C and Recirc buttons simultaneously, then release both, within 2 seconds select A/C button again.