


Blower Motor Control Module

Removal

NOTE: The blower motor and the blower motor speed control is available only as part of the blower motor control module.

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the push pins and the RH insulation panel.
 - If equipped, disconnect the electrical connector.

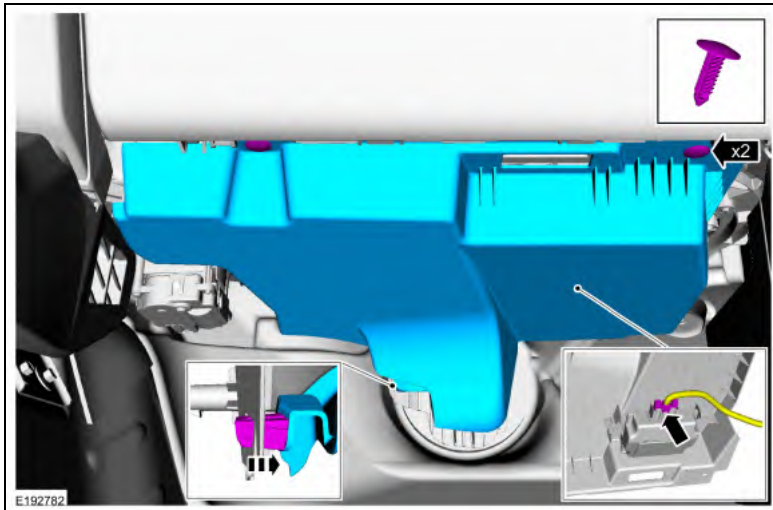


2. **NOTE:** If equipped

Remove the TCCM.

Refer to: Transfer Case Control Module (TCCM) (308-07A Four-Wheel Drive Systems, Removal and Installation).

3. Disconnect the electrical connector, remove the retainers and the blower control module.

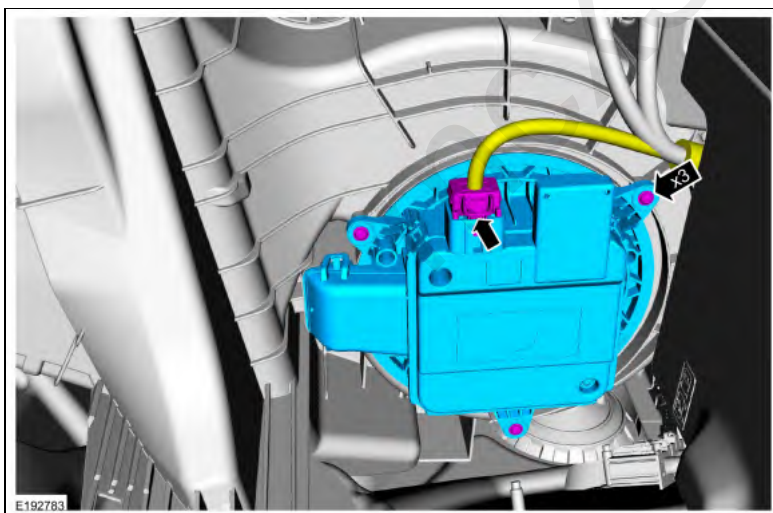

Installation

1. To install, reverse the removal procedure.

