


Driver Side Temperature Door Actuator

Removal


NOTE: Note the position of the components before removal.

1.
 1. Disconnect the electrical connector.
 2. Remove the retainers, the driver side temperature door actuator and the cam.

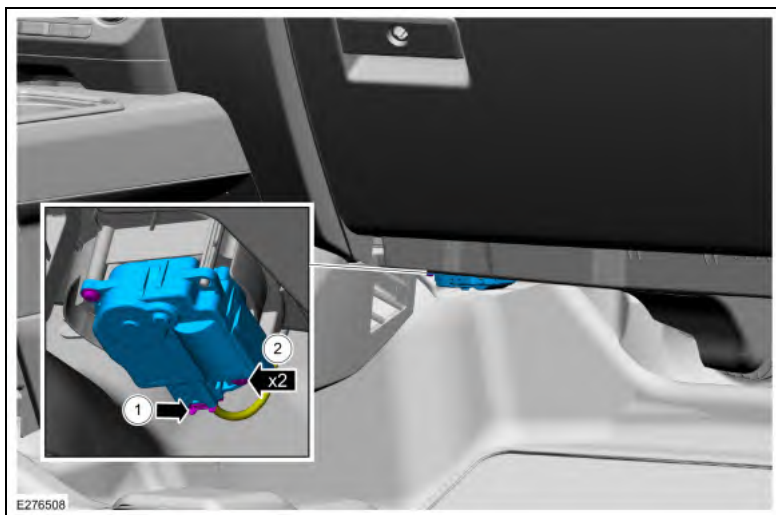

2. **NOTE:** This step is only necessary when installing a new component.

Remove the cam from the driver side temperature door actuator.

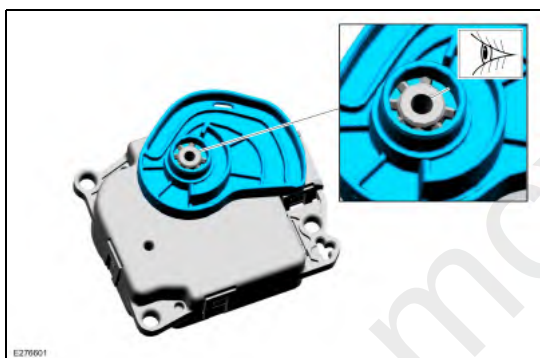


Installation

NOTE: Make sure that the components are installed to the position noted before removal.


1. **NOTE:** This step is only necessary when installing a new component.

Install and align the cam on the new driver side temperature door actuator.

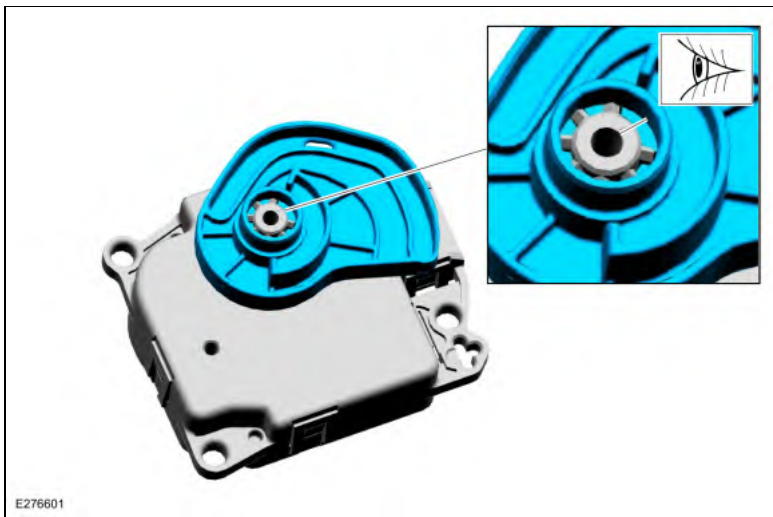

2.

1. Align the driver side temperature door actuator and cam to the temperature door.
2. Install the driver side temperature door actuator and cam on the climate control housing with the retainers.
3. Connect the electrical connector to the driver side temperature door actuator.

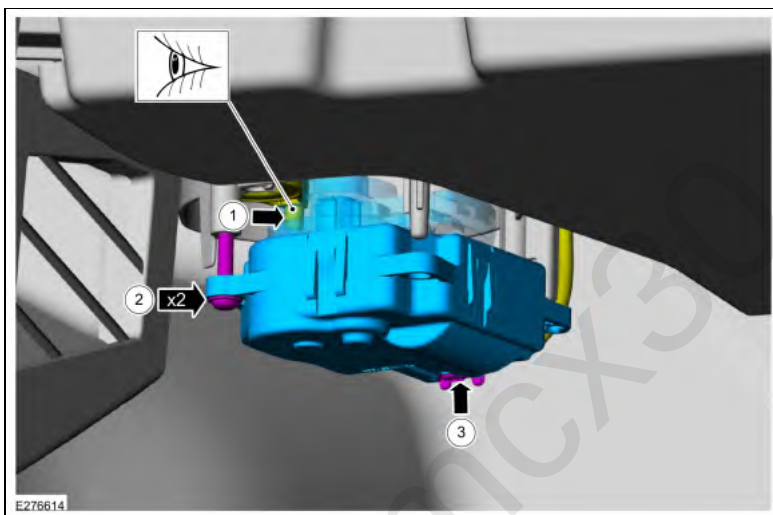

A horizontal bar chart consisting of six equally long bars stacked vertically. From top to bottom, the colors are cyan, green, brown, yellow, magenta, and light blue. Each bar has a thin black outline.