

Evaporator Temperature Sensor

Removal

1. **NOTE:** *The evaporator temperature sensor is available only as part of the climate control housing.*

Remove the climate control housing.

Refer to: Climate Control Housing (412-00 Climate Control System - General Information, Removal and Installation).

Installation

1. Transfer the components from the old housing to the new housing as needed.
 2. To install, reverse the removal procedure.
-